

Kanalliste RX-S / TX-S

Kanal	Frequenz/MHz	Hexwort	Binärwort	Dipschalter-Einstellung ( 0 = OFF ; 1 = ON )							
				1	2	3	4	5	6	7	8
1	433,0625	00	00000000	0	0	0	0	0	0	0	0
2	433,0750	01	00000001	0	0	0	0	0	0	0	1
3	433,0875	02	00000010	0	0	0	0	0	0	1	0
4	433,1000	03	00000011	0	0	0	0	0	0	1	1
5	433,1125	04	00000100	0	0	0	0	0	1	0	0
6	433,1250	05	00000101	0	0	0	0	0	1	0	1
7	433,1375	06	00000110	0	0	0	0	0	1	1	0
8	433,1500	07	00000111	0	0	0	0	0	1	1	1
9	433,1625	08	00001000	0	0	0	0	1	0	0	0
10	433,1750	09	00001001	0	0	0	0	1	0	0	1
11	433,1875	0A	00001010	0	0	0	0	1	0	1	0
12	433,2000	0B	00001011	0	0	0	0	1	0	1	1
13	433,2125	0C	00001100	0	0	0	0	1	1	0	0
14	433,2250	0D	00001101	0	0	0	0	1	1	0	1
15	433,2375	0E	00001110	0	0	0	0	1	1	1	0
16	433,2500	0F	00001111	0	0	0	0	1	1	1	1
17	433,2625	10	00010000	0	0	0	1	0	0	0	0
18	433,2750	11	00010001	0	0	0	1	0	0	0	1
19	433,2875	12	00010010	0	0	0	1	0	0	1	0
20	433,3000	13	00010011	0	0	0	1	0	0	1	1
21	433,3125	14	00010100	0	0	0	1	0	1	0	0
22	433,3250	15	00010101	0	0	0	1	0	1	0	1
23	433,3375	16	00010110	0	0	0	1	0	1	1	0
24	433,3500	17	00010111	0	0	0	1	0	1	1	1
25	433,3625	18	00011000	0	0	0	1	1	0	0	0
26	433,3750	19	00011001	0	0	0	1	1	0	0	1
27	433,3875	1A	00011010	0	0	0	1	1	0	1	0
28	433,4000	1B	00011011	0	0	0	1	1	0	1	1
29	433,4125	1C	00011100	0	0	0	1	1	1	0	0
30	433,4250	1D	00011101	0	0	0	1	1	1	0	1
31	433,4375	1E	00011110	0	0	0	1	1	1	1	0
32	433,4500	1F	00011111	0	0	0	1	1	1	1	1
33	433,4625	20	00100000	0	0	1	0	0	0	0	0
34	433,4750	21	00100001	0	0	1	0	0	0	0	1
35	433,4875	22	00100010	0	0	1	0	0	0	1	0
36	433,5000	23	00100011	0	0	1	0	0	0	1	1
37	433,5125	24	00100100	0	0	1	0	0	1	0	0
38	433,5250	25	00100101	0	0	1	0	0	1	0	1
39	433,5375	26	00100110	0	0	1	0	0	1	1	0
40	433,5500	27	00100111	0	0	1	0	0	1	1	1
41	433,5625	28	00101000	0	0	1	0	1	0	0	0
42	433,5750	29	00101001	0	0	1	0	1	0	0	1
43	433,5875	2A	00101010	0	0	1	0	1	0	1	0
44	433,6000	2B	00101011	0	0	1	0	1	0	1	1
45	433,6125	2C	00101100	0	0	1	0	1	1	0	0
46	433,6250	2D	00101101	0	0	1	0	1	1	0	1
47	433,6375	2E	00101110	0	0	1	0	1	1	1	0
48	433,6500	2F	00101111	0	0	1	0	1	1	1	1
49	433,6625	30	00110000	0	0	1	1	0	0	0	0
50	433,6750	31	00110001	0	0	1	1	0	0	0	1
51	433,6875	32	00110010	0	0	1	1	0	0	1	0
52	433,7000	33	00110011	0	0	1	1	0	0	1	1

Kanalliste RX-S / TX-S

Kanal	Frequenz/MHz	Hexwort	Binärwort	Dipschalter-Einstellung ( 0 = OFF ; 1 = ON )							
				1	2	3	4	5	6	7	8
53	433,7125	34	00110100	0	0	1	1	0	1	0	0
54	433,7250	35	00110101	0	0	1	1	0	1	0	1
55	433,7375	36	00110110	0	0	1	1	0	1	1	0
56	433,7500	37	00110111	0	0	1	1	0	1	1	1
57	433,7625	38	00111000	0	0	1	1	1	0	0	0
58	433,7750	39	00111001	0	0	1	1	1	0	0	1
59	433,7875	3A	00111010	0	0	1	1	1	0	1	0
60	433,8000	3B	00111011	0	0	1	1	1	0	1	1
61	433,8125	3C	00111100	0	0	1	1	1	1	0	0
62	433,8250	3D	00111101	0	0	1	1	1	1	0	1
63	433,8375	3E	00111110	0	0	1	1	1	1	1	0
64	433,8500	3F	00111111	0	0	1	1	1	1	1	1
65	433,8625	40	01000000	0	1	0	0	0	0	0	0
66	433,8750	41	01000001	0	1	0	0	0	0	0	1
67	433,8875	42	01000010	0	1	0	0	0	0	1	0
68	433,9000	43	01000011	0	1	0	0	0	0	1	1
69	433,9125	44	01000100	0	1	0	0	0	1	0	0
70	433,9250	45	01000101	0	1	0	0	0	1	0	1
71	433,9375	46	01000110	0	1	0	0	0	1	1	0
72	433,9500	47	01000111	0	1	0	0	0	1	1	1
73	433,9625	48	01001000	0	1	0	0	1	0	0	0
74	433,9750	49	01001001	0	1	0	0	1	0	0	1
75	433,9875	4A	01001010	0	1	0	0	1	0	1	0
76	434,0000	4B	01001011	0	1	0	0	1	0	1	1
77	434,0125	4C	01001100	0	1	0	0	1	1	0	0
78	434,0250	4D	01001101	0	1	0	0	1	1	0	1
79	434,0375	4E	01001110	0	1	0	0	1	1	1	0
80	434,0500	4F	01001111	0	1	0	0	1	1	1	1
81	434,0625	50	01010000	0	1	0	1	0	0	0	0
82	434,0750	51	01010001	0	1	0	1	0	0	0	1
83	434,0875	52	01010010	0	1	0	1	0	0	1	0
84	434,1000	53	01010011	0	1	0	1	0	0	1	1
85	434,1125	54	01010100	0	1	0	1	0	1	0	0
86	434,1250	55	01010101	0	1	0	1	0	1	0	1
87	434,1375	56	01010110	0	1	0	1	0	1	1	0
88	434,1500	57	01010111	0	1	0	1	0	1	1	1
89	434,1625	58	01011000	0	1	0	1	1	0	0	0
90	434,1750	59	01011001	0	1	0	1	1	0	0	1
91	434,1875	5A	01011010	0	1	0	1	1	0	1	0
92	434,2000	5B	01011011	0	1	0	1	1	0	1	1
93	434,2125	5C	01011100	0	1	0	1	1	1	0	0
94	434,2250	5D	01011101	0	1	0	1	1	1	0	1
95	434,2375	5E	01011110	0	1	0	1	1	1	1	0
96	434,2500	5F	01011111	0	1	0	1	1	1	1	1
97	434,2625	60	01100000	0	1	1	0	0	0	0	0
98	434,2750	61	01100001	0	1	1	0	0	0	0	1
99	434,2875	62	01100010	0	1	1	0	0	0	1	0
100	434,3000	63	01100011	0	1	1	0	0	0	1	1
101	434,3125	64	01100100	0	1	1	0	0	1	0	0
102	434,3250	65	01100101	0	1	1	0	0	1	0	1
103	434,3375	66	01100110	0	1	1	0	0	1	1	0
104	434,3500	67	01100111	0	1	1	0	0	1	1	1

Kanalliste RX-S / TX-S

Kanal	Frequenz/MHz	Hexwort	Binärwort	Dipschalter-Einstellung ( 0 = OFF ; 1 = ON )							
				1	2	3	4	5	6	7	8
105	434,3625	68	01101000	0	1	1	0	1	0	0	0
106	434,3750	69	01101001	0	1	1	0	1	0	0	1
107	434,3875	6A	01101010	0	1	1	0	1	0	1	0
108	434,4000	6B	01101011	0	1	1	0	1	0	1	1
109	434,4125	6C	01101100	0	1	1	0	1	1	0	0
110	434,4250	6D	01101101	0	1	1	0	1	1	0	1
111	434,4375	6E	01101110	0	1	1	0	1	1	1	0
112	434,4500	6F	01101111	0	1	1	0	1	1	1	1
113	434,4625	70	01110000	0	1	1	1	0	0	0	0
114	434,4750	71	01110001	0	1	1	1	0	0	0	1
115	434,4875	72	01110010	0	1	1	1	0	0	1	0
116	434,5000	73	01110011	0	1	1	1	0	0	1	1
117	434,5125	74	01110100	0	1	1	1	0	1	0	0
118	434,5250	75	01110101	0	1	1	1	0	1	0	1
119	434,5375	76	01110110	0	1	1	1	0	1	1	0
120	434,5500	77	01110111	0	1	1	1	0	1	1	1
121	434,5625	78	01111000	0	1	1	1	1	0	0	0
122	434,5750	79	01111001	0	1	1	1	1	0	0	1
123	434,5875	7A	01111010	0	1	1	1	1	0	1	0
124	434,6000	7B	01111011	0	1	1	1	1	0	1	1
125	434,6125	7C	01111100	0	1	1	1	1	1	0	0
126	434,6250	7D	01111101	0	1	1	1	1	1	0	1
127	434,6375	7E	01111110	0	1	1	1	1	1	1	0
128	434,6500	7F	01111111	0	1	1	1	1	1	1	1
129	434,6625	80	10000000	1	0	0	0	0	0	0	0
130	434,6750	81	10000001	1	0	0	0	0	0	0	1
131	434,6875	82	10000010	1	0	0	0	0	0	1	0
132	434,7000	83	10000011	1	0	0	0	0	0	1	1
133	434,7125	84	10000100	1	0	0	0	0	1	0	0
134	434,7250	85	10000101	1	0	0	0	0	1	0	1
135	434,7375	86	10000110	1	0	0	0	0	1	1	0
136	434,7500	87	10000111	1	0	0	0	0	1	1	1
137	434,7625	88	10001000	1	0	0	0	1	0	0	0
138	434,7750	89	10001001	1	0	0	0	1	0	0	1
139	434,7875	8A	10001010	1	0	0	0	1	0	1	0
140	434,7875	8B	10001011	1	0	0	0	1	0	1	1
141	434,7875	8C	10001100	1	0	0	0	1	1	0	0
142	434,7875	8D	10001101	1	0	0	0	1	1	0	1
143	434,7875	8E	10001110	1	0	0	0	1	1	1	0
144	434,7875	8F	10001111	1	0	0	0	1	1	1	1
145	434,7875	90	10010000	1	0	0	1	0	0	0	0
146	434,7875	91	10010001	1	0	0	1	0	0	0	1
147	434,7875	92	10010010	1	0	0	1	0	0	1	0
148	434,7875	93	10010011	1	0	0	1	0	0	1	1
149	434,7875	94	10010100	1	0	0	1	0	1	0	0
150	434,7875	95	10010101	1	0	0	1	0	1	0	1
151	434,7875	96	10010110	1	0	0	1	0	1	1	0
152	434,7875	97	10010111	1	0	0	1	0	1	1	1
153	434,7875	98	10011000	1	0	0	1	1	0	0	0
154	434,7875	99	10011001	1	0	0	1	1	0	0	1
155	434,7875	9A	10011010	1	0	0	1	1	0	1	0
156	434,7875	9B	10011011	1	0	0	1	1	0	1	1

Kanalliste RX-S / TX-S

Kanal	Frequenz/MHz	Hexwort	Binärwort	Dipschalter-Einstellung ( 0 = OFF ; 1 = ON )							
				1	2	3	4	5	6	7	8
157	434,7875	9C	10011100	1	0	0	1	1	1	0	0
158	434,7875	9D	10011101	1	0	0	1	1	1	0	1
159	434,7875	9E	10011110	1	0	0	1	1	1	1	0
160	434,7875	9F	10011111	1	0	0	1	1	1	1	1
161	434,7875	A0	10100000	1	0	1	0	0	0	0	0
162	434,7875	A1	10100001	1	0	1	0	0	0	0	1
163	434,7875	A2	10100010	1	0	1	0	0	0	1	0
164	434,7875	A3	10100011	1	0	1	0	0	0	1	1
165	434,7875	A4	10100100	1	0	1	0	0	1	0	0
166	434,7875	A5	10100101	1	0	1	0	0	1	0	1
167	434,7875	A6	10100110	1	0	1	0	0	1	1	0
168	434,7875	A7	10100111	1	0	1	0	0	1	1	1
169	434,7875	A8	10101000	1	0	1	0	1	0	0	0
170	434,7875	A9	10101001	1	0	1	0	1	0	0	1
171	434,7875	AA	10101010	1	0	1	0	1	0	1	0
172	434,7875	AB	10101011	1	0	1	0	1	0	1	1
173	434,7875	AC	10101100	1	0	1	0	1	1	0	0
174	434,7875	AD	10101101	1	0	1	0	1	1	0	1
175	434,7875	AE	10101110	1	0	1	0	1	1	1	0
176	434,7875	AF	10101111	1	0	1	0	1	1	1	1
177	434,7875	B0	10110000	1	0	1	1	0	0	0	0
178	434,7875	B1	10110001	1	0	1	1	0	0	0	1
179	434,7875	B2	10110010	1	0	1	1	0	0	1	0
180	434,7875	B3	10110011	1	0	1	1	0	0	1	1
181	434,7875	B4	10110100	1	0	1	1	0	1	0	0
182	434,7875	B5	10110101	1	0	1	1	0	1	0	1
183	434,7875	B6	10110110	1	0	1	1	0	1	1	0
184	434,7875	B7	10110111	1	0	1	1	0	1	1	1
185	434,7875	B8	10111000	1	0	1	1	1	0	0	0
186	434,7875	B9	10111001	1	0	1	1	1	0	0	1
187	434,7875	BA	10111010	1	0	1	1	1	0	1	0
188	434,7875	BB	10111011	1	0	1	1	1	0	1	1
189	434,7875	BC	10111100	1	0	1	1	1	1	0	0
190	434,7875	BD	10111101	1	0	1	1	1	1	0	1
191	434,7875	BE	10111110	1	0	1	1	1	1	1	0
192	434,7875	BF	10111111	1	0	1	1	1	1	1	1
193	434,7875	C0	11000000	1	1	0	0	0	0	0	0
194	434,7875	C1	11000001	1	1	0	0	0	0	0	1
195	434,7875	C2	11000010	1	1	0	0	0	0	1	0
196	434,7875	C3	11000011	1	1	0	0	0	0	1	1
197	434,7875	C4	11000100	1	1	0	0	0	1	0	0
198	434,7875	C5	11000101	1	1	0	0	0	1	0	1
199	434,7875	C6	11000110	1	1	0	0	0	1	1	0
200	434,7875	C7	11000111	1	1	0	0	0	1	1	1
201	434,7875	C8	11001000	1	1	0	0	1	0	0	0
202	434,7875	C9	11001001	1	1	0	0	1	0	0	1
203	434,7875	CA	11001010	1	1	0	0	1	0	1	0
204	434,7875	CB	11001011	1	1	0	0	1	0	1	1
205	434,7875	CC	11001100	1	1	0	0	1	1	0	0
206	434,7875	CD	11001101	1	1	0	0	1	1	0	1
207	434,7875	CE	11001110	1	1	0	0	1	1	1	0
208	434,7875	CF	11001111	1	1	0	0	1	1	1	1

Kanalliste RX-S / TX-S

Kanal	Frequenz/MHz	Hexwort	Binärwort	Dipschalter-Einstellung ( 0 = OFF ; 1 = ON )							
				1	2	3	4	5	6	7	8
209	434,7875	D0	11010000	1	1	0	1	0	0	0	0
210	434,7875	D1	11010001	1	1	0	1	0	0	0	1
211	434,7875	D2	11010010	1	1	0	1	0	0	1	0
212	434,7875	D3	11010011	1	1	0	1	0	0	1	1
213	434,7875	D4	11010100	1	1	0	1	0	1	0	0
214	434,7875	D5	11010101	1	1	0	1	0	1	0	1
215	434,7875	D6	11010110	1	1	0	1	0	1	1	0
216	434,7875	D7	11010111	1	1	0	1	0	1	1	1
217	434,7875	D8	11011000	1	1	0	1	1	0	0	0
218	434,7875	D9	11011001	1	1	0	1	1	0	0	1
219	434,7875	DA	10011010	1	1	0	1	1	0	1	0
220	434,7875	DB	11011011	1	1	0	1	1	0	1	1
221	434,7875	DC	11011100	1	1	0	1	1	1	0	0
222	434,7875	DD	11011101	1	1	0	1	1	1	0	1
223	434,7875	DE	11011110	1	1	0	1	1	1	1	0
224	434,7875	DF	11011111	1	1	0	1	1	1	1	1
225	434,7875	E0	11100000	1	1	1	0	0	0	0	0
226	434,7875	E1	11100001	1	1	1	0	0	0	0	1
227	434,7875	E2	11100010	1	1	1	0	0	0	1	0
228	434,7875	E3	11100011	1	1	1	0	0	0	1	1
229	434,7875	E4	11100100	1	1	1	0	0	1	0	0
230	434,7875	E5	11100101	1	1	1	0	0	1	0	1
231	434,7875	E6	11100110	1	1	1	0	0	1	1	0
232	434,7875	E7	11100111	1	1	1	0	0	1	1	1
233	434,7875	E8	11101000	1	1	1	0	1	0	0	0
234	434,7875	E9	11101001	1	1	1	0	1	0	0	1
235	434,7875	EA	11101010	1	1	1	0	1	0	1	0
236	434,7875	EB	11101011	1	1	1	0	1	0	1	1
237	434,7875	EC	11101100	1	1	1	0	1	1	0	0
238	434,7875	ED	11101101	1	1	1	0	1	1	0	1
239	434,7875	EE	11101110	1	1	1	0	1	1	1	0
240	434,7875	EF	11101111	1	1	1	0	1	1	1	1
241	434,7875	F0	11110000	1	1	1	1	0	0	0	0
242	434,7875	F1	11110001	1	1	1	1	0	0	0	1
243	434,7875	F2	11110010	1	1	1	1	0	0	1	0
244	434,7875	F3	11110011	1	1	1	1	0	0	1	1
245	434,7875	F4	11110100	1	1	1	1	0	1	0	0
246	434,7875	F5	11110101	1	1	1	1	0	1	0	1
247	434,7875	F6	11110110	1	1	1	1	0	1	1	0
248	434,7875	F7	11110111	1	1	1	1	0	1	1	1
249	434,7875	F8	11111000	1	1	1	1	1	0	0	0
250	434,7875	F9	11111001	1	1	1	1	1	0	0	1
251	434,7875	FA	11111010	1	1	1	1	1	0	1	0
252	434,7875	FB	11111011	1	1	1	1	1	0	1	1
253	434,7875	FC	11111100	1	1	1	1	1	1	0	0
254	434,7875	FD	11111101	1	1	1	1	1	1	0	1
255	434,7875	FE	11111110	1	1	1	1	1	1	1	0
256	434,7875	FF	11111111	1	1	1	1	1	1	1	1