

| J. DOSHER LIST OF OTHER MANUALS 18th August 2019 - to order email: jdosher@blueyonder.co.uk |                      |                                                   | PAGES | FILE |
|---------------------------------------------------------------------------------------------|----------------------|---------------------------------------------------|-------|------|
| MAKE                                                                                        | MODEL                | DESCRIPTION                                       |       |      |
| A/S S.P. RADIO                                                                              | SAILOR T128          | SSB TRANSMITTER INSTRUCTION BOOK                  | 94    | Y    |
| A/S S.P. RADIO                                                                              | RT2047/D             | VHF MARINE TRANSCEIVER INSTRUCTION MANUAL         | 131   | Y    |
| A/S S.P. RADIO                                                                              | RT2048/D             | VHF MARINE TRANSCEIVER TECHNICAL MANUAL           | 94    | Y    |
| ADMIRALTY                                                                                   | B40                  | RECEIVER SERVICE MANUAL                           | 355   | Y    |
| ADMIRALTY                                                                                   | B29                  | RECEIVER INSTRUCTION MANUAL                       | 35    | Y    |
| ADRET                                                                                       | 2230A                | LEVEL GENERATOR OPERATING & SERVICE MANUAL        | 168   | Y    |
| ADRET                                                                                       | 2230A                | LEVEL GENERATOR OPERATING (FRENCH)                | 68    | Y    |
| ADRET                                                                                       | 6300C                | GENERATOR SYNTHESIZER INSTRUCTION MANUAL          | 163   | Y    |
| ADRET                                                                                       | 7100A                | SIGNAL GENERATOR INSTRUCTION MANUAL               | 113   | Y    |
| ADRET                                                                                       | 7100D                | SIGNAL GENERATOR USER MANUAL (FRENCH)             | 112   | Y    |
| ADRET                                                                                       | 7200A                | SIGNAL GENERATOR MAINTENANCE MANUAL               | 125   | Y    |
| ADRET                                                                                       | 730A                 | SIGNAL GENERATOR USER MANUAL (FRENCH)             | 42    | Y    |
| ADRET                                                                                       | 730A                 | SIGNAL GENERATOR MAINTENANCE HANDBOOK PART 1      | 55    | Y    |
| ADRET                                                                                       | 730A                 | SIGNAL GENERATOR MAINTENANCE HANDBOOK PART 2      | 111   | Y    |
| ADRET                                                                                       | 740A                 | SIGNAL GENERATOR OPERATING INSTRUCTIONS (ENGLISH) | 58    | Y    |
| ADRET                                                                                       | 742B                 | SIGNAL GENERATOR OPERATING MANUAL                 | 72    | Y    |
| ADVANCE                                                                                     | E2                   | SIGNAL GENERATOR INSTRUCTIONS                     | 8     | Y    |
| ADVANCE                                                                                     | EBC1/2               | BATCH COUNTER INSTRUCTION MANUAL                  |       |      |
| ADVANCE                                                                                     | J1                   | SIGNAL GENERATOR INSTRUCTIONS                     | 5     | Y    |
| ADVANCE                                                                                     | OFS1B                | OFF AIR FREQUENCY STANDARD INSTRUCTION MANUAL     | 20    | Y    |
| ADVANCE                                                                                     | PMD18-1              | MODULAR STAB. POWER SUPPLY OPERATING              | 21    | Y    |
| ADVANCE                                                                                     | SG62B                | SIGNAL GENERATOR INSTRUCTIONS                     | 15    | Y    |
| ADVANCE                                                                                     | SG66                 | SIGNAL GENERATOR INSTRUCTIONS                     | 12    | Y    |
| ADVANCE                                                                                     | SG67A                | WIDE RANGE OSCILLATOR INSTRUCTION MANUAL          | 24    | Y    |
| ADVANTEST                                                                                   | R3131                | SPECTRUM ANALYZER OPERATION MANUAL                | 255   | Y    |
| ADVANTEST                                                                                   | R3261/3361           | SPECTRUM ANALYSER INSTRUCTION MANUAL              | 371   | Y    |
| ADVANTEST                                                                                   | R3261/3361           | SPECTRUM ANALYSER MAINTENANCE MANUAL              | 550   | Y    |
| ADVANTEST                                                                                   | R3265/3271           | SPECTRUM ANALYSER INSTRUCTION MANUAL              | 320   | Y    |
| ADVANTEST                                                                                   | R3265/3271           | SPECTRUM ANALYSER OPT 15 PROG GUIDE               | 365   | Y    |
| ADVANTEST                                                                                   | R3265A/3271A         | SPECTRUM ANALYZER INSTRUCTION MANUAL              | 613   | Y    |
| ADVANTEST                                                                                   | R3265A/3271A         | SPECTRUM ANALYZER CONTROLLER FUNCTION GUIDE       | 368   | Y    |
| ADVANTEST                                                                                   | R3265A/3271A         | SPECTRUM ANALYZER MAINTENANCE VOLUME 1            | 466   | Y    |
| ADVANTEST                                                                                   | R3265A/3271A         | SPECTRUM ANALYZER MAINTENANCE VOLUME 2            | 339   | Y    |
| ADVANTEST                                                                                   | R3265A/3271A         | SPECTRUM ANALYZER MAINTENANCE VOLUME 3            | 250   | Y    |
| ADVANTEST                                                                                   | R3267/73             | SPECTRUM ANALYZER OPERATION MANUAL                | 375   | Y    |
| ADVANTEST                                                                                   | R3465 SERIES         | MODULATION SPECTRUM ANALYZER OPERATION MANUAL     | 478   | y    |
| ADVANTEST                                                                                   | R3465/3272/3263      | SPECTRUM ANALYZER PROGRAMMING MANUAL              | 181   | Y    |
| ADVANTEST                                                                                   | R3751_61_62_63_A_B   | GPIB PROGRAMMING MANUAL                           | 290   | Y    |
| ADVANTEST                                                                                   | R3752/53/64/65/66/67 | NETWORK ANALYZER PROGRAMMING GUIDE                | 223   | Y    |
| ADVANTEST                                                                                   | R3764/65/66/67       | NETWORK ANALYZER PROGRAMMING MANUAL               | 511   | Y    |
| ADVANTEST                                                                                   | R3765AH/67AH         | NETWORK ANALYZER OPERATING MANUAL                 | 306   | Y    |
| ADVANTEST                                                                                   | R3765A/67A           | NETWORK ANALYZER OPERATING MANUAL                 | 356   | Y    |
| ADVANTEST                                                                                   | R4131                | SPECTRUM ANALYSER INSTRUCTION MANUAL              | 368   | Y    |
| ADVANTEST                                                                                   | R4944A               | EPROM PROGRAMMER INSTRUCTION MANUAL               | 286   | Y    |
| ADVANTEST                                                                                   | TR14101              | 900MHZ REJECT FILTER INSTRUCTION MANUAL           | 7     | Y    |
| ADVANTEST                                                                                   | TR4132/4132N         | SPECTRUM ANALYSER INSTRUCTION MANUAL              | 244   | Y    |
| ADVANTEST                                                                                   | TR5821/22/23/23H     | UNIVERSAL COUNTER OPERATING MANUAL                | 100   | Y    |
| AEA                                                                                         | ISOLOOP 10-30        | HF LOOP ANTENNA OPERATING MANUAL                  | 18    | Y    |
| AEA                                                                                         | PK12                 | TNC OPERATING MANUAL                              | 135   | Y    |
| AEA                                                                                         | PK-96                | TNC OPERATING MANUAL                              | 172   | Y    |
| AEL                                                                                         | 2240                 | HF SSB TRANSCEIVER TECHNICAL MANUAL               |       |      |
| AEL                                                                                         | 3030                 | HF SSB TRANSCEIVER TECHNICAL MANUAL               | 41    | Y    |
| AEL                                                                                         | 3030                 | HF SSB TRANSCEIVER TECHNICAL MANUAL (FRENCH)      | 43    | Y    |
| AFL                                                                                         | BDP-143/152          | BAND PASS DUPLEXER HANDBOOK                       | 9     | Y    |
| AFL                                                                                         | D6                   | RX SPLITTER AMP SERVICE MANUAL                    | 27    | Y    |
| AILTECH                                                                                     | 74A                  | AUTOMATIC NOISE FIGURE INDICATOR INSTRUCTION      |       |      |
| AILTECH                                                                                     | 75                   | PANFI INSTRUCTION MANUAL                          |       |      |
| AILTECH                                                                                     | 125A                 | POWER SIGNAL SOURCE OPERATION & MAINTENANCE       |       |      |
| AILTECH                                                                                     | 136                  | PRECISION TEST RECEIVER INSTRUCTION MANUAL        | 112   | Y    |
| AILTECH                                                                                     | 445 / 446            | POWER SIGNAL SOURCES OPERATION & MAINTENANCE      | 142   | Y    |
| AILTECH                                                                                     | 460                  | SIGNAL GENERATOR OPERATION & MAINTENANCE          | 283   | Y    |
| AILTECH                                                                                     | 707                  | SPECTRUM ANALYSER CALIBRATION                     | 45    | Y    |
| AILTECH                                                                                     | 707                  | SPECTRUM ANALYSER OPERATING                       | 37    | Y    |
| AILTECH                                                                                     | 707                  | SPECTRUM ANALYSER SERVICE                         | 230   | Y    |
| AILTECH                                                                                     | 757                  | SPECTRUM ANALYSER OPERATION & MAINTENANCE         | 432   | Y    |
| AILTECH                                                                                     | 7514                 | AUTOMATIC NOISE FIGURE INDICATOR OPER & MAINT     | 174   | Y    |
| AILTECH                                                                                     | 7600                 | NOISE GENERATOR OPERATING MANUAL                  |       |      |
| AKD                                                                                         | 4001                 | 4M MOBILE TX/RX OWNER'S MANUAL                    | 6     | Y    |
| AKD                                                                                         | 6001                 | 6M MOBILE TX/RX OWNER'S MANUAL                    | 7     | Y    |
| ALINCO                                                                                      | DJ580T/E             | VHF/UHF TX/RX INSTRUCTION MANUAL                  | 22    | Y    |
| ALINCO                                                                                      | DM-330               | SERVICE MANUAL                                    | 29    | Y    |
| ALINCO                                                                                      | DR-570T/E            | SERVICE MANUAL                                    | 50    | Y    |
| ALINCO                                                                                      | DR-590               | SERVICE MANUAL                                    | 36    | Y    |
| ALINCO                                                                                      | DR-605               | SERVICE MANUAL                                    | 54    | Y    |
| ALINCO                                                                                      | DR-M06TH             | SERVICE MANUAL                                    | 42    | Y    |

|                    |                      |                                                |     |   |
|--------------------|----------------------|------------------------------------------------|-----|---|
| ALINCO             | DX-70TH              | SERVICE MANUAL                                 | 58  | Y |
| ALINCO             | EDX-2                | SERVICE MANUAL                                 | 10  | Y |
| ALPHA              | 76                   | HF LINEAR OPERATING & TECHNICAL MANUAL         | 18  | Y |
| AMERITRON          | AL84                 | HF LINEAR INSTRUCTION MANUAL                   | 4   | Y |
| AMERITRON          | RCS-4                | REMOTE COAX SWITCH                             | 4   | Y |
| AMPLIFIER-RESEARCH | 1000LP               | 2-200MHZ AMPLIFIER SPECIFICATIONS              | 4   | Y |
| AMPLIFIER-RESEARCH | 150A220              | AMPLIFIER OPERATING MANUAL                     | 13  | Y |
| AMPLIFIER-RESEARCH | 200L                 | AMPLIFIER OPERATING MANUAL                     | 30  | Y |
| AMPLIFIER-RESEARCH | 5S1G4                | 0.8-4.2GHZ 5 WATTS AMPLIFIER SPECIFICATIONS    | 2   | Y |
| AMPLIFIER-RESEARCH | 5W1000               | AMPLIFIER OPERATING & SERVICE MANUAL           |     |   |
| AMPLIFIER-RESEARCH | 700A                 | 700W POWER AMPLIFIER OPERATING & SERVICE       | 71  | Y |
| ANDO               | AC-8211              | SPECTRUM ANALYZER INSTRUCTION MANUAL           |     |   |
| ANDO               | AC-8211              | SPECTRUM ANALYZER MAINTENANCE MANUAL           |     |   |
| ANDO               | AQ6317B              | OPTICAL SPECTRUM ANALYZER INSTRUCTION MANUAL   | 465 | Y |
| ANRITSU            | MD6401A              | DATA TRANSMISSION ANALYZER OPERATION MANUAL    | 148 | Y |
| ANRITSU            | MD6401A-MD0620A/B    | GPB/RS232 INTERFACE UNIT OPERATION MANUAL      | 62  | Y |
| ANRITSU            | MH628A               | TRACKING GENERATOR INSTRUCTION MANUAL          | 71  | Y |
| ANRITSU            | MH680B               | TRACKING GENERATOR INSTRUCTION MANUAL          | 74  | Y |
| ANRITSU            | ML83A                | POWER METER SERVICE MANUAL                     |     |   |
| ANRITSU            | ML93A                | OPTICAL POWER METER INSTRUCTION MANUAL         | 135 | Y |
| ANRITSU            | MS2601A              | SPECTRUM ANALYSER OPERATION MANUAL             | 559 | Y |
| ANRITSU            | MS2601A/J            | SPECTRUM ANALYSER SERVICE MANUAL               | 419 | Y |
| ANRITSU            | MS2602A              | SPECTRUM ANALYZER OPER INSTR BASIC             | 132 | Y |
| ANRITSU            | MS2602A              | SPECTRUM ANALYZER OPER INSTR DETAILED          | 400 | Y |
| ANRITSU            | MS2602A              | SPECTRUM ANALYZER OPER GPIB REMOTE CONTROL     | 276 | Y |
| ANRITSU            | MS420                | GPIB MANUAL                                    | 80  | Y |
| ANRITSU            | MS420                | NETWORK ANALYSER OPERATION                     | 265 | Y |
| ANRITSU            | MS420                | NETWORK ANALYSER SERVICE                       | 670 | Y |
| ANRITSU            | MS420                | PERSONAL TEST AUTOMATION (PTA)                 | 122 | Y |
| ANRITSU            | MS420                | TECHNICAL NOTE 101                             | 50  | Y |
| ANRITSU            | MS610B/J             | SPECTRUM ANALYSER OPERATION MANUAL             | 121 | Y |
| ANRITSU            | MS610B/J/J1          | SPECTRUM ANALYSER OPERATION MANUAL             | 174 | Y |
| ANRITSU            | MS610B/J             | SPECTRUM ANALYSER SERVICE MANUAL               |     |   |
| ANRITSU            | MS610B/J/J1          | SPECTRUM ANALYSER SERVICE MANUAL               | 166 | Y |
| ANRITSU            | MS710 series         | SPECTRUM ANALYSER OPERATION MANUAL             | 288 | Y |
| ANRITSU            | MS710C/D/E/F         | SPECTRUM ANALYSER SERVICE MANUAL               | 479 | Y |
| ANRITSU            | MS2711A              | HANDHELD SPECTRUM ANALYZER USER GUIDE          | 72  | Y |
| ANRITSU            | MS2711A              | HANDHELD SPECTRUM ANALYZER PROGRAMMING GUIDE   | 49  | Y |
| ANRITSU            | MS2711B              | HANDHELD SPECTRUM ANALYZER USER GUIDE          | 124 | Y |
| ANRITSU            | MS2711D              | HANDHELD SPECTRUM ANALYZER PROGRAMMING         | 93  | Y |
| ANRITSU            | MS2711D              | HANDHELD SPECTRUM ANALYZER USER GUIDE          | 148 | Y |
| ANRITSU            | MS8608A/09A          | RADIO TEST SET OPERATION MANUAL VOLUME 1       | 289 | Y |
| ANRITSU            | MS8608A/09A          | RADIO TEST SET OPERATION MANUAL VOLUME 2       | 205 | Y |
| ANRITSU            | MS8608A/09A          | RADIO TEST SET OPERATION MANUAL VOLUME 3       | 331 | Y |
| ANRITSU            | S113B/14B/S331B/32B  | SITEMASTER PROGRAMMING MANUAL                  | 49  | Y |
| ANRITSU            | S113B/14B/S331B/32B  | SITEMASTER USERS GUIDE                         | 73  | Y |
| ANRITSU            | S330A/S331A          | SITEMASTER USERS GUIDE                         | 85  | Y |
| AOR                | AR-1000              | PROGRAM MANUAL                                 | 8   | Y |
| AOR                | AR-1500              | OPERATING MANUAL                               | 16  | Y |
| ARMY               | A41 SET              | VHF BACKPACK INSTRUCTION MANUAL                | 193 | Y |
| ASCOM              | SE610                | VHF/UHF MOBILE TRANSCEIVER SERVICE MANUAL      | 93  | Y |
| ASCOM              | SE651                | VHF/UHF MOBILE TRANSCEIVER SERVICE MANUAL      |     |   |
| AVAL               | PKW1000              | EPROM PROGRAMMER USER MANUAL                   | 146 | Y |
| AVO                | A101                 | AVOSCOPE OPERATING INSTRUCTIONS                | 25  | Y |
| AVO                | B150                 | UNIVERSAL BRIDGE OPERATING INSTRUCTIONS        | 9   | Y |
| AVO                | B150/3               | UNIVERSAL BRIDGE OPERATING & CIRCUITS          | 19  | Y |
| AVO                | B184                 | AUTOMATIC LCR ANALYSER OPERATING INSTRUCTIONS  | 7   | Y |
| AVO                | CT160                | WORKING INSTRUCTIONS                           | 39  | Y |
| AVO                | DA112                | DIGITAL AVOMETER OPERATING INSTRUCTIONS        | 31  | Y |
| AVO                | DA116                | DIGITAL AVOMETER SERVICING INFORMATION         | 35  | Y |
| AVO                | EA113                | ELECTRONIC AVOMETER OPERATING INSTRUCTIONS     | 8   | Y |
| AVO                | EA113                | ELECTRONIC AVOMETER SERVICING                  | 28  | Y |
| AVO                | ELECTRONIC TESTMETER | MK IV WORKING INSTRUCTIONS                     | 30  | Y |
| AVO                | MODEL 7              | WORKING INSTRUCTIONS                           | 16  | Y |
| AVO                | MODEL 7 MK II        | WORKING INSTRUCTIONS                           | 17  | Y |
| AVO                | MODEL 8 MK II        | WORKING INSTRUCTIONS                           | 17  | Y |
| AVO                | MODEL 8 MK III       | WORKING INSTRUCTIONS                           | 25  | Y |
| AVO                | MODEL 8 MK 4         | OPERATING INSTRUCTIONS                         | 17  | Y |
| AVO                | MODEL 8 MK 5         | OPERATING INSTRUCTIONS                         | 24  | Y |
| AVO                | MODEL 8 MK 6         | OPERATING INSTRUCTIONS                         |     |   |
| AVO                | MULTIMINOR           | OPERATING INSTRUCTIONS                         | 4   | Y |
| AVO                | RM170                | SUPER MEGOHMMETER                              | 40  | Y |
| AVO                | RM215-L/1            | AC/DC BREAKDOWN TESTER OPERATING INSTRUCTIONS  | 11  | Y |
| AVO                | TRANS.ANAL           | TRANSISTOR ANALYSER OPERATING MANUAL           |     |   |
| AVO                | VALVE TESTER         | INSTRUCTIONS & VALVE DATA CHARTS               |     |   |
| AVO                | VALVE CHAR METER     | MK II WORKING INSTRUCTIONS                     | 30  | Y |
| BALL EFRATOM       | FRK (H OR L)         | RUBIDIUM FREQUENCY STANDARD MAINTENANCE MANUAL | 79  | Y |

|                      |                    |                                                 |     |   |
|----------------------|--------------------|-------------------------------------------------|-----|---|
| BALL EFRATOM         | FRS                | RUBIDIUM FREQUENCY STANDARD OPERATION MANUAL    | 62  | Y |
| BALL EFRATOM         | M-100              | RUBIDIUM FREQUENCY STANDARD TECHNICAL MANUAL    | 136 | Y |
| BARLOW WADLEY        | XCR30              | SERVICE MANUAL                                  | 15  | Y |
| BARRETT              | 550                | HF TRANSCEIVER TECHNICAL MANUAL                 | 116 | Y |
| BAYCOM               | 1.60               | SOFTWARE MANUAL                                 | 42  | Y |
| BAYCOM               | TNC2X              | 9600/1200 TNC                                   | 24  | Y |
| BELCOM               | LINER 15           | 21 MHZ SSB MOBILE OWNERS GUIDE                  | 12  | Y |
| BELCOM               | LINER 2            | 144MHz SSB MOBILE OWNERS GUIDE                  | 15  | Y |
| BENDIX               | SKIPPER 430        | MARINE RADIOTELEPHONE                           | 11  | Y |
| BIRD                 | 43 SERIES          | THRULINE POWER METER                            | 61  | Y |
| BIRD                 | 43,4430/31,4521-27 | THRULINE POWER METER INSTRUCTION BOOK           | 37  | Y |
| BIRD                 | 6100 SERIES        | TERMALINE RF WATTMETER INSTRUCTION BOOK         | 14  | Y |
| BIRD                 | 6254               | RF MILLIWATTMETER OPERATING & MAINTENANCE       | 13  | Y |
| BIRD                 | 8000 SERIES        | COAXIAL LOAD RESISTOR INSTRUCTION MANUAL        | 20  | Y |
| BIRD                 | 8251/52            | COAXIAL LOAD RESISTOR INSTRUCTION MANUAL        | 18  | Y |
| BLACKSTAR            | METEOR 600         | FREQUENCY COUNTER INSTRUCTION MANUAL            | 12  | Y |
| BLACKSTAR            | METEOR 600         | FREQUENCY COUNTER SERVICE MANUAL                | 18  | Y |
| BOONTON              | 202B               | AM/FM SIGNAL GENERATOR OPERATING INSTRUCTIONS   | 16  | Y |
| BOONTON              | 211-A              | SIGNAL GENERATOR OPERATING & SERVICE MANUAL     |     |   |
| BOONTON              | 250A               | RX METER INSTRUCTION MANUAL                     | 33  | Y |
| BOONTON              | 260A               | Q METER INSTRUCTION MANUAL                      | 32  | Y |
| BOONTON              | 4230A              | RF POWER METER INSTRUCTION MANUAL               | 67  | Y |
| BOONTON              | 59                 | MEGACYCLE METER                                 | 26  | Y |
| BOONTON              | 82AD-01            | IEE-488 BUS INTERFACE OPTION                    | 38  | Y |
| BOONTON              | 92BD               | RF MILLIVOLTMETER INSTRUCTION MANUAL            | 63  | Y |
| BOONTON              | 92EA               | RF MILLIVOLTMETER INSTRUCTION MANUAL            | 43  | Y |
| BOSCH                | KF83/163/453       | MOBILE TX/RX SERVICE MANUAL                     | 358 | Y |
| BP MICROSYSTEMS      | PLD-1100           | PROGRAMMER USER MANUAL                          | 48  | Y |
| BRAUN                | LT470              | 2M / 70CM TRANSVERTER                           | 15  | Y |
| CALIBRE              | I2C                | COMMS ADAPTER USER MANUAL                       | 32  | Y |
| CASELLA              | 3143/81            | THERMOHYGROGRAPH INSTRUCTION LEAFLET            |     |   |
| CDR                  | TR-44              | HAM ROTOR INSTRUCTIONS                          |     |   |
| CIRCUIT SERVICES     | RCC 8000           | RADIOCODE CLOCK USERS MANUAL (EDDY 1645)        |     |   |
| CLARK                | PU12               | PULL-UP MAST MILITARY USER'S HANDBOOK           | 17  | Y |
| CLARK                | SCAM 7,9,12,15     | PUMP-UP MAST USERS HANDBOOK & PARTS LIST        | 71  | Y |
| CLEARTONE            | 351                | VHF FM MOBILE OPER & SERVICE                    | 29  | Y |
| CLEARTONE            | CH300              | VHF FM PORTABLE SERVICE MANUAL                  | 19  | Y |
| CLEARTONE            | CH650              | UHF FM PORTABLE SERVICE MANUAL                  | 76  | Y |
| CLEARTONE            | CH800              | VHF FM HANDHELD OPERATING & SERVICE MANUAL      | 26  | Y |
| CLEARTONE            | CM2000             | VHF FM MOBILE INSTRUCTION MANUAL                | 6   | Y |
| CLEARTONE            | CM2000             | VHF FM MOBILE SERVICE MANUAL                    | 24  | Y |
| CLEARTONE            | CM6000             | INSTRUCTION MANUAL                              | 8   | Y |
| CLEARTONE            | CM6000             | SERVICE MANUAL                                  | 75  | Y |
| CLEARTONE            | CM7000             | PROGRAMMING & SERVICE MANUAL                    | 111 | Y |
| CODAN                | 6801               | SERVICE MANUAL                                  | 131 | Y |
| CODAN                | 9360               | HF SSB TRANSCEIVER USER GUIDE                   |     |   |
| CODAR                | AT5                | HF TX INSTRUCTION MANUAL                        | 7   | Y |
| COLINE               | DC-1500            | SWR / POWER METER INSTRUCTION MANUAL            | 12  | Y |
| COM-SPEC             | CS-10              | POWER AMPLIFIER OWNERS MANUAL                   | 11  | Y |
| COM-SPEC             | PE-1000            | PAGING ENCODER MANUAL                           | 30  | Y |
| COM-SPEC             | TP-38              | SHARED REPEATER TONE PANEL MANUAL               | 33  | Y |
| COMARK               | 1600               | ELECTRONIC THERMOMETER SERVICE MANUAL           |     |   |
| COMARK               | 1905               | INSULATION METER SERVICE MANUAL                 | 7   | Y |
| COMMUNIQUE           | C866               | HIGH BAND MOBILE SERVICE MANUAL                 |     |   |
| CONTINENTAL          | 10201              | UPCONVERTER/DOWNCONVERTER                       |     |   |
| COUTANT              | ASC-ATC            | POWER SUPPLY HANDBOOK                           |     |   |
| CUBIC COMMUNICATIONS | CU-6101            | AUTO ATU TECHNICAL MANUAL                       | 50  | Y |
| CUBIC COMMUNICATIONS | CU-6115            | AUTO ATU TECHNICAL MANUAL                       |     |   |
| CUBIC COMMUNICATIONS | PP-8111            | POWER SUPPLY OPERATING & SERVICE MANUAL         | 20  | Y |
| CUBIC COMMUNICATIONS | R-3030/R3080       | RECEIVER TECHNICAL MANUAL                       | 202 | Y |
| CUBIC COMMUNICATIONS | RC-8451            | AUDIO REMOTE CONTROL OPERATING & SERVICE MANUAL |     |   |
| CUBIC COMMUNICATIONS | RC-8451            | AUDIO REMOTE CONTROL TECHNICAL MANUAL           | 32  | Y |
| CUBIC COMMUNICATIONS | RT-1131            | HF SSB/CW TX/RX TECHNICAL MANUAL                | 116 | Y |
| CUSHMAN              | CE-31A/B           | FM RADIO TEST SET OWNERS MANUAL                 | 70  | Y |
| DAIWA                | DK-200/210         | ELECTRONIC KEYS                                 | 6   | Y |
| DAIWA                | SR-9               | VHF FM RECEIVER                                 | 3   | Y |
| DIAMOND              | CSV3000            | POWER SUPPLY                                    | 1   | Y |
| DATA-I/O             | 22                 | PROM PROGRAMMER OPERATING & SERVICE             |     |   |
| DATA-I/O             | 29A                | PROM PROGRAMMER                                 | 102 | Y |
| DATA-I/O             | UNIPAK2            | PROM PROGRAMMER                                 | 76  | Y |
| DATAMAN              | GANG OF EIGHT      | EPROM PROGRAMMER                                | 15  | Y |
| DATONG               | ASP                | AUTOMATIC SPEECH PROCESSOR BROCHURE             | 4   | Y |
| DATONG               | FL2                | MULTIMODE AUDIO FILTER BROCHURE                 | 4   | Y |
| DATONG               | FL2/A              | AUDIO FILTER AUTO NOTCH ADD-ON BROCHURE         | 2   | Y |
| DATONG               | FL3                | MULTIMODE AUDIO FILTER WITH AUTO NOTCH BROCHURE | 4   | Y |
| DATONG               | RF/M               | RF SPEECH CLIPPER MODULE                        | 8   | Y |
| DATRON               | 1061/61A/71        | DIGITAL VOLTMETER USERS HANDBOOK                | 75  | Y |

|                     |                     |                                                 |     |   |
|---------------------|---------------------|-------------------------------------------------|-----|---|
| DATRON              | 4708                | CAL & SERVICING HANDBOOK VOLS 1 & 2             | 549 | Y |
| DRAKE               | 2-B                 | INSIDE THE DRAKE 2-B RECEIVER                   | 4   | Y |
| DRAKE               | MN7                 | MATCHING NETWORK INSTRUCTION MANUAL             | 15  | Y |
| DRAKE               | PS7                 | POWER SUPPLY                                    | 9   | Y |
| DRAKE               | Q XER               | INSTRUCTION MANUAL                              | 7   | Y |
| DRAKE               | R-4A                | RECEIVER INSTRUCTION MANUAL                     | 39  | Y |
| DRAKE               | R-4C                | RECEIVER INSTRUCTION MANUAL                     | 36  | Y |
| DRAKE               | RV-4C               | REMOTE VFO INSTRUCTION MANUAL                   | 3   | Y |
| DRAKE               | RV7                 | REMOTE VFO INSTRUCTION MANUAL                   | 6   | Y |
| DRAKE               | RV-75               | REMOTE VFO INSTALLATION                         | 13  | Y |
| DRAKE               | SP75                | SPEECH PROCESSOR                                | 13  | Y |
| DRAKE               | SW-4A               | RECEIVER INSTRUCTION MANUAL                     | 28  | Y |
| DRAKE               | T-4X                | TRANSMITTER INSTRUCTION MANUAL                  | 46  | Y |
| DRAKE               | T-4XC               | TRANSMITTER INSTRUCTION MANUAL                  | 40  | Y |
| DRAKE               | TR-4C               | SIDEBAND TRANSCEIVER INSTRUCTION MANUAL         |     |   |
| DRAKE               | TR7                 | HF TX/RX OPERATOR'S MANUAL                      | 40  | Y |
| DRAKE               | TR7                 | HF TX/RX SERVICE MANUAL                         | 155 | Y |
| DRAKE               | WV-4                | RF WATTMETER INSTRUCTION MANUAL                 | 14  | Y |
| DYMAR               | 741                 | AF SIGNAL GENERATOR INSTRUCTION MANUAL          | 15  | Y |
| DYMAR               | 1585                | AF POWER METER OPERATING & SERVICE              | 12  | Y |
| DYMAR               | 1785                | AM/FM MOD METER TECHNICAL HANDBOOK              | 34  | Y |
| DYMAR               | 2081                | RF POWER METER TECHNICAL HANDBOOK               | 15  | Y |
| DYMAR               | M2000A              | MOBILE TX/RX CIRCUIT DIAGRAMS                   | 10  | Y |
| DYMAR               | M2080AM             | VHF AM MOBILE OPERATING & SERVICE               |     |   |
| EATON               | 2075                | NOISE-GAIN ANALYSER OPERATION MANUAL            | 177 | Y |
| EATON               | 2075                | NOISE-GAIN ANALYSER MAINTENANCE MANUAL          |     |   |
| EATON               | 445 / 446           | POWER SIGNAL SOURCES OPERATION & MAINTENANCE    | 142 | Y |
| EDDYSTONE           | 31A                 | NOISE MEASURING SET OPERATING INSTRUCTIONS      |     |   |
| EDDYSTONE           | 670A                | MARINE RECEIVER INSTRUCTION MANUAL              | 6   | Y |
| EDDYSTONE           | 710                 | RECEIVER INSTRUCTION MANUAL                     | 8   | Y |
| EDDYSTONE           | 770U MK II          | UHF RX INSTRUCTION MANUAL                       | 38  | Y |
| EDDYSTONE           | 870A                | RECEIVER INSTRUCTION MANUAL                     | 8   | Y |
| EDDYSTONE           | 888                 | RECEIVER INSTRUCTION MANUAL                     | 9   | Y |
| EDDYSTONE           | 990S                | UHF RECEIVER OPERATING & SERVICE                |     |   |
| EDDYSTONE           | 1645                | OPERATING INSTRUCTIONS & SERVICE DATA           |     |   |
| EDDYSTONE           | 1680/3T             | OPERATING INSTRUCTIONS & SERVICE DATA           |     |   |
| EDDYSTONE           | 1766/3              | REMOTE INTERFACE ADAPTER OPER & SERVICE DATA    |     |   |
| EDDYSTONE           | EB35                | AM/FM RECEIVER CIRCUIT                          | 9   | Y |
| EDDYSTONE           | EB37                | BROADCAST RECEIVER INSTRUCTION MANUAL           | 8   | Y |
| EDDYSTONE           | EC958/7             | OPERATING INSTRUCTIONS & SERVICE DATA           |     |   |
| EDDYSTONE           | EC 964              | COMMS RX TECHNICAL HANDBOOK                     |     |   |
| EDDYSTONE           | EC964/7             | OPERATING INSTRUCTIONS & SERVICE DATA           |     |   |
| EDDYSTONE           | EDOMETER            | DIP METER OPERATING INSTRUCTIONS                | 8   | Y |
| EDDYSTONE           | EP1061A             | PANORAMIC DISPLAY UNIT OPERATING & SERVICE      |     |   |
| EDDYSTONE           | Z01-9600-01 (EB37)  | BROADCAST RECEIVER INSTRUCTION MANUAL           | 38  | Y |
| EES                 | M210                | TIME SYSTEM USER MANUAL                         | 334 | Y |
| EES                 | SFR060A             | STANDARD FREQUENCY RECEIVER 60KHZ HANDBOOK      | 29  | Y |
| EES                 | SFR200B             | STANDARD FREQUENCY RECEIVER 200KHZ HANDBOOK     | 10  | Y |
| EICO                | 710                 | GRID DIP METER INSTRUCTION MANUAL               |     |   |
| EIP                 | 371                 | MICROWAVE FREQUENCY COUNTER OP & SERVICE (PART) | 40  | Y |
| EIP                 | 451                 | MICROWAVE PULSE COUNTER OPERATING & SERVICE     | 238 | Y |
| EIP                 | 545B/548B           | MICROWAVE FREQUENCY COUNTER OPERATING           | 58  | Y |
| EIP                 | 545/548             | MICROWAVE FREQUENCY COUNTER SERVICE             | 237 | Y |
| EIP                 | 575/578             | MICROWAVE FREQUENCY COUNTER OPERATING & SERVICE | 269 | Y |
| EIP                 | 595A/598A           | MICROWAVE FREQUENCY COUNTER OP & PROG           | 137 | Y |
| EG & G              | 5207/5208           | LOCK-IN AMPLIFIER INSTRUCTION MANUAL            | 160 | Y |
| ELAN                | E2A                 | EPROM PROGRAMMER OPERATING INSTRUCTIONS         | 78  | Y |
| ELECTRONIC LABS LTD | MINI-SEAVOICE RT-50 | VHF RADIO TELEPHONE TECHNICAL HANDBOOK          |     |   |
| ELENOS              | SF150               | 150W BAND 2 AMPLIFIER HANDBOOK                  | 34  | Y |
| ELTEK               | SMPS 60/20E         | POWER SUPPLY MANUAL                             | 22  | Y |
| EMC                 | 213-215             | TUBE TESTER OPERATING MANUAL                    | 72  | Y |
| ENI                 | 420L                | BROADBAND POWER AMPLIFIER INSTRUCTION MANUAL    | 10  | Y |
| ENI                 | 503L                | BROADBAND POWER AMPLIFIER INSTRUCTION MANUAL    | 33  | Y |
| ENI                 | 510L                | BROADBAND POWER AMPLIFIER INSTRUCTION MANUAL    | 22  | Y |
| ENI                 | 525LA               | BROADBAND POWER AMPLIFIER OP & SERVICE MANUAL   | 58  | Y |
| ENI                 | 603L                | BROADBAND POWER AMPLIFIER INSTRUCTION MANUAL    | 22  | Y |
| ENI                 | 604L                | BROADBAND POWER AMPLIFIER OPERATION MANUAL      | 68  | Y |
| ENI                 | A-150               | BROADBAND POWER AMPLIFIER OP & SERVICE MANUAL   | 73  | Y |
| ENI                 | A300                | BROADBAND POWER AMPLIFIER INSTRUCTION MANUAL    | 31  | Y |
| ETM                 | ETM-2               | KEYER                                           | 6   | Y |
| ETM                 | ETM-4C              | KEYER                                           | 7   | Y |
| ETM                 | ETM-5C              | KEYER (NO SCHEMATIC)                            | 2   | Y |
| ETM                 | ETM-8C              | KEYER                                           | 7   | Y |
| ETM                 | ETM-9C              | MEMORY KEYER                                    | 24  | Y |
| ETO                 | ALPHA 76            | HF LINEAR OPERATING & SERVICE                   |     |   |
| FARNELL             | 2081                | RF POWER METER INSTRUCTION BOOK (DYMAR)         | 15  | Y |
| FARNELL             | 2085                | AF POWER METER INSTRUCTION BOOK                 | 26  | Y |

|                      |                 |                                                 |     |   |
|----------------------|-----------------|-------------------------------------------------|-----|---|
| FARNELL              | AMM             | AUTOMATIC MODULATION METER                      | 41  | Y |
| FARNELL              | AP/MP SERIES    | 1KW BENCH POWER SUPPLY OPERATORS MANUAL         | 109 | Y |
| FARNELL              | DT12-5/DTV12-14 | OSCILLOSCOPE INSTRUCTION BOOK                   | 33  | Y |
| FARNELL              | DTC12           | COMPONENT TESTER HANDBOOK                       | 37  | Y |
| FARNELL              | DTC12           | COMPONENT TESTER CIRCUIT                        | 8   | Y |
| FARNELL              | E30             | BENCH POWER SUPPLY INSTRUCTION BOOK             | 11  | Y |
| FARNELL              | E350 MK II      | POWER SUPPLY INSTRUCTION MANUAL                 | 13  | Y |
| FARNELL              | F20025          | SPECIAL POWER SUPPLY TECHNICAL DESCRIPTION      |     |   |
| FARNELL              | G SERIES        | POWER SUPPLY INSTRUCTION BOOK                   |     |   |
| FARNELL              | L SERIES        | BENCH POWER SUPPLY INSTRUCTION BOOK             | 17  | Y |
| FARNELL              | L30             | POWER SUPPLY INSTRUCTION MANUAL                 | 12  | Y |
| FARNELL              | LFM2            | SINE/SQUARE OSCILLATOR INSTRUCTION BOOK         | 13  | Y |
| FARNELL              | LS30-10         | BENCH POWER SUPPLY INSTRUCTION BOOK             | 27  | Y |
| FARNELL              | PDD3502A        | BENCH POWER SUPPLY INSTRUCTION / SERVICE        | 46  | Y |
| FARNELL              | PSG1000         | SIGNAL GENERATOR INSTRUCTIONS/SERVICE           | 117 | Y |
| FARNELL              | PULSE GEN       | PULSE GENERATING SYSTEM                         |     |   |
| FARNELL              | S SERIES        | STABILISED POWER SUPPLY INSTRUCTION BOOK        |     |   |
| FARNELL              | SSG1000/2000    | SIGNAL GENERATOR INSTRUCTION BOOK               | 24  | Y |
| FARNELL              | SSG1000/2000    | SIGNAL GENERATOR SERVICE MANUAL                 | 159 | Y |
| FARNELL              | SSG520          | SIGNAL GENERATOR INSTRUCTION BOOK               |     |   |
| FARNELL              | SSG520          | SIGNAL GENERATOR OPERATING/SERVICE MANUAL       | 147 | Y |
| FARNELL              | TOPS 3D         | BENCH POWER SUPPLY INSTRUCTION BOOK             | 19  | Y |
| FARNELL              | TSV70 MK II     | STABILISED VOLTAGE SUPPLY INSTRUCTION MANUAL    | 36  | Y |
| FARNELL              | TTS520          | TEST SET OPERATING & SERVICE                    | 140 | Y |
| FCEL                 | OCEAN STAR 240  | MARINE VHF INSTRUCTION MANUAL                   | 19  | Y |
| FDK                  | 2000            | VHF TX/RX INSTRUCTION MANUAL                    | 18  | Y |
| FDK                  | MULTI-750A/E    | 144MHZ ALL MODE MOBILE INSTRUCTION MANUAL       | 17  | Y |
| FDK                  | MULTI-750A/E    | 144MHZ ALL MODE MOBILE SERVICE MANUAL           | 45  | Y |
| FLUKE                | 83,85,87        | MULTIMETER SERVICE MANUAL                       | 108 | Y |
| FLUKE                | 5100            | SERIES B CALIBRATOR INSTRUCTION MANUAL          |     |   |
| FLUKE                | 6060A/AN        | SYNTH RF SIGNAL GENERATOR INSTRUCTION MANUAL    | 269 | Y |
| FLUKE                | 6060B           | SYNTH RF SIGNAL GENERATOR INSTRUCTION MANUAL    | 312 | Y |
| FLUKE                | 6061A           | SYNTH RF SIGNAL GENERATOR INSTRUCTION MANUAL    |     |   |
| FLUKE                | 8050A           | DIGITAL MULTIMETER INSTRUCTION MANUAL           | 80  | Y |
| FUNKWERK DABENDORF   | EKD500          | RECEIVER TECHNICAL MANUAL                       | 253 | Y |
| FURUNO               | FM-252          | VHF/FM RADIOTELEPHONE                           |     |   |
| FURUNO               | FM-2510         | VHF RADIOTELEPHONE OWNERS MANUAL                | 56  | Y |
| FURUNO               | FM-2721         | VHF RADIOTELEPHONE OPERATORS MANUAL             | 71  | Y |
| FURUNO               | FM-8500         | VHF RADIOTELEPHONE OPERATORS MANUAL             | 86  | Y |
| FURUNO               | FS-1570/2570    | SSB RADIOTELEPHONE OPERATORS MANUAL             | 222 | Y |
| FURUNO               | FS-5000         | SSB RADIOTELEPHONE OPERATORS MANUAL             | 147 | Y |
| FURUNO               | FS-8000         | SSB RADIOTELEPHONE OPERATORS MANUAL             | 145 | Y |
| FURUNO               | LC-70           | LORAN-C NAVIGATOR SERVICE MANUAL                |     |   |
| FURUNO               | LC-80           | LORAN-C NAVIGATOR SERVICE MANUAL                |     |   |
| FURUNO               | RO4500          | VHF FM MARINE RADIO OPERATORS MANUAL            | 22  | Y |
| G0BSX                | G0BSX           | TNC                                             | 10  | Y |
| G2DAF                | G2DAF           | SSB TRANSMITTER MK II & LINEAR AMPLIFIER        | 29  | Y |
| G3PPD                | G3PPD           | INSECT FILTER                                   | 61  | Y |
| G3RUH                | G3RUH           | 9600 BAUD MODEM                                 | 18  | Y |
| G4MH                 | MINIBEAM        | ASSEMBLY INSTRUCTIONS                           | 4   | Y |
| GENRAD               | 916-A           | RADIO FREQUENCY BRIDGE OPERATING & MAINTENANCE  | 32  | Y |
| GENRAD               | 1650-A          | IMPEDANCE BRIDGE OPERATING INSTRUCTIONS         | 32  | Y |
| GENRAD               | GR2220          | BUG HOUND INSTRUCTION MANUAL                    | 33  | Y |
| GIGATRONICS          | 12000A          | MICROWAVE SYNTHESIZER OPERATING                 | 185 | Y |
| GIGATRONICS          | 12000A          | MICROWAVE SYNTHESIZER SERVICE (NO SCHEMATICS)   | 88  | y |
| GIGATRONICS          | 8035XA          | PEAK POWER SENSOR OPER & MAINT(NO SCHEMS)       | 84  | Y |
| GIGATRONICS          | 8540C           | UNIVERSAL POWER METER OPER & MAINT (NO SCHEMS)  | 265 | Y |
| GIGATRONICS          | 8650A           | UNIVERSAL POWER METER OPERATING                 | 240 | Y |
| GLASSMAN             | LV SERIES (1KW) | DC POWER SUPPLY TECHNICAL MANUAL                | 62  | Y |
| GLASSMAN             | LV SERIES       | INTERNAL GPIB INTERFACE TECHNICAL MANUAL        | 42  | Y |
| GOULD                | OS1420          | DIGITAL STORAGE SCOPE INSTRUCTION MANUAL        |     |   |
| GOULD                | PMG series      | STABILISED DC POWER SUPPLY                      | 12  | Y |
| GP                   | RP32            | EPROM PROGRAMMER INSTRUCTIONS                   | 45  | Y |
| GREEN                | TG-2400         | TRANSMITTER OUTPUT ANALYSER OPERATING & SERVICE | 52  | Y |
| GREEN                | TG2601          | TERMINATING WATTMETER OPERATING & SERVICE       | 24  | Y |
| GRESHAM              | GX              | POWER SUPPLY SERVICE MANUAL                     |     |   |
| HALLICRAFTERS        | HT32A           | HF SSB TX OPERATING & SERVICE INSTRUCTIONS      | 34  | Y |
| HALLICRAFTERS        | HT-40           | HF TRANSMITTER OPERATING & SERVICE INSTRUCTIONS | 25  | Y |
| HAMEG                | HM203-6         | OSCILLOSCOPE INSTRUCTION MANUAL                 | 42  | Y |
| HAMEG                | HM205-3         | OSCILLOSCOPE OPERATING & SERVICE MANUAL         |     |   |
| HARRIS               | RF590           | RECEIVER TECHNICAL MANUAL                       |     | Y |
| HATFIELD INSTRUMENTS | 1008A           | HAND-HELD DECIBEL METER                         | 25  | Y |
| HEATHKIT             | GC-1U           | MOHICAN COMMS RECEIVER                          | 67  | Y |
| HEATHKIT             | GD-1A           | GDO                                             | 20  | Y |
| HEATHKIT             | GD-1U           | GRID DIP METER ASSEMBLY MANUAL                  | 28  | Y |
| HEATHKIT             | GR-78           | RECEIVER ASSEMBLY MANUAL                        | 54  | Y |
| HEATHKIT             | HD-10           | ELECTRONIC KEYSER ASSEMBLY MANUAL               | 50  | Y |
| HEATHKIT             | HM-11U          | REFLECTED POWER METER & SWR BRIDGE              | 23  | Y |

|            |                       |                                                 |     |   |
|------------|-----------------------|-------------------------------------------------|-----|---|
| HEATHKIT   | HM-102                | RF POWER METER ASSEMBLY MANUAL                  | 32  | Y |
| HEATHKIT   | HN-31                 | CANTENNA DUMMY RF LOAD                          | 17  | Y |
| HEATHKIT   | HP-23A                | AC POWER SUPPLY ASSEMBLY MANUAL                 | 30  | Y |
| HEATHKIT   | HW-7                  | QRP TRANSCEIVER ASSEMBLY MANUAL                 | 23  | Y |
| HEATHKIT   | HW-32                 | 20M SSB TRANSCEIVER                             | 41  | Y |
| HEATHKIT   | HW-100                | SSB TRANSCEIVER ASSEMBLY MANUAL                 |     |   |
| HEATHKIT   | HW-101                | SSB TRANSCEIVER ASSEMBLY MANUAL                 |     |   |
| HEATHKIT   | IP-17                 | REGULATED HIGH VOLTAGE POWER SUPPLY ASSEMBLY    | 55  | Y |
| HEATHKIT   | RF-1U                 | SIGNAL GENERATOR ASSEMBLY MANUAL                | 34  | Y |
| HEATHKIT   | RG1                   | RECEIVER ASSEMBLY & USER MANUAL                 |     |   |
| HEATHKIT   | SB-101                | SSB TRANSCEIVER ASSEMBLY MANUAL                 |     |   |
| HEATHKIT   | SB-102                | SSB TRANSCEIVER ASSEMBLY MANUAL                 |     |   |
| HEATHKIT   | SB-200                | HF LINEAR                                       | 11  | Y |
| HEATHKIT   | SB-401                | SSB TRANSMITTER ASSEMBLY MANUAL                 |     |   |
| HEATHKIT   | SB-401                | SSB TRANSMITTER SPECIFICATIONS                  | 8   | Y |
| HEATHKIT   | SB-610                | MONITOR SCOPE                                   | 30  | Y |
| HEATHKIT   | SB-620                | SCANALYZER ASSEMBLY MANUAL                      | 100 | Y |
| HEATHKIT   | SB-620                | SCANALYZER SPECIFICATIONS                       | 6   | Y |
| HELPER     | SINADDER 3            | SINAD MEASUREMENT METER INSTRUCTION MANUAL      | 7   | Y |
| HENRY      | 4K                    | HF LINEAR OPERATING & MAINTENANCE MANUAL        | 25  | Y |
| HITACHI    | V-1050                | OSCILLOSCOPE OPERATING MANUAL                   | 52  | Y |
| HITACHI    | V-1050                | OSCILLOSCOPE SERVICE MANUAL                     | 106 | Y |
| HITACHI    | V-1065/1060/665/660   | OSCILLOSCOPE OPERATION MANUAL (WITH SCHEMATICS) | 79  | Y |
| HITACHI    | V-1065A/1060/665A/660 | OSCILLOSCOPE SERVICE MANUAL                     | 131 | Y |
| HITACHI    | V-1100A               | OSCILLOSCOPE OPERATION MANUAL                   | 83  | Y |
| HITACHI    | V-1100A/1070A         | OSCILLOSCOPE SERVICE MANUAL                     | 96  | Y |
| HITACHI    | V-1150                | OSCILLOSCOPE OPERATION MANUAL                   | 133 | Y |
| HITACHI    | V-1150                | OSCILLOSCOPE SERVICE MANUAL                     | 172 | Y |
| HITACHI    | V-425/V-225           | OSCILLOSCOPE SERVICE MANUAL                     | 77  | Y |
| HITACHI    | V-509                 | OSCILLOSCOPE SERVICE MANUAL                     | 52  | Y |
| HITACHI    | V-522/V-523/V-525     | OSCILLOSCOPE OPERATION MANUAL (WITH SCHEMATICS) | 71  | Y |
| HITACHI    | V-680                 | OSCILLOSCOPE SERVICE MANUAL                     | 112 | Y |
| HITACHI    | VC-5430               | OSCILLOSCOPE SERVICE MANUAL                     | 80  | Y |
| HITACHI    | VC-6015               | OSCILLOSCOPE SERVICE MANUAL                     | 46  | Y |
| HITACHI    | VC-6025/6045          | OSCILLOSCOPE SERVICE MANUAL                     | 192 | Y |
| HITACHI    | VC-6025A/6045A        | OSCILLOSCOPE SERVICE MANUAL                     | 54  | Y |
| HITACHI    | VC-6145               | OSCILLOSCOPE SERVICE MANUAL                     | 200 | Y |
| HITACHI    | VC-6023/6024          | OSCILLOSCOPE SERVICE MANUAL                     | 110 | Y |
| HITACHI    | VM-900                | VIDEO MONITOR SERVICE MANUAL                    | 46  | Y |
| HITACHI    | VM-910A               | VIDEO MONITOR SERVICE MANUAL                    | 25  | Y |
| HUNTRON    | 1000 SERIES           | TRACKER INSTRUCTION MANUAL                      | 140 | Y |
| HUNTRON    | 1005B-1S/ES/JS        | TRACKER OPERATOR MANUAL                         | 96  | Y |
| HUNTRON    | 1005B-1S/ES/JS        | TRACKER MAINTENANCE MANUAL                      | 33  | Y |
| HUNTRON    | 2000                  | TRACKER INSTRUCTION MANUAL                      | 33  | Y |
| HYGAIN     | TH-7DX                | BROADBAND SUPER THUNDERBIRD                     | 31  | Y |
| HYGAIN     | THB3 JR               | 3 ELE HF BEAM INSTRUCTION MANUAL                | 11  | Y |
| IFR        | 2026                  | MULTISOURCE GENERATOR OPERATING MANUAL          | 281 | Y |
| IFR        | 2030                  | AM/FM SIGNAL GENERATOR OPERATING MANUAL         |     |   |
| IFR        | 2398                  | SPECTRUM ANALYZER OPERATING MANUAL              | 200 | Y |
| IFR        | 2398                  | SPECTRUM ANALYZER MAINTENANCE MANUAL            | 211 | Y |
| IFR        | 2398                  | PROGRAMMING MANUAL                              | 169 | Y |
| IFR        | 2967                  | SEE MARCONI 2965                                |     |   |
| IFR        | 2975                  | COMMS TEST SET OPERATION MANUAL                 | 177 | Y |
| IFR        | 2975                  | COMMS TEST SET OPERATION MANUAL SUPPLEMENT      | 33  | Y |
| IFR        | 2975                  | COMMS TEST SET P25 TRUNKING OPTION              | 27  | Y |
| IFR        | 2975                  | COMMS TEST SET SMARTNET OPTION                  | 29  | Y |
| IFR        | A-7550                | SPECTRUM ANALYZER ILLUSTRATED PARTS CATALOG     | 244 | Y |
| IFR        | A-7550                | SPECTRUM ANALYZER MAINTENANCE MANUAL            | 446 | Y |
| IFR        | FM/AM-1000S/A         | COMMS SERVICE MONITOR MAINTENANCE MANUAL        | 585 | Y |
| IFR        | FM/AM-1000S/A         | COMMS SERVICE MONITOR OPERATING MANUAL          | 232 | Y |
| IFR        | FM/AM-1100S           | COMMS SERVICE MONITOR CALIBRATION MANUAL        | 43  | Y |
| IFR        | FM/AM-1100S/A         | COMMS SERVICE MONITOR OPERATING MANUAL          | 202 | Y |
| IFR        | FM/AM-1200            | COMMS SERVICE MONITOR OPERATING MANUAL          | 105 | Y |
| IFR        | FM/AM-1200            | ILLUSTRATED PARTS CATALOG                       | 175 | Y |
| IFR        | FM/AM-1200S/A         | COMMS SERVICE MONITOR OPERATING MANUAL          | 127 | Y |
| IFR        | FM/AM-1200S/A         | COMMS SERVICE MONITOR SERVICE MANUAL            | 491 | Y |
| IFR        | FM/AM-1600S/CSA       | CELLULAR PROTOCOL ANALYZER OPERATING            | 458 | Y |
| IFR        | FM/AM-500/A           | COMMS SERVICE MONITOR MAINTENANCE MANUAL        | 362 | Y |
| IFR        | MM-100                | MULTIMETER OPERATION MANUAL                     | 40  | Y |
| IFR        | MM-100                | MULTIMETER MAINTENANCE MANUAL                   | 108 | Y |
| IFR        | MM-100E               | MULTIMETER OPERATION & MAINTENANCE MANUAL       | 114 | Y |
| IND.INSTRU | TRANSIPACK 306        | POWER SUPPLY OPERATING & SERVICE MANUAL         |     |   |
| INTERQUAD  | LX1564/1460           | VGA MONITOR SERVICE MANUAL                      |     |   |
| ITT        | FRX5                  | UHF FM FIXED STATION RECEIVER SERVICE MANUAL    |     |   |
| ITTMARINE  | ST1680A               | RADIO TRANSMITTER OPERATING & SERVICE           | 145 | Y |
| IWATSU     | SS-3510               | OSCILLOSCOPE INSTRUCTION MANUAL                 |     |   |
| IWATSU     | SS-5702               | OSCILLOSCOPE INSTRUCTION MANUAL                 | 78  | Y |

|                   |                      |                                                 |     |   |
|-------------------|----------------------|-------------------------------------------------|-----|---|
| IWATSU            | SS-5710              | OSCILLOSCOPE INSTRUCTION MANUAL                 | 179 | Y |
| IWATSU            | SS-5711              | OSCILLOSCOPE INSTRUCTION MANUAL                 | 196 | Y |
| IWATSU            | SS-7840              | OSCILLOSCOPE OPERATION MANUAL                   | 75  | Y |
| JIL               | SX-200(N)            | SCANNING MONITOR RECEIVER SERVICE MANUAL        | 41  | Y |
| JOHNSON           | FLEETCOM II 559/1559 | UHF MOBILE SERVICE INFORMATION MANUAL           | 23  | Y |
| JPS               | ANC-4                | ANTENNA NOISE CANCELLER INSTRUCTION MANUAL      | 17  | Y |
| JPS               | NIR-10               | NOISE / INTERFERENCE REDUCTION UNIT INSTRUCTION | 37  | Y |
| KALMUS            | 520FC                | WIDEBAND RF POWER AMPLIFIER                     | 17  | Y |
| KANDA             | AVR & 51 series      | PROGRAMMER OPERATING INSTRUCTIONS               | 12  | Y |
| KANTRONICS        | KAM98                | TNC USERS GUIDE                                 | 384 | Y |
| KANTRONICS        | KPC3 V 6.0           | MANUAL ADDENDUM                                 | 19  | Y |
| KANTRONICS        | KPC3+                | TNC USERS GUIDE                                 | 314 | Y |
| KANTRONICS        | KPC9612              | TNC USERS GUIDE                                 | 95  | Y |
| KANTRONICS        | KPC9612+             | TNC USERS GUIDE                                 | 348 | Y |
| KATSUMI           | MK1024               | KEYER                                           | 7   | Y |
| KDK               | FM-2030              | 144MHZ FM MOBILE INSTRUCTION MANUAL             | 21  | Y |
| KEITHLEY          | 247                  | HIGH VOLTAGE SUPPLY INSTRUCTION MANUAL          |     |   |
| KEITHLEY          | 2010                 | MULTIMETER SERVICE MANUAL                       |     |   |
| KENPRODUCT        | KP-12A               | RF SPEECH PROCESSOR OPERATING MANUAL            |     |   |
| KENPRO            | KR-600RC             | ROTATOR INSTRUCTION MANUAL                      | 17  | Y |
| KENPRO            | KR-2000RC            | ROTATOR INSTRUCTION MANUAL                      | 18  | Y |
| KENT              | KEYER                | ELECTRONIC KEYER OPERATING MANUAL               |     |   |
| KEY               | SEE KYODO            |                                                 |     |   |
| KINGSHILL         | NS & NM SERIES       | POWER SUPPLY TECHNICAL DATA                     |     |   |
| KROHN-HITE        | 3800                 | NARROW BAND TRACKING FILTER OPERATING & MAINT   | 49  | Y |
| KW                | KW1000               | LINEAR AMPLIFIER INSTRUCTION MANUAL             | 8   | Y |
| KYODO             | KG105-15A/B          | VHF FM MOBILE SERVICE MANUAL 136-174MHZ         | 121 | Y |
| LAFAYETTE         | KT-340               | COMMUNICATIONS RECEIVER ASSEMBLY MANUAL         | 30  | Y |
| LAKE              | DTR3                 | 80M CW TRANSCEIVER                              |     |   |
| LAKE              | DTR7-5               | 5 WATT CW TRANSCEIVER INSTALL & OP.             | 48  | Y |
| LAMBDA            | LFS-42               | SERIES POWER SUPPLY SERVICE MANUAL              |     |   |
| LAMBDA            | LNS-Y                | POWER SUPPLY OPERATING & SERVICE MANUAL         |     |   |
| LECROY            | 7200A                | MODULAR OSCILLOSCOPE OPERATORS MANUAL           | 481 | Y |
| LECROY            | 7200A                | MODULAR OSCILLOSCOPE REMOTE CONTROL             | 456 | Y |
| LECROY            | 9300C SERIES         | DIGITAL OSCILLOSCOPE OPERATORS MANUAL           | 258 | Y |
| LECROY            | 9400A                | DIGITAL OSCILLOSCOPE OPERATORS MANUAL           | 208 | Y |
| LECROY            | 9424 SERIES          | DIGITAL OSCILLOSCOPE OPERATORS MANUAL           | 220 | Y |
| LECROY            | 94XX SERIES          | REMOTE CONTROL MANUAL                           | 232 | Y |
| LECROY            | LC SERIES            | DIGITAL OSCILLOSCOPE HANDS ON MANUAL            | 213 | Y |
| LECROY            | LC SERIES            | DIGITAL OSCILLOSCOPE OPERATORS MANUAL           | 294 | Y |
| LECROY            | LC SERIES            | DIGITAL OSCILLOSCOPE REMOTE CONTROL             | 300 | Y |
| LECROY            | LITERUNNER           | DIGITAL OSCILLOSCOPE OPERATORS MANUAL           | 102 | Y |
| LECROY            | LSA1000              | REMOTE CONTROL MANUAL                           | 234 | Y |
| LECROY            | WAVERUNNER           | LAN OPTION                                      | 25  | Y |
| LECROY            | WAVERUNNER           | DIGITAL OSCILLOSCOPE OPERATORS MANUAL           | 262 | Y |
| LECROY            | WAVERUNNER           | REMOTE CONTROL MANUAL                           | 286 | Y |
| LECROY            | WAVERUNNER-2         | DIGITAL OSCILLOSCOPE OPERATORS MANUAL           | 322 | Y |
| LECROY            | WAVERUNNER-2         | QUICK REF GUIDE                                 | 8   | Y |
| LEVELL            | SHORTFORMCAT         | SHORT FORM CATALOGUE                            | 4   | Y |
| LEVELL            | TG152                | AUDIO OSCILLATOR INSTRUCTION MANUAL             | 8   | Y |
| LEVELL            | TG200DMP             | AUDIO OSCILLATOR INSTRUCTION MANUAL             | 10  | Y |
| LLOYD RESEARCH    | L9000                | PROGRAMMER INSTRUCTION MANUAL                   |     |   |
| LOWE              | HF-125               | HF RECEIVER USER MANUAL                         | 26  | Y |
| LOWE              | HF-150               | HF RECEIVER USER MANUAL                         | 36  | Y |
| LOWE              | HF-150               | HF RECEIVER TECHNICAL MANUAL                    | 39  | Y |
| LOWE              | SRX30A               | HF RECEIVER OPERATING MANUAL                    |     |   |
| LYONS INSTRUMENTS | D10                  | DISTORTION METER OPERATING & SERVICE MANUAL     | 17  | Y |
| MARCONI           | 2017                 | SIGNAL GENERATOR OPERATING MANUAL               | 37  | Y |
| MARCONI           | 2017                 | SIGNAL GENERATOR SERVICE MANUAL                 | 321 | Y |
| MARCONI           | 2018.2019            | SIGNAL GENERATOR OPERATING MANUAL               | 29  | Y |
| MARCONI           | 2018.2019            | SIGNAL GENERATOR SERVICE MANUAL                 | 261 | Y |
| MARCONI           | 2022                 | SIGNAL GENERATOR OPERATING MANUAL               | 49  | Y |
| MARCONI           | 2022C                | SIGNAL GENERATOR OPERATING & SERVICE MANUAL     | 244 | Y |
| MARCONI           | 2022D                | SIGNAL GENERATOR OPERATING MANUAL               | 59  | Y |
| MARCONI           | 2022E                | SIGNAL GENERATOR OPERATING MANUAL               | 48  | Y |
| MARCONI           | 2022E                | SIGNAL GENERATOR SERVICE MANUAL A3              | 30  | Y |
| MARCONI           | 2022E                | SIGNAL GENERATOR SERVICE MANUAL A4              | 164 | Y |
| MARCONI           | 2023.2024            | AM/FM SIGNAL GENERATOR OPERATING MANUAL         | 223 | Y |
| MARCONI           | 2023 A/B 2024 2025   | AM/FM SIGNAL GENERATOR MAINT (NO SCHEMATICS)    | 214 | Y |
| MARCONI           | 2030 series          | AM/FM SIGNAL GENERATOR OPERATING MANUAL         | 283 | Y |
| MARCONI           | 2040.2041.2042       | SIGNAL GENERATOR OPERATING MANUAL               | 136 | Y |
| MARCONI           | 2050.2051.2052       | SIGNAL GENERATOR OPERATING MANUAL               | 354 | Y |
| MARCONI           | 2304                 | MODULATION METER INSTRUCTION MANUAL             | 58  | Y |
| MARCONI           | 2305                 | MODULATION METER OPERATING MANUAL               | 67  | Y |
| MARCONI           | 2305                 | MODULATION METER SERVICE MANUAL                 | 291 | Y |
| MARCONI           | 2306                 | PROGRAMMABLE INTERFACE OPERATING MANUAL         | 100 | Y |
| MARCONI           | 2310                 | TETRA SIGNAL ANALYZER OPERATING MANUAL          |     |   |

|         |                       |                                                  |     |   |
|---------|-----------------------|--------------------------------------------------|-----|---|
| MARCONI | 2365                  | 75 OHM COAXIAL SWITCH UNIT INSTRUCTION MANUAL    |     |   |
| MARCONI | 2380                  | DISPLAY OPERATING PRECAUTIONS                    | 9   | Y |
| MARCONI | 2380                  | SPECTRUM ANALYSER DISPLAY UNIT SERVICE MANUAL    | 334 | Y |
| MARCONI | 2382.2380             | SPECTRUM ANALYSER OPERATING MANUAL               | 119 | Y |
| MARCONI | 2382                  | 100HZ-400MHZ RF UNIT SERVICE MANUAL              | 656 | Y |
| MARCONI | 2382.2380             | SPECTRUM ANALYSER AND DISPLAY GPIB OPERATING     | 61  | Y |
| MARCONI | 2383                  | 100HZ-4.2GHZ RF UNIT SERVICE MANUAL              | 620 | Y |
| MARCONI | 2435                  | 2 GHz FREQUENCY COUNTER OPERATING MANUAL         | 34  | Y |
| MARCONI | 2440                  | 20 GHz MICROWAVE COUNTER OPERATING MANUAL        | 45  | Y |
| MARCONI | 2442                  | 26.5 GHz MICROWAVE COUNTER OPERATING MANUAL      | 46  | Y |
| MARCONI | 2610                  | TRUE RMS VOLTMETER OPERATING MANUAL              | 34  | Y |
| MARCONI | 2610                  | TRUE RMS VOLTMETER SERVICE MANUAL                | 87  | Y |
| MARCONI | 2830                  | MULTIPLEX TESTER OPERATING MANUAL                | 96  | Y |
| MARCONI | 2955                  | RADIO TEST SET INTRO GUIDE                       | 56  | Y |
| MARCONI | 2955                  | RADIO TEST SET OPERATING MANUAL                  | 80  | Y |
| MARCONI | 2955                  | RADIO TEST SET SERVICE MANUAL                    | 399 | Y |
| MARCONI | 2955A                 | RADIO TEST SET INTRO GUIDE                       | 52  | Y |
| MARCONI | 2955A/R               | RADIO TEST SET INTRO GUIDE                       | 55  | Y |
| MARCONI | 2955A/R               | RADIO TEST SET OPERATING                         | 176 | Y |
| MARCONI | 2955A/R               | RADIO TEST SET PROGRAMMING                       | 33  | Y |
| MARCONI | 2955A/R               | RADIO TEST SET SERVICE MANUAL                    | 433 | Y |
| MARCONI | 2955B                 | RADIO TEST SET OPERATING MANUAL                  | 127 | Y |
| MARCONI | 2958                  | CELLULAR RADIO TEST SYSTEM OPERATING MANUAL      | 141 | Y |
| MARCONI | 2960                  | RADIO TEST SYSTEM OPERATING MANUAL               | 67  | Y |
| MARCONI | 2965/2965A/2966A/2967 | RADIO TEST SET MAINTENANCE VOLUME 1              | 594 | Y |
| MARCONI | 2965/2965A/2966A/2967 | RADIO TEST SET MAINTENANCE VOLUME 2              | 408 | Y |
| MARCONI | 2965                  | RADIO TEST SET OPERATING MANUAL                  | 178 | Y |
| MARCONI | 2965A/66A/67          | RADIO TEST SET PROGRAMMING                       | 559 | Y |
| MARCONI | 2968                  | RADIO TEST SET FOR TETRA PHASE 1 OPERATING       |     |   |
| MARCONI | 2968                  | RADIO TEST SET FOR TETRA PHASE 2 OPERATING       |     |   |
| MARCONI | 6050/3                | FREQUENCY METER INSTRUCTION MANUAL               | 8   | Y |
| MARCONI | 6055                  | SIGNAL SOURCE INSTRUCTION MANUAL                 | 19  | Y |
| MARCONI | 6056A                 | SIGNAL SOURCE INSTRUCTION MANUAL                 | 27  | Y |
| MARCONI | 6058                  | SIGNAL SOURCE INSTRUCTION MANUAL                 | 21  | Y |
| MARCONI | 6150A                 | SERIES SIGNAL SOURCE INSTRUCTION MANUAL          |     |   |
| MARCONI | 6460                  | POWER METER INSTRUCTION MANUAL                   | 43  | Y |
| MARCONI | 6555                  | POWER METER INSTRUCTION MANUAL                   |     |   |
| MARCONI | 6590B                 | POWER SUPPLY INSTRUCTION MANUAL                  | 30  | Y |
| MARCONI | 6600A                 | MICROWAVE SWEEP OSC INSTRUCTION MANUAL           | 100 | Y |
| MARCONI | 6633                  | MICROWAVE SWEEP OSC PLUG-IN INSTRUCTION MANUAL   |     |   |
| MARCONI | 6647                  | MICROWAVE SWEEP OSC PLUG-IN INSTRUCTION MANUAL   | 54  | Y |
| MARCONI | 6650                  | MICROWAVE SWEEP OSC PLUG-IN INSTRUCTION MANUAL   |     |   |
| MARCONI | 6651                  | MICROWAVE SWEEP OSC PLUG-IN INSTRUCTION MANUAL   | 50  | Y |
| MARCONI | 6700B                 | SWEEP OSCILLATOR (MAINFRAME) INSTRUCTION MANUAL  | 99  | Y |
| MARCONI | 6910                  | POWER SENSOR INSTRUCTION MANUAL                  | 16  | Y |
| MARCONI | 6950                  | POWER METER OPERATING MANUAL                     | 22  | Y |
| MARCONI | 6960B                 | POWER METER OPERATING MANUAL                     | 61  | Y |
| MARCONI | 893B                  | AF POWER METER INSTRUCTION MANUAL                | 23  | Y |
| MARCONI | CR100                 | HF RECEIVER                                      | 73  | Y |
| MARCONI | CR150/6               | HF RECEIVER                                      | 72  | Y |
| MARCONI | GPIB                  | THE GPIB MANUAL                                  | 52  | Y |
| MARCONI | MARCOM II             | DK61/62 UHF BASE STATION SERVICE MANUAL          |     |   |
| MARCONI | OA2090B               | WHITE NOISE TEST SET INSTRUCTION MANUAL          | 77  | Y |
| MARCONI | SCIMITAR V            | VHF RADIO FMU AND FILL GUN BASE WORKSHOP MANUAL  | 110 | Y |
| MARCONI | SCIMITAR V            | VHF RADIO POWER AMPLIFIER BASE WORKSHOP MANUAL   | 38  | Y |
| MARCONI | TETRA                 | INTRODUCTION TO TETRA                            | 43  | Y |
| MARCONI | TF1026                | FREQUENCY METER OPERATING & MAINTENANCE          | 35  | Y |
| MARCONI | TF1313A               | UNIVERSAL BRIDGE INSTRUCTION MANUAL              | 52  | Y |
| MARCONI | TF144H series II      | SIGNAL GENERATOR OPERATING & MAINTENANCE         | 59  | Y |
| MARCONI | TF1417/2              | COUNTER/FREQUENCY METER OPERATING                | 27  | Y |
| MARCONI | TF2015                | SIGNAL GENERATOR INSTRUCTION MANUAL              | 57  | Y |
| MARCONI | TF2016A               | 10KHZ TO 120MHZ AM/FM SIG GEN INSTRUCTION MANUAL | 98  | Y |
| MARCONI | TF2163                | UHF ATTENUATOR INSTRUCTION MANUAL                | 18  | Y |
| MARCONI | TF2169                | PULSE MODULATOR INSTRUCTION MANUAL               | 20  | Y |
| MARCONI | TF2170B               | DIGITAL SYNCHRONIZER INSTRUCTION MANUAL          | 34  | Y |
| MARCONI | TF2171                | DIGITAL SYNCHRONIZER INSTRUCTION MANUAL          | 39  | Y |
| MARCONI | TF2173                | DIGITAL SYNCHRONIZER INSTRUCTION MANUAL          | 57  | Y |
| MARCONI | TF2175                | RF POWER AMPLIFIER INSTRUCTION MANUAL            | 23  | Y |
| MARCONI | TF2200                | OSCILLOSCOPE VOLUME 1                            |     |   |
| MARCONI | TF2200                | OSCILLOSCOPE VOLUME 3                            |     |   |
| MARCONI | TF2300A               | MODULATION METER INSTRUCTION MANUAL              | 75  | Y |
| MARCONI | TF2303                | MODULATION METER INSTRUCTION MANUAL              | 52  | Y |
| MARCONI | TF2337A               | AUTO DISTORTION METER OPER & MAINT.              | 43  | Y |
| MARCONI | TF2356 & TF2357A      | 20MHZ SLMS OPERATING MANUAL                      | 75  | Y |
| MARCONI | TF2370                | SPECTRUM ANALYSER INSTRUCTION MANUAL             | 297 | Y |
| MARCONI | TF2371                | 200 MHZ SPECTRUM ANALYSER OPERATING MANUAL       | 46  | Y |
| MARCONI | TF2371                | 200 MHZ SPECTRUM ANALYSER SERVICE MANUAL         | 289 | Y |

|                  |               |                                                 |     |   |
|------------------|---------------|-------------------------------------------------|-----|---|
| MARCONI          | TF2400        | 10-110MHZ CONVERTER INSTRUCTION MANUAL          | 39  | Y |
| MARCONI          | TF2431        | FREQUENCY COUNTER INSTRUCTION MANUAL            | 33  | Y |
| MARCONI          | TF2432        | FREQUENCY COUNTER INSTRUCTION MANUAL            | 36  | Y |
| MARCONI          | TF2600        | SENSITIVE VALVE VOLTMETER INSTRUCTION MANUAL    | 23  | Y |
| MARCONI          | TF2603        | RF MILLIVOLTMETER                               | 52  | Y |
| MARCONI          | TF2604        | ELECTRONIC VOLTMETER INSTRUCTION MANUAL         | 35  | Y |
| MARCONI          | TF2650        | FET MULTIMETER                                  | 19  | Y |
| MARCONI          | TF2700        | UNIVERSAL BRIDGE INSTRUCTION MANUAL             | 38  | Y |
| MARCONI          | TF2950        | MOBILE RADIO TEST SET INSTRUCTION MANUAL        |     |   |
| MARCONI          | TF2952        | RT TEST SET OPERATING MANUAL                    | 31  | Y |
| MARCONI          | TF2952        | RT TEST SET SERVICE MANUAL                      | 223 | Y |
| MARCONI          | TF791D        | DEVIATION METER OPERATING & SERVICE MANUAL      | 66  | Y |
| MARCONI          | TF893A        | AF POWER METER OPERATING & MAINTENANCE          | 21  | Y |
| MARCONI          | TF995B/2      | SIGNAL GENERATOR INSTRUCTION MANUAL             | 48  | Y |
| MARCONI          | TK2366        | BASEBAND FILTER UNIT INSTRUCTION MANUAL         |     |   |
| MARCONI          | TK2373        | FREQUENCY EXTENDER SERVICE MANUAL               | 137 | Y |
| MARCONI          | TK2374        | ZERO LOSS PROBE INSTRUCTION MANUAL              | 18  | Y |
| MARCONI          | TK2375        | TRACKING GENERATOR AMPLIFIER INSTRUCTION MANUAL | 12  | Y |
| MARCONI          | TM7164        | 100-500MHZ CONVERTER                            | 28  | Y |
| MARCONI          | TM9954        | LOGARITHMIC AMPLIFIER INSTRUCTION MANUAL        | 10  | Y |
| MARCONI          | THE Q METER   | THEORY AND PRACTICE                             | 33  | Y |
| MARCONI MARINE   | BANTAM        | FM VHF RADIOTELEPHONE INSTRUCTION MANUAL        | 51  | Y |
| MARCONI MARINE   | EC 1837/1F    | SUPPLEMENT No. 1                                | 41  | Y |
| MARCONI MARINE   | GUARDIAN      | RECEIVER INSTRUCTION MANUAL                     |     |   |
| MARCONI MARINE   | LIFEGUARD 3   | AUTOMATIC ALARM RECEIVER INSTRUCTION MANUAL     | 80  | Y |
| MARCONI MARINE   | PACIFIC       | RECEIVER PROVISIONAL CIRCUIT DIAGRAMS           | 26  | Y |
| MARCONI MARINE   | WARDEN III    | WATCHKEEPING RECEIVER INSTRUCTION MANUAL        | 34  | Y |
| MAXON            | CGX0500       | FM HANDHELD SERVICE MANUAL                      | 39  | Y |
| MAXON            | CGX4010       | VHF MOBILE SERVICE MANUAL                       | 55  | Y |
| MAXON            | CGX4020       | UHF MOBILE SERVICE MANUAL                       | 43  | Y |
| MAXON            | CP-0510/0511  | SCHEMATICS                                      | 6   | Y |
| MAXON            | CP-0520/0521  | 5 WATT UHF HANDHELD SERVICE MANUAL              | 42  | Y |
| MAXON            | SM2000(PM100) | FM MOBILE                                       | 72  | Y |
| MAXON            | SMP-4000      | PROGRAMMER MANUAL                               | 40  | Y |
| MEGURO           | MAK-6581      | AUDIO ANALYZER INSTRUCTION MANUAL               | 86  | Y |
| MFJ              | 219           | UHF SWR ANALYSER OPERATING MANUAL               |     |   |
| MFJ              | 8621          | PACKET ONLY DATA RADIO OPERATING MANUAL         | 16  | Y |
| MFJ              | 1270C         | TNC ( NO CIRCUITS )                             | 264 | Y |
| MFJ              | 462B          | MULTIREADER OPERATING MANUAL                    |     |   |
| MICROWAVEMODULES | MM1500        | 1.5GHZ TX/RX SERVICE MANUAL                     | 78  | Y |
| MICROWAVEMODULES | MMA144V       | 144MHZ RF SWITCHED PRE-AMP                      | 2   | Y |
| MICROWAVEMODULES | MMC144-28     | 144MHz CONVERTER                                | 4   | Y |
| MICROWAVEMODULES | MMC50         | 28- 50MHz CONVERTER                             | 4   | Y |
| MICROWAVEMODULES | MML106        | 106 MHZ PA CONVERSION TO 144MHZ                 | 7   | Y |
| MICROWAVEMODULES | MTV3010       | S-BAND FM TV TRANSMITTER INSTRUCTION MANUAL     |     |   |
| MIDLAND          | 70-250B       | UHF FM HANDHELD SERVICE MANUAL                  |     |   |
| MIDLAND          | 70-325        | VHF MOBILE SERVICE MANUAL                       |     |   |
| MIDLAND          | 70-335        | VHF MOBILE SERVICE MANUAL                       |     |   |
| MIDLAND          | 70-340        | MOBILE TX/RX OPERATING & SERVICE MANUAL         |     |   |
| MIDLAND          | 70-375        | VHF MOBILE SERVICE MANUAL                       |     |   |
| MIDLAND          | 70-380/480    | MOBILE TX/RX SERVICE MANUAL                     | 107 | Y |
| MIDLAND          | 70-435        | VHF MOBILE SERVICE MANUAL                       |     |   |
| MIDLAND          | 70-565/665    | MOBILE TX/RX SERVICE MANUAL                     | 105 | Y |
| MIDLAND          | 70-650B       | UHF MOBILE SERVICE MANUAL                       |     |   |
| MILES HIVOLT     | TH25          | HIGH VOLTAGE SUPPLY INSTRUCTION MANUAL          | 20  | Y |
| MIRAGE           | A-1015-G      | 6M AMPLIFIER                                    | 6   | Y |
| MIZUHO           | SB-2M         | 144MHZ SSB/CW TRANSCEIVER INSTRUCTION MANUAL    | 10  | Y |
| MODAR            | TRITON        | MARINE RADIO OP & MAINTENANCE MANUAL            |     |   |
| MODAR            | TRITON 55/75  | MARINE RADIO OP & MAINTENANCE MANUAL            |     |   |
| MOTOROLA         | ASTRO         | RADIO SERVICE SOFTWARE USER GUIDE               | 440 | Y |
| MOTOROLA         | GM300         | SERVICE MANUAL                                  | 93  | Y |
| MOTOROLA         | GP900         | TECHNICAL MANUAL                                | 120 | Y |
| MOTOROLA         | GP1200        | SEE GP900                                       | 120 | Y |
| MOTOROLA         | GP3600        | SEE GP900                                       | 120 | Y |
| MOTOROLA         | HT440         | PORTABLE RADIO SERVICE MANUAL                   | 24  | Y |
| MOTOROLA         | HT800         | HANDHELD OPERATING INSTRUCTIONS                 | 22  | Y |
| MOTOROLA         | HT800         | HANDHELD THEORY/MAINTENANCE MANUAL              | 46  | Y |
| MOTOROLA         | HT800         | HANDHELD 146-162, 157-174 SERVICE MANUAL        | 44  | Y |
| MOTOROLA         | HT1100        | SEE GP900                                       | 120 | Y |
| MOTOROLA         | MC 80 (VHF)   | VHF MOBILE SERVICE MANUAL                       | 44  | Y |
| MOTOROLA         | MC 80 (UHF)   | UHF MOBILE SERVICE MANUAL                       | 47  | Y |
| MOTOROLA         | MCX100        | MOBILE TX/RX SERVICE MANUAL                     | 43  | Y |
| MOTOROLA         | MITREK        | VHF MOBILE INSTRUCTION MANUAL                   | 108 | Y |
| MOTOROLA         | MT700         | SINGLE-UNIT BATTERY CHARGER                     | 10  | Y |
| MOTOROLA         | MT 700        | FM UHF HANDHELD INSTRUCTION MANUAL              | 45  | Y |
| MOTOROLA         | MT 700        | FM UHF HANDHELD SERVICE MANUAL                  | 31  | Y |
| MOTOROLA         | MT2100        | SEE GP900                                       | 120 | Y |

|             |                     |                                                   |     |   |
|-------------|---------------------|---------------------------------------------------|-----|---|
| MOTOROLA    | MTS2000             | SEE GP900                                         | 120 | Y |
| MOTOROLA    | MX300               | CONVERTA-COM CONSOLE INSTRUCTION MANUAL           | 47  | Y |
| MOTOROLA    | MX1000              | 68-88 MHZ SERVICE MANUAL                          | 32  | Y |
| MOTOROLA    | MX1000              | 146-174 MHZ SERVICE MANUAL                        | 30  | Y |
| MOTOROLA    | MX3000              | OPERATING INSTRUCTIONS                            |     |   |
| MOTOROLA    | N1275A              | UHF POWER AMPLIFIER                               | 17  | Y |
| MOTOROLA    | PTX1200             | SEE GP900                                         | 120 | Y |
| MOTOROLA    | PTX3600             | SEE GP900                                         | 120 | Y |
| MOTOROLA    | R1013A              | SINAD METER                                       | 11  | Y |
| MOTOROLA    | R-1200A             | SERVICE MONITOR OPERATING & MAINTENANCE MANUAL    | 467 | Y |
| MOTOROLA    | R-1201A             | SIGNAL GENERATOR OPERATING & SERVICE MANUAL       | 314 | Y |
| MOTOROLA    | R-2001D             | COMMS SYSTEM ANALYSER OPERATOR'S MANUAL           | 95  | Y |
| MOTOROLA    | R-2002D/2009D/2011D | COMMS SYSTEM ANALYSER OPERATOR'S MANUAL           | 55  | Y |
| MOTOROLA    | R2008D/R2010D       | COMMS SYSTEM ANALYSER OPERATOR'S MANUAL           | 43  | Y |
| MOTOROLA    | R-2200A             | COMMS SERVICE MONITOR OPERATORS MANUAL            | 28  | Y |
| MOTOROLA    | R-2200A             | COMMS SERVICE MONITOR SERVICE MANUAL              | 261 | Y |
| MOTOROLA    | R-2200,R-2400       | COMMS SERVICE MONITOR OPERATORS MANUAL            | 42  | Y |
| MOTOROLA    | R-2550,R-2600       | COMMS SYSTEM ANALYZER PROGRAMMING REFERENCE       | 198 | Y |
| MOTOROLA    | R-2600              | COMMS SYSTEM ANALYZER OPERATING MANUAL            | 103 | Y |
| MOTOROLA    | R-2600A             | COMMS SYSTEM ANALYZER MAINTENANCE MANUAL          | 502 | Y |
| MOTOROLA    | RTX-4005B           | PORTABLE RADIO TEST SET                           | 10  | Y |
| MOTOROLA    | SABER               | VEHICULAR ADAPTER INSTRUCTION MANUAL              | 26  | Y |
| MOTOROLA    | SECURE MODULES      | SUPPLEMENT FOR MTS 2000 RADIOS                    | 19  | Y |
| MOTOROLA    | STARPOINT           | 1.5GHZ TX/RX INSTRUCTION MANUAL                   | 11  | Y |
| MOTOROLA    | STONE REMOTE        | CONTROL CONSOLE INSTRUCTION MANUAL                |     |   |
| MOTOROLA    | TRITON              | MODAR MARINE RADIO OP & MAINTENANCE MANUAL        |     |   |
| MOTOROLA    | TRITON 55/75        | MODAR MARINE RADIO OP & MAINTENANCE MANUAL        |     |   |
| MOTOROLA    | VISAR               | SERVICE WITH THEORY / MAINTENANCE                 | 124 | Y |
| MUTEK       | GFBA144E            | 2M LNA INSTRUCTION MANUAL                         |     |   |
| MUTEK       | GLNA432E            | 70CM LNA INSTRUCTION MANUAL                       |     |   |
| MUTEK       | SBLA                | 2M PREAMP INSTRUCTION MANUAL                      |     |   |
| MUTEK       | TLNA432             | 432MHZ PREAMP INSTRUCTION MANUAL                  |     |   |
| NABISHI     | 901V/9100V          | HANDPORTABLE/MOBILE SERVICE MANUAL                | 53  | Y |
| NARDA       | XT                  | NARDALERT XT USER'S GUIDE                         | 36  | Y |
| NAVICO      | AMR1000/1000S       | 2M FM MOBILE OPERATING & SERVICE MANUAL           | 72  | Y |
| NAVICO      | RT6500B             | VHF MARINE TECHNICAL MANUAL                       | 34  | Y |
| NEC         | ATR-400M            | UHF MOBILE SERVICE MANUAL                         |     |   |
| NEMS-CLARKE | 1907                | SPECIAL PURPOSE RECEIVER INSTRUCTION BOOK         | 49  | Y |
| NEUWIRTH    | FOG A5              | TONE GEN/DECODER SERVICE (IN GERMAN)              |     |   |
| NEUWIRTH    | FOGA 5              | SELECTIVE CALL TEST SET USER MANUAL               | 20  | Y |
| NORSK-MAR   | NM1406B             | UHF TV AMPLIFIER SERVICE MANUAL                   |     |   |
| NATIONAL    | HRO-500             | SOLID STATE COMMS RECEIVER INSTRUCTION MANUAL     | 61  | Y |
| OYSTER      | +4                  | HANDHELD DATA TERMINAL                            | 14  | Y |
| PAC-COMM    | SPIRIT-2            | TNC                                               | 206 | Y |
| PAC-COMM    | TINY2               | TNC                                               | 81  | Y |
| PACE        | FM3625              | FLEETMASTER TX/RX SERVICE MANUAL                  | 77  | Y |
| PAE         | 1700                | SCANNING RECEIVER OPERATING MANUAL                | 9   | Y |
| PAE         | 1700                | SCANNING RECEIVER TECHNICAL HANDBOOK              | 42  | Y |
| PAE         | ADA2000             | ANTENNA DISTRIBUTION AMPLIFIER TECHNICAL HANDBOOK | 14  | Y |
| PALOMAR     | RX NOISE BRIDGE     | OPERATORS MANUAL                                  | 10  | Y |
| PANDA       | PR120V              | HF TX INSTRUCTIONS                                | 16  | Y |
| PEAK        | DCA50e              | COMPONENT ANALYSER USER GUIDE                     | 8   | Y |
| PHILIPS     | 502P                | VHF FM HANDHELD SERVICE MANUAL                    |     |   |
| PHILIPS     | BC34                | BATTERY CHARGER SERVICE MANUAL                    | 7   | Y |
| PHILIPS     | BC40                | BATTERY CHARGER SERVICE MANUAL                    | 12  | Y |
| PHILIPS     | F494/F496           | VHF/UHF BASE STATION SERVICE MANUAL               |     |   |
| PHILIPS     | FM1000 SERIES       | VHF/UHF FM MOBILE SERVICE MANUAL                  | 170 | Y |
| PHILIPS     | FM1100              | BASIC CONSOLE USERS GUIDE                         | 18  | Y |
| PHILIPS     | FM1100              | KEYPAD CONSOLE USERS GUIDE                        | 14  | Y |
| PHILIPS     | FM1100              | STD CONSOLE USERS GUIDE                           | 28  | Y |
| PHILIPS     | FM1100              | FIELD SERVICE AID USER MANUAL                     | 42  | Y |
| PHILIPS     | FM1100              | VHF/UHF FM MOBILE SERVICE MANUAL                  | 294 | Y |
| PHILIPS     | FM1200              | VHF/UHF FM MOBILE USERS GUIDE                     | 24  | Y |
| PHILIPS     | FM1200              | COMPREHENSIVE DATA PROGRAMMER USER MANUAL         | 134 | Y |
| PHILIPS     | FM1200/FM1300       | SUPPLEMENT TO SERVICE MANUAL                      | 98  | Y |
| PHILIPS     | FM1300              | COMPREHENSIVE DATA PROGRAMMER USER MANUAL         | 75  | Y |
| PHILIPS     | FR5000              | VHF BASE STATION SERVICE MANUAL                   | 213 | Y |
| PHILIPS     | LM40                | VHF/UHF MOBILE SERVICE MANUAL                     | 49  | Y |
| PHILIPS     | LM60/LM70           | VHF/UHF MOBILE SERVICE MANUAL                     | 60  | Y |
| PHILIPS     | LP1510              | VHF/UHF FM PORTABLE USER GUIDE                    | 2   | Y |
| PHILIPS     | LP20                | VHF/UHF FM PORTABLE SERVICE MANUAL                | 52  | Y |
| PHILIPS     | LP30                | VHF/UHF FM PORTABLE SERVICE MANUAL                | 25  | Y |
| PHILIPS     | LP70                | VHF/UHF FM PORTABLE SERVICE MANUAL                | 117 | Y |
| PHILIPS     | M81S                | BASE STATION CONTROLLER LEVEL 2 SERVICE MANUAL    | 42  | Y |
| PHILIPS     | MX295               | VHF FM MOBILE SERVICE MANUAL                      |     |   |
| PHILIPS     | P1002/P1012         | VHF/UHF PORTABLE TRANSCEIVER SERVICE MANUAL       | 68  | Y |
| PHILIPS     | P1020/P1030         | VHF/UHF PORTABLE TRANSCEIVER SERVICE MANUAL       | 46  | Y |

|         |                     |                                                   |     |   |
|---------|---------------------|---------------------------------------------------|-----|---|
| PHILIPS | PM2120              | UNIVERSAL SWITCH                                  | 4   | Y |
| PHILIPS | PM2534/35           | WITH PM9190 RS232 INTERFACE                       | 22  | Y |
| PHILIPS | PM3055              | OSCILLOSCOPE SERVICE MANUAL                       | 176 | Y |
| PHILIPS | PM3065/3067         | OSCILLOSCOPE SERVICE MANUAL                       | 192 | Y |
| PHILIPS | PM3200              | OSCILLOSCOPE OPERATING & SERVICE MANUAL           |     |   |
| PHILIPS | PM3206              | OSCILLOSCOPE OPERATING MANUAL                     | 11  | Y |
| PHILIPS | PM3207              | OSCILLOSCOPE OPERATING MANUAL                     | 8   | Y |
| PHILIPS | PM3207              | OSCILLOSCOPE SERVICE MANUAL                       | 60  | Y |
| PHILIPS | PM3211              | OSCILLOSCOPE INSTRUCTION MANUAL - ENGLISH         | 60  | Y |
| PHILIPS | PM3211              | OSCILLOSCOPE INSTRUCTION MANUAL - MULTILINGUAL    | 96  | Y |
| PHILIPS | PM3212              | OSCILLOSCOPE INSTRUCTION MANUAL                   |     |   |
| PHILIPS | PM3214              | OSCILLOSCOPE INSTRUCTION MANUAL                   |     |   |
| PHILIPS | PM3216              | OSCILLOSCOPE INSTRUCTION MANUAL                   |     |   |
| PHILIPS | PM3217              | OSCILLOSCOPE OPERATING MANUAL                     | 96  | Y |
| PHILIPS | PM3218              | OSCILLOSCOPE INSTRUCTION MANUAL                   |     |   |
| PHILIPS | PM3219U             | OSCILLOSCOPE OPERATING MANUAL                     | 41  | Y |
| PHILIPS | PM3219              | OSCILLOSCOPE SERVICE MANUAL                       | 171 | Y |
| PHILIPS | PM3232              | OSCILLOSCOPE INSTRUCTION MANUAL                   |     |   |
| PHILIPS | PM3234              | OSCILLOSCOPE INSTRUCTION MANUAL                   |     |   |
| PHILIPS | PM3243              | OSCILLOSCOPE INSTRUCTION MANUAL                   |     |   |
| PHILIPS | PM3244              | OSCILLOSCOPE INSTRUCTION MANUAL                   |     |   |
| PHILIPS | PM3260              | OSCILLOSCOPE OPERATING MANUAL                     |     |   |
| PHILIPS | PM3260              | OSCILLOSCOPE INSTRUCTION MANUAL                   | 154 | Y |
| PHILIPS | PM3262              | OSCILLOSCOPE INSTRUCTION MANUAL                   | 232 | Y |
| PHILIPS | PM3265              | OSCILLOSCOPE OPERATING & SERVICE MANUAL           |     |   |
| PHILIPS | PM3266              | OSCILLOSCOPE OPERATING & SERVICE MANUAL           |     |   |
| PHILIPS | PM3267              | BASIC PRINCIPLES OF OSCILLOSCOPES                 |     |   |
| PHILIPS | PM3267              | OSCILLOSCOPE SERVICE MANUAL                       | 201 | Y |
| PHILIPS | PM3305(U)           | OSCILLOSCOPE SERVICE MANUAL                       | 297 | Y |
| PHILIPS | PM3310              | OSCILLOSCOPE SERVICE MANUAL                       | 345 | Y |
| PHILIPS | PM3365A/67A/75/77   | 100 MHZ DIG. STORAGE SCOPE SERVICE MANUAL         | 417 | Y |
| PHILIPS | PM6666              | PROGRAMMABLE TIMER/COUNTER OPERATING MANUAL       | 54  | Y |
| PHILIPS | PM6667/8            | FREQUENCY COUNTER INSTRUCTION MANUAL              |     |   |
| PHILIPS | PM6673-PM6676       | UNIVERSAL FREQUENCY COUNTER OPERATING MANUAL      | 16  | Y |
| PHILIPS | PM6680              | 225MHZ TIMER/COUNTER OPERATING                    | 240 | Y |
| PHILIPS | PM6680              | 225MHZ TIMER/COUNTER PROGRAMMING                  | 366 | Y |
| PHILIPS | PM8943              | FET PROBE INSTRUCTION MANUAL                      | 63  | Y |
| PHILIPS | PM9010              | 100 MHZ SCOPE PROBE                               | 14  | Y |
| PHILIPS | PMR PUBLICATIONS    | PMR PUBLICATIONS TECH DOC CATALOGUE               | 21  | Y |
| PHILIPS | PR710               | VHF/UHF TRANSCEIVER SERVICE MANUAL                | 100 | Y |
| PHILIPS | PR710               | ADVANCED DATA PROGRAMMER USER MANUAL              | 53  | Y |
| PHILIPS | PR720               | VHF TRUNKING PORTABLE SERVICE MANUAL              | 68  | Y |
| PHILIPS | PR720               | ADVANCED DATA PROGRAMMER USER MANUAL              | 30  | Y |
| PHILIPS | PR720               | STANDARD DATA PROGRAMMER USER MANUAL              | 41  | Y |
| PHILIPS | PRF10 SERIES        | VHF/UHF FM BASE STATION SERVICE MANUAL            | 254 | Y |
| PHILIPS | PRF1050/1060        | VHF/UHF FM BASE STATION SERVICE MANUAL            | 89  | Y |
| PHILIPS | PRG1032             | VHF ALPHANUMERIC PAGER                            | 96  | Y |
| PHILIPS | PRM8010/8020        | VHF/UHF MOBILE TX/RX SERVICE MANUAL               | 220 | Y |
| PHILIPS | PRM8060/8070        | VHF/UHF MOBILE TX/RX SERVICE MANUAL               | 148 | Y |
| PHILIPS | PRP73               | VHF/UHF PORTABLE RADIO LEVEL 3 SERVICE MANUAL     | 177 | Y |
| PHILIPS | PRP74               | VHF/UHF PORTABLE RADIO LEVEL 3 SERVICE MANUAL     | 148 | Y |
| PHILIPS | PRP76               | VHF/UHF PORTABLE RADIO LEVEL 3 SERVICE MANUAL     | 158 | Y |
| PHILIPS | PRX10               | POWER SUPPLY LEVEL 1 AND 2 SERVICE MANUAL         | 8   | Y |
| PHILIPS | PRX10/PRX20         | POWER SUPPLY UNITS SERVICE MANUAL                 | 13  | Y |
| PLESSEY | PRD 1100 MK II      | RADIO RELAY EQUIPMENT SERVICE MANUAL              | 77  | Y |
| PLESSEY | PRD 1100 MK II      | RADIO RELAY ( 930-470MHz) SERVICE MANUAL VOLUME 2 |     |   |
| PLESSEY | PR2250              | RECEIVER TECHNICAL MANUAL PART 1                  | 41  | Y |
| PLESSEY | PR2250              | RECEIVER TECHNICAL MANUAL PART 2                  | 44  | Y |
| PLESSEY | RT320               | HF RADIO SERVICE MANUAL VOLUME 2                  |     |   |
| PMI     | 1018B               | LOG/LIN RF PEAK POWER METER INSTRUCTION MANUAL    | 120 | Y |
| PMI     | 1038-V13            | VERTICAL LOG AMP PLUG-IN INSTRUCTION MANUAL       |     |   |
| PMI     | 1045                | RF POWER METER INSTRUCTION MANUAL                 |     |   |
| POCOM   | AFR-1000            | OPERATING MANUAL                                  | 23  | Y |
| POLAR   | 700                 | TONEOHM OPERATING MANUAL                          | 16  | Y |
| POLAR   | B2000               | MICROPROCESSOR SYSTEM TESTER                      | 30  | Y |
| POLAR   | T2500/T3000         | OPERATOR MANUAL                                   | 70  | Y |
| POLARAD | 630A,631A,640A,641A | MICROWAVE SPECTRUM ANALYZER                       | 334 | Y |
| POLARAD | 1605B-T             | MICROWAVE SIG GEN INSTRUCTION MANUAL              |     |   |
| POLARAD | SA-84W              | OPERATING & MAINTENANCE INSTRUCTIONS              | 188 | Y |
| PSION   | WORKABOUT           | USER GUIDE                                        | 322 | Y |
| PYE     | A100                | 1KW VHF LINEAR AMPLIFIER CIRCUIT DIAGRAM          | 5   | Y |
| PYE     | AC200PU             | POWER SUPPLY OPERATING & SERVICE MANUAL           |     |   |
| PYE     | AC25PU              | POWER SUPPLY SERVICE MANUAL                       | 7   | Y |
| PYE     | AC90PU              | POWER SUPPLY SERVICE MANUAL                       | 23  | Y |
| PYE     | ATU4                | ATU SERVICE MANUAL                                | 12  | Y |
| PYE     | BC23                | AUTOMATIC BATTERY CHARGER SERVICE MANUAL          | 11  | Y |
| PYE     | BC24                | AUTOMATIC BATTERY CHARGER SERVICE MANUAL          | 15  | Y |

|            |                 |                                                   |     |   |
|------------|-----------------|---------------------------------------------------|-----|---|
| PYE        | DESK MICROPHONE | SERVICE MANUAL                                    | 10  | Y |
| PYE        | F9U             | UHF FIXED STATION SERVICE MANUAL                  |     |   |
| PYE        | HS400           | HIGH STABILITY DRIVE UNIT                         | 9   | Y |
| PYE        | L300            | RADIO LINK PART 1 SERVICE MANUAL                  |     |   |
| PYE        | M256AB          | BEAVER VHF FM SUPPLEMENT TO SERVICE MANUAL        | 26  | Y |
| PYE        | M293            | VHF AM MOBILE SERVICE MANUAL                      | 63  | Y |
| PYE        | MF25FM          | EUROPA VHF FM MOBILE SERVICE SHEET                | 12  | Y |
| PYE        | MF25PU          | CONVERTER UNIT                                    | 6   | Y |
| PYE        | MM1             | MODULATION METER OPER & SERVICE INSTRUCTIONS      | 29  | Y |
| PYE        | MX290           | 40/80 CHANNEL SUPPLEMENT                          | 13  | Y |
| PYE        | MX293           | VHF AM MOBILE SERVICE MANUAL                      | 68  | Y |
| PYE        | MX294           | VHF FM MOBILE SERVICE MANUAL                      | 137 | Y |
| PYE        | ON-FREQ RPTR    | UHF ON-FREQUENCY REPEATER SERVICE MANUAL          | 82  | Y |
| PYE        | P5001           | POCKETPHONE VHF AM TRANSCEIVER SERVICE MANUAL     | 76  | Y |
| PYE        | PF2FMB          | POCKETPHONE 70 SERVICE SHEET                      | 16  | Y |
| PYE        | PF85            | SERVICE MANUAL                                    | 106 | Y |
| PYE        | PF85 ( C )      | INTRINSICALLY SAFE SUPPLEMENT                     | 38  | Y |
| PYE        | PF85/PFX        | VEHICLE ADAPTOR KIT SERVICE MANUAL                | 21  | Y |
| PYE        | PFX             | POCKETPHONE VHF/UHF FM TRANSCEIVER SERVICE MANUAL | 146 | Y |
| PYE        | PFX             | SUPPLEMENT TO SERVICE MANUAL                      | 51  | Y |
| PYE        | PT506           | MARKER OSCILLATOR INSTRUCTION CARD                | 4   | Y |
| PYE        | PT507/PT508     | MARKER OSCILLATOR INSTRUCTION CARD                | 4   | Y |
| PYE        | PTC113          | VHF RADIOTELEPHONE TECHNICAL INSTRUCTIONS         | 27  | Y |
| PYE        | PYECALL         | UHF SELECTIVE CALLING SYSTEM                      | 22  | Y |
| PYE        | S2P             | MOBILE SCRAMBLER SERVICE MANUAL                   | 27  | Y |
| PYE        | SG1/U           | UHF SIG GEN OPERATING & SERVICE INSTRUCTIONS      | 8   | Y |
| PYE        | SG3V            | VHF SIG GEN OPERATING & SERVICE INSTRUCTIONS      | 13  | Y |
| PYE        | SG5U            | UHF SIG GEN OPERATING & SERVICE INSTRUCTIONS      | 11  | Y |
| PYE        | SSB130 M/F      | SSB HF RADIOTELEPHONE SERVICE MANUAL              | 100 | Y |
| PYE        | SSB1000T        | SSB HF TRANSMITTER SERVICE MANUAL                 | 75  | Y |
| PYE        | SSB TELERADIO   | SSB TELERADIO UNIT SERVICE MANUAL                 | 21  | Y |
| PYE        | T406            | VHF FM FIXED STATION TRANSMITTER SERVICE MANUAL   | 93  | Y |
| PYE        | TM3             | IF SIGNAL GENERATOR OPERATING & SERVICE           | 6   | Y |
| PYE        | TM4             | TEST METER                                        | 6   | Y |
| PYE        | W15AM           | VHF AM MOBILE SERVICE MANUAL                      | 74  | Y |
| QUARTZLOCK | 2A-01           | OFF AIR FREQUENCY STANDARD MANUAL                 | 16  | Y |
| QUARTZLOCK | 10A-01          | RUBIDIUM FREQUENCY STANDARD INSTRUCTION MANUAL    | 37  | Y |
| RACAL      | 835             | COUNTER/TIMER TECHNICAL MANUAL                    | 92  | Y |
| RACAL      | 836             | COUNTER TECHNICAL MANUAL                          | 39  | Y |
| RACAL      | 852             | VHF/UHF CALIBRATOR TECHNICAL MANUAL               | 54  | Y |
| RACAL      | 1991,1992       | FREQUENCY COUNTER INSTRUCTION MANUAL              | 240 | Y |
| RACAL      | 1998.1999       | FREQUENCY COUNTER OPERATORS MANUAL                | 72  | Y |
| RACAL      | 1998.1999       | FREQUENCY COUNTER SERVICE MANUAL                  | 253 | Y |
| RACAL      | 2101            | MICROWAVE COUNTER OPERATORS MANUAL                | 91  | Y |
| RACAL      | 2201            | FREQUENCY COUNTER USER MANUAL                     | 128 | Y |
| RACAL      | 2251A           | FREQUENCY COUNTER OPERATORS MANUAL                | 108 | Y |
| RACAL      | 2461C           | FREQUENCY COUNTER OPERATORS MANUAL                | 150 | Y |
| RACAL      | 4152A           | DIGITAL MULTIMETER INSTRUCTION MANUAL             | 202 | Y |
| RACAL      | 6103B           | DIGITAL RADIO TEST SET OPERATING MANUAL           | 224 | Y |
| RACAL      | 9008            | AUTO MOD METER OPERATORS HANDBOOK                 | 16  | Y |
| RACAL      | 9008            | AUTO MOD METER MAINTENANCE MANUAL                 | 95  | Y |
| RACAL      | 9009            | AUTO MOD METER OPERATORS HANDBOOK                 | 24  | Y |
| RACAL      | 9009            | AUTO MOD METER MAINTENANCE MANUAL                 | 87  | Y |
| RACAL      | 9024            | FREQUENCY-PERIOD METER TECHNICAL MANUAL           | 106 | Y |
| RACAL      | 9036            | COUNTER TECHNICAL MANUAL                          | 39  | Y |
| RACAL      | 9037            | COUNTER TECHNICAL MANUAL                          | 39  | Y |
| RACAL      | 9038            | COUNTER TECHNICAL MANUAL                          | 39  | Y |
| RACAL      | 9081/9082       | SIG. GEN. MAINTENANCE MANUAL                      | 138 | Y |
| RACAL      | 9084            | SIG. GEN. MAINTENANCE MANUAL                      | 338 | Y |
| RACAL      | 9087            | SYNTHESIZED SIG GEN OPERATORS MANUAL              |     |   |
| RACAL      | 9087            | SYNTHESIZED SIG GEN MAINTENANCE MANUAL            | 342 | Y |
| RACAL      | 9100            | POWER METER OPERATING/MAINTENANCE MANUAL          | 2   | Y |
| RACAL      | 9104            | RF POWER METER TECHNICAL MANUAL                   | 42  | Y |
| RACAL      | 9105            | RF MICROWATTMETER MAINTENANCE MANUAL              | 80  | Y |
| RACAL      | 9215            | PROGRAMMABLE POWER SUPPLY USER MANUAL             | 52  | Y |
| RACAL      | 9303            | TRUE RMS RF LEVEL METER OPERATING MANUAL          | 62  | Y |
| RACAL      | 9303            | TRUE RMS RF LEVEL METER MAINTENANCE MANUAL        | 218 | Y |
| RACAL      | 9475            | RUBIDIUM FREQUENCY STANDARD INSTRUCTION MANUAL    | 35  | Y |
| RACAL      | 9841            | 3GHZ FREQUENCY METER OPERATORS MANUAL             | 15  | Y |
| RACAL      | 9900            | UNIVERSAL COUNTER-TIMER OPERATING & SERVICE       |     |   |
| RACAL      | 9904            | UNIVERSAL COUNTER-TIMER OPERATING                 | 22  | Y |
| RACAL      | 9904            | UNIVERSAL COUNTER-TIMER MAINTENANCE               | 106 | Y |
| RACAL      | 9905            | UNIVERSAL COUNTER OPERATING & SERVICE MANUAL      |     |   |
| RACAL      | 9911.9913       | VHF FREQUENCY METERS OPERATORS HANDBOOK           | 19  | Y |
| RACAL      | 9915            | FREQUENCY COUNTER OPERATORS HANDBOOK              | 28  | Y |
| RACAL      | 9915            | FREQUENCY COUNTER OP & MAINT MANUAL               | 87  | Y |
| RACAL      | 9916            | FREQUENCY COUNTER OPERATORS HANDBOOK              | 33  | Y |

|               |                      |                                                    |     |   |
|---------------|----------------------|----------------------------------------------------|-----|---|
| RACAL         | 9917                 | UHF COUNTER TECHNICAL MANUAL                       | 28  | Y |
| RACAL         | 9918, 9921           | UHF FREQUENCY METER MAINTENANCE                    | 121 | Y |
| RACAL         | 9301A                | MILLIVOLTMETER OPERATING & MAINTENANCE MANUAL      | 71  | Y |
| RACAL         | BCC66HP              | JAGUAR MANPACK RADIO USER HANDBOOK                 | 91  | Y |
| RACAL         | LW8KM/LW8AM          | TACTICAL DIPOLE USER MANUAL                        | 22  | Y |
| RACAL         | MA168B               | DUAL DIVERSITY SWITCHING UNIT                      | 63  | Y |
| RACAL         | MA987C/D             | AUDIO AMPLIFIER UNIT TECHNICAL MANUAL              | 30  | Y |
| RACAL         | MA2731               | BULK ENCRYPTION UNIT FIELD WORKSHOP REPAIR MANUAL  | 53  | Y |
| RACAL         | MA4009               | REBROADCAST CONTROL UNIT TECHNICAL MANUAL          | 37  | Y |
| RACAL         | MA4010               | RECORDER UNIT - PART MANUAL                        | 43  | Y |
| RACAL         | MA4014B              | ENCRYPTION UNIT TECHNICAL MANUAL                   | 154 | Y |
| RACAL         | MA4015               | 32 WAY HF FILTER UNIT TECHNICAL MANUAL             | 60  | Y |
| RACAL         | MA4085               | AUDIO AMPLIFIER & AC POWER UNIT TECHNICAL MANUAL   | 27  | Y |
| RACAL         | MA4177,MA4178        | AC POWER UNIT TECHNICAL MANUAL                     | 51  | Y |
| RACAL         | MA4224               | AUDIO ENCRYPTION UNIT TECHNICAL MANUAL             | 194 | Y |
| RACAL         | MA4225               | MINIATURE ENCRYPTION UNIT TECHNICAL MANUAL         | 116 | Y |
| RACAL         | MA4226/MA4298/MA4223 | SECURE TELEPHONE SYSTEM TECHNICAL MANUAL           | 129 | Y |
| RACAL         | MA4227               | PORTABLE TELEPHONE ENCRYPTION UNIT TECHNICAL MAN   | 88  | Y |
| RACAL         | MA4230               | MORSE ENCODER TECHNICAL MANUAL                     | 25  | Y |
| RACAL         | MA4230/MA4231 CONV.  | MA4230/4231 CONVERSION NOTES                       | 7   | Y |
| RACAL         | MA4231               | MORSE RECEIVER TECHNICAL MANUAL                    | 47  | Y |
| RACAL         | MA4235               | MORSE SYSTEM LINE ADAPTER                          | 7   | Y |
| RACAL         | MA4248               | MEROD TECHNICAL MANUAL                             | 161 | Y |
| RACAL         | MA4254/MA4255        | MASTER KEYFILL TECHNICAL MANUAL                    | 134 | Y |
| RACAL         | MA4258B              | VOICE SCRAMBLER TECHNICAL MANUAL                   | 91  | Y |
| RACAL         | MA4400               | SECURE TELEPHONE TECHNICAL MANUAL                  | 138 | Y |
| RACAL         | MA4414               | AUDIO ENCRYPTION UNIT (SUPPLEMENT TO MA4224) TECH. | 39  | Y |
| RACAL         | MA4463               | DIGITAL VOICE ENCRYPTION UNIT TECHNICAL MANUAL     | 122 | Y |
| RACAL         | MA4470               | AUDIO ENCRYPTION UNIT MAINTENANCE MANUAL           | 83  | Y |
| RACAL         | MA4777/A/B/C         | DIGITAL ENCRYPTION UNIT TECHNICAL MANUAL           | 165 | Y |
| RACAL         | MA79                 | DRIVE UNIT TECHNICAL MANUAL                        | 151 | Y |
| RACAL         | PRM4021ED            | HF TRANSCEIVER USER HANDBOOK                       | 53  | Y |
| RACAL         | PRM4735HA            | COVERT VHF TRANSCEIVER TECHNICAL MANUAL            | 245 | Y |
| RACAL         | RA117                | HF RX TECHNICAL MANUAL                             | 139 | Y |
| RACAL         | RA17                 | RX TECHNICAL MANUAL                                | 70  | Y |
| RACAL         | RA17L                | RX OPERATING & TECHNICAL MANUAL                    | 87  | Y |
| RACAL         | RA1792               | HF RECEIVER OPERATING MANUAL                       | 61  | Y |
| RACAL         | RA1792               | HF RECEIVER MAINTENANCE MANUAL                     | 473 | Y |
| RACAL         | RA2091               | RX TECHNICAL MANUAL                                | 111 | Y |
| RACAL         | RA329B               | HF RX SYSTEM MAINTENANCE MANUAL                    | 294 | Y |
| RACAL         | RA6790               | RX TECHNICAL MANUAL (PART)                         |     | Y |
| RACAL         | RA98                 | ISB ADAPTOR TECHNICAL MANUAL                       | 93  | Y |
| RACAL         | TA940B               | 100 WATT LINEAR AMPLIFIER TECHNICAL MANUAL         | 48  | Y |
| RACAL         | TA1823               | AUTO-TUNED HF LINEAR AMPLIFIER TECHNICAL MANUAL    | 206 | Y |
| RACAL         | TRA906               | HF SSB TRANSMITTER-RECEIVER TECHNICAL MANUAL       | 82  | Y |
| RACAL         | TRA921               | HF SSB MANPACK TECHNICAL MANUAL                    | 144 | Y |
| RACAL         | TRA922               | HF SSB MANPACK TECHNICAL MANUAL                    | 63  | Y |
| RACAL         | TRA931XH             | TX/RX TECHNICAL MANUAL                             | 298 | Y |
| RACAL         | TRA967               | VHF TX/RX TECHNICAL MANUAL (SOME PAGES MISSING)    | 190 | Y |
| RACAL         | TRA3755/3756         | HF TRANSCEIVER TECHNICAL MANUAL                    | 496 | Y |
| RADIOMETER    | AFM1b                | MODULATION METER INSTRUCTION MANUAL                | 38  | Y |
| RADIOMETER    | RV36                 | AF MILLIVOLTMETER INSTRUCTION MANUAL               | 12  | Y |
| RADIOMETER    | RV36c                | AF MILLIVOLTMETER INSTRUCTION MANUAL               | 12  | Y |
| RANGER        | SRA-2300             | AUTO ATU SERVICE MANUAL                            | 15  | Y |
| RCA           | AR-88LF              | HF RECEIVER INSTRUCTIONS                           | 31  | Y |
| RCA           | CRUISEPHONE 25       | 25 WATT RADIOTELEPHONE INSTRUCTION BOOK            | 29  | Y |
| RE            | AFM2                 | MODULATION METER                                   |     |   |
| REALISTIC     | HTX-202              | SERVICE MANUAL                                     | 70  | Y |
| REDIFON       | PT2100               | VHF PAGING TX                                      | 117 | Y |
| REGENTONE     | BT21                 | TRANSISTOR PORTABLE SERVICE MANUAL                 |     |   |
| REGENTONE     | KR019 TR419          | AM/FM PORTABLE RADIO SERVICE MANUAL                |     |   |
| RM            | KL-203               | LINEAR AMPLIFIER                                   | 2   | Y |
| ROBAND        | 33-10                | VARIABLE PSU SERVICE MANUAL                        | 7   | Y |
| ROBAND        | 60-5                 | VAREX TWIN PSU SERVICE MANUAL                      | 32  | Y |
| ROBOT         | 70                   | SLOW SCAN TV MONITOR INSTRUCTION BOOK              | 21  | Y |
| ROBOT         | 80                   | SLOW SCAN TV CAMERA INSTRUCTION BOOK               | 28  | Y |
| ROBOT         | 1200C                | COLOR SCAN CONVERTER INSTRUCTION BOOK              | 81  | Y |
| ROHDE&SCHWARZ | CMD54/57             | DIGITAL RADIOCOMMUNICATION TESTER OPERATING        |     |   |
| ROHDE&SCHWARZ | FSIQ                 | SIGNAL ANALYZER OPERATING MANUAL                   |     |   |
| ROHDE&SCHWARZ | FSIQ                 | SIGNAL ANALYZER SERVICE MANUAL                     |     |   |
| ROHDE&SCHWARZ | FSP3/7               | SPECTRUM ANALYZER SERVICE MANUAL INSTRUMENT        |     |   |
| ROHDE&SCHWARZ | NAP                  | POWER REFLECTION METER OPERATING & SERVICE         | 135 | Y |
| ROHDE&SCHWARZ | NGPV                 | POWER SUPPLY INSTRUCTIONS (ENGLISH)                | 44  | Y |
| ROHDE&SCHWARZ | NGPV                 | POWER SUPPLY INSTRUCTIONS (GERMAN)                 | 48  | Y |
| ROHDE&SCHWARZ | NGPV                 | POWER SUPPLY CIRCUITS                              | 54  | Y |
| ROHDE&SCHWARZ | NRT                  | POWER REFLECTION METER OPERATING MANUAL            |     |   |
| ROHDE&SCHWARZ | SMFP                 | MOBILE TESTER SERVICE MANUAL VOLUME 2              |     |   |

|                    |                   |                                                      |     |   |
|--------------------|-------------------|------------------------------------------------------|-----|---|
| ROHDE&SCHWARZ      | SMG               | SIGNAL GENERATOR SERVICE MANUAL VOLUME 2             |     |   |
| ROHDE&SCHWARZ      | SML01             | SIGNAL GENERATOR OPERATING MANUAL                    | 208 | Y |
| ROHDE&SCHWARZ      | SWOB5             | POLYSKOP SERVICE MANUAL                              | 600 | Y |
| ROHDE&SCHWARZ      | UPV/UPV66         | AUDIO ANALYZER DC-250KHZ OPERATING MANUAL            | 852 | Y |
| ROHDE&SCHWARZ      | URV5              | MILLIVOLTMETER BROCHURE                              | 8   | Y |
| ROHDE&SCHWARZ      | USVD              | UHF TEST RECEIVER OPERATING & SERVICE MANUAL         |     |   |
| SAYROSA            | 252               | AUTOMATIC MODULATION METER                           | 56  | Y |
| SCHLUMBERGER       | 1510              | SPECTRUM ANALYSER OPERATING MANUAL                   | 58  | Y |
| SCHLUMBERGER       | 1510              | SPEC ANALYSER INSTRUCTION/MAINTENANCE MANUAL         | 349 | Y |
| SCHLUMBERGER       | 4022              | STABILOCK COMMS TEST SET OPERATING MANUAL            | 67  | Y |
| SCHLUMBERGER       | 4031              | COMMS TEST SET OPERATING MANUAL                      | 331 | Y |
| SCHLUMBERGER       | 4031              | COMMS TEST SET SERVICE MANUAL VOLUME 1               | 369 | Y |
| SCHLUMBERGER       | 4031              | COMMS TEST SET SERVICE MANUAL VOLUME 2               | 443 | Y |
| SCHLUMBERGER       | 4032              | COMMS TEST SET GETTING STARTED                       | 60  | Y |
| SCHLUMBERGER       | 4032              | COMMS TEST SET OPERATING INSTRUCTIONS                | 382 | Y |
| SCHLUMBERGER       | 4922              | RADIO CODE ANALYSER OPERATING MANUAL                 | 125 | Y |
| SCIENTIFIC-ATLANTA | 1710              | MICROWAVE RECEIVER INSTRUCTION MANUAL                | 138 | Y |
| SCIENTIFIC-ATLANTA | 6611              | KU-BAND VIDEO RECEIVER INSTALL & OPERATION           | 36  | Y |
| SCS                | PTC PLUS          | PACTOR CONTROLLER USER MANUAL                        | 34  | Y |
| SEAFARER           | SEAVOICE RT550    | VHF MARINE OPERATING & MAINT HANDBOOK                | 54  | Y |
| SEAFARER           | SEAVOICE RT680    | VHF MARINE OPER & MAINT HANDBOOK                     | 56  | Y |
| SEAWARD            | PAT1000           | PORTABLE APPLIANCE TESTER OPERATING INSTRUCTIONS     | 18  | Y |
| SEAWARD            | PAT2000           | PORTABLE APPLIANCE TESTER OPERATING INSTRUCTIONS     | 20  | Y |
| SEI                | SELECTEST SUPER50 | MULTIMETER INSTRUCTION MANUAL                        | 8   | Y |
| SEIKI              | CENTURY-21D       | COMMS RECEIVER USER MANUAL                           | 8   | Y |
| SIMOCO             | PUBLICATIONS CAT  | PUBLICATIONS CATALOGUE TECHNICAL DOCUMENTATION       | 13  | Y |
| SKANTI             | R5001             | RECEIVER TECHNICAL MANUAL                            |     | Y |
| SKANTI             | 8750              | ATU                                                  | 24  | Y |
| SMALL SYSTEMS ENG  | B300              | BIDIRECTIONAL INTERFACE OPERATING                    | 14  | Y |
| SMALL SYSTEMS ENG  | LONDON 12         | PABX PROGRAMMING GUIDE                               | 22  | Y |
| SMC                | 2515/L8           | VHF MOBILE SERVICE MANUAL                            | 85  | Y |
| SMC                | 2520              | BAND III MOBILE SERVICE MANUAL                       | 89  | Y |
| SMC                | MONITORSCOPE      | INSTRUCTION MANUAL                                   | 16  | Y |
| SOLARTRON          | 7150              | DIGITAL MULTIMETER MAINTENANCE MANUAL                | 84  | Y |
| SOLARTRON          | 7151              | COMPUTING MULTIMETER OPERATING MANUAL                | 102 | Y |
| SOMMERKAMP         | FL-200B           | SSB TX OPERATING MANUAL                              | 18  | Y |
| SOMMERKAMP         | FR-100B           | COMMUNICATIONS RECEIVER OPERATING MANUAL             | 27  | Y |
| SONY               | AIR-7             | RX OPERATING INSTRUCTIONS                            | 13  | Y |
| SONY               | GDM-2036S         | MULTISCAN COLOUR MONITOR 20 INCH                     | 186 | Y |
| SONY               | ICF-2001D         | PLL SYNTHESIZED RECEIVER OPERATING INSTRUCTIONS      | 21  | Y |
| SONY               | ICF-2001D         | PLL SYNTHESIZED RECEIVER SERVICE MANUAL              | 85  | Y |
| SONY               | ICF-7600D         | PLL SYNTHESIZED RECEIVER OPERATING INSTRUCTIONS      | 14  | Y |
| SONY               | ICF-SW55          | PLL SYNTHESIZED RECEIVER SERVICE MANUAL              | 69  | Y |
| SONY               | IC-SW1            | PLL SYNTHESIZED RECEIVER SERVICE MANUAL              | 39  | Y |
| SORENSEN           | DCR-B             | 500W POWER SUPPLY INSTRUCTION MANUAL                 |     |   |
| SPECTRUM           | SCR1000           | VHF FM REPEATER OPERATIONS & MAINTENANCE             | 57  | Y |
| SR                 | SR-206/210        | HF SSB TRANSCEIVER OPERATING & MAINTENANCE           |     |   |
| SR                 | SR-240            | HF SSB TRANSCEIVER OPERATING & MAINTENANCE           |     |   |
| SR                 | SR-604            | HF ANTENNA COUPLER OPERATING & MAINTENANCE           |     |   |
| SRS                | SR785             | DYNAMIC SIGNAL ANALYZER OPERATING & PROGRAMMING      | 560 | Y |
| SRS                | SR785             | DYNAMIC SIGNAL ANALYZER SERVICE GUIDE                | 125 | Y |
| SSM                | EUROPA            | VHF TRANSVERTER                                      | 8   | Y |
| STAG               | PP28              | OPERATING MANUAL                                     | 31  | Y |
| STAG               | PP29              | OPERATING MANUAL                                     | 9   | Y |
| STAG               | PP39              | OPERATING MANUAL                                     | 144 | Y |
| STANDARD           | C7800             | UHF MOBILE TX/RX INSTRUCTIONS MANUAL (NO SCHEMATICS) | 46  | Y |
| STANDARD           | C867              | VHF FM SERVICE MANUAL                                |     |   |
| STANDARD           | CPB78             | UHF FM POWER BOOSTER INSTRUCTION MANUAL              | 16  | Y |
| STC                | 74600             | ATTENUATOR                                           |     |   |
| STORNO             | CQM 633X          | FM MOBILE TECHNICAL MANUAL                           | 219 | Y |
| SUNRISE TELECOM    | SUNLITE E1        | E1 TESTER USERS MANUAL                               |     |   |
| SWAN               | 700-CX            | HF TRANSCEIVER OPERATION AND MAINTENANCE             | 36  | Y |
| SYMEK              | TNC2H             | TNC                                                  | 28  | Y |
| SYSTRON-DONNER     | 1702              | SIGNAL GENERATOR OPERATING & SERVICE MANUAL          | 331 | Y |
| SYSTRON-DONNER     | 6053              | FREQUENCY COUNTER INSTRUCTION MANUAL                 | 92  | Y |
| SYSTRON-DONNER     | 6020/6030         | FREQUENCY COUNTER SERVICE MANUAL                     | 332 | Y |
| SYSTRON-DONNER     | 604xA             | FREQUENCY COUNTER OPERATING & SERVICE MANUAL         |     |   |
| SYSTRON-DONNER     | 6054B             | FREQUENCY COUNTER (PART - NO SCHEMATICS)             | 92  | Y |
| SYSTRON-DONNER     | 6054B             | FREQUENCY COUNTER INSTRUCTION MANUAL                 |     |   |
| SYSTRON-DONNER     | 6316A/B           | FREQUENCY COUNTER INSTRUCTION MANUAL                 | 164 | Y |
| SYSTRON-DONNER     | 6400/6500         | FREQUENCY COUNTER SERVICE MANUAL                     |     |   |
| SYSTRON-DONNER     | 7344A             | DIGITAL MULTIMETER OPERATING & SERVICE MANUAL        |     |   |
| SYSTRON-DONNER     | P1 & P2           | PROGRAMMER OPERATING & SERVICE MANUAL                |     |   |
| TAIT               | T2000             | FM MOBILE SERVICE MANUAL                             | 404 | Y |
| TAIT               | T750              | UHF FM MOBILE SERVICE MANUAL                         | 142 | Y |
| TAIT               | T801              | FREQUENCY REFERENCE MODULE OPERATOR'S MANUAL         | 23  | Y |
| TAIT               | T801              | FREQUENCY REFERENCE MODULE SERVICE MANUAL            | 53  | Y |

|              |                   |                                                |     |   |
|--------------|-------------------|------------------------------------------------|-----|---|
| TAKEDA RIKEN | TR4132            | SPECTRUM ANALYSER OPER & MAINT MANUAL          | 232 | Y |
| TALCO        | ER08              | VHF FM MOBILE SERVICE MANUAL                   | 35  | Y |
| TCL          | 962               | UHF MOBILE DUPLEXER                            | 14  | Y |
| TEKTRONIX    | 130               | L-C METER INSTRUCTION MANUAL                   | 65  | Y |
| TEKTRONIX    | 134               | CURRENT PROBE AMPLIFIER INSTRUCTION MANUAL     |     |   |
| TEKTRONIX    | 308               | DATA ANALYZER SERVICE                          |     |   |
| TEKTRONIX    | 422               | OSCILLOSCOPE INSTRUCTION MANUAL                | 201 | Y |
| TEKTRONIX    | 491               | SPECTRUM ANALYSER OPERATING & SERVICE MANUAL   |     |   |
| TEKTRONIX    | 549               | STORAGE OSCILLOSCOPE INSTRUCTION MANUAL        |     |   |
| TEKTRONIX    | 551               | OSCILLOSCOPE INSTRUCTION MANUAL                |     |   |
| TEKTRONIX    | 564               | OSCILLOSCOPE INSTRUCTION MANUAL                |     |   |
| TEKTRONIX    | 601               | STORAGE MONITOR OPERATING & SERVICE            |     |   |
| TEKTRONIX    | 603.604           | MONITOR INSTRUCTION MANUAL                     |     |   |
| TEKTRONIX    | 603 A             | MONITOR OPERATING & SERVICE MANUAL             |     |   |
| TEKTRONIX    | 604 A             | MONITOR INSTRUCTION MANUAL                     | 140 | Y |
| TEKTRONIX    | 607               | MONITOR INSTRUCTION MANUAL                     |     |   |
| TEKTRONIX    | 611               | STORAGE DISPLAY UNIT INSTRUCTION MANUAL        |     |   |
| TEKTRONIX    | 661               | OSCILLOSCOPE INSTRUCTION MANUAL                |     |   |
| TEKTRONIX    | 7A26              | DUAL TRACE AMPLIFIER                           | 94  | Y |
| TEKTRONIX    | 1241              | LOGIC ANALYZER SERVICE MANUAL ADDENDUM         | 244 | Y |
| TEKTRONIX    | 1730              | WAVEFORM MONITOR OPERATING & SERVICE MANUAL    |     |   |
| TEKTRONIX    | 2215              | OSCILLOSCOPE SERVICE MANUAL                    |     |   |
| TEKTRONIX    | 2221A             | DIGITAL STORAGE SCOPE USER MANUAL              | 164 | Y |
| TEKTRONIX    | 2225              | OSCILLOSCOPE SERVICE MANUAL                    | 208 | Y |
| TEKTRONIX    | 2235              | OSCILLOSCOPE SERVICE MANUAL                    |     |   |
| TEKTRONIX    | 2246              | OSCILLOSCOPE OPERATORS MANUAL                  | 97  | Y |
| TEKTRONIX    | 2247A             | OSCILLOSCOPE SERVICE MANUAL                    | 370 | Y |
| TEKTRONIX    | 2335              | OSCILLOSCOPE SERVICE MANUAL                    |     |   |
| TEKTRONIX    | 2336 YA           | OSCILLOSCOPE OPERATORS MANUAL                  |     |   |
| TEKTRONIX    | 2336 YA           | OSCILLOSCOPE SERVICE MANUAL                    |     |   |
| TEKTRONIX    | 2430              | OSCILLOSCOPE SERVICE MANUAL                    | 518 | Y |
| TEKTRONIX    | 2430A             | OSCILLOSCOPE OPERATORS MANUAL                  | 416 | Y |
| TEKTRONIX    | 2430A             | OSCILLOSCOPE PROGRAMMERS REFERENCE GUIDE       | 159 | Y |
| TEKTRONIX    | 2430A             | OSCILLOSCOPE USER REFERENCE GUIDE              | 49  | Y |
| TEKTRONIX    | 2440              | OSCILLOSCOPE SERVICE MANUAL                    | 225 | Y |
| TEKTRONIX    | 2445              | OSCILLOSCOPE SERVICE MANUAL                    | 323 | Y |
| TEKTRONIX    | 2465              | OSCILLOSCOPE OPERATORS MANUAL                  | 52  | Y |
| TEKTRONIX    | 2465              | OSCILLOSCOPE INSTRUCTION MANUAL                | 47  | Y |
| TEKTRONIX    | 2465              | OSCILLOSCOPE SERVICE MANUAL                    | 360 | Y |
| TEKTRONIX    | 2465A.2455A.2445A | OSCILLOSCOPE OPERATORS MANUAL                  | 161 | Y |
| TEKTRONIX    | 2465B.2455B.2445B | OSCILLOSCOPE OPERATORS MANUAL                  |     |   |
| TEKTRONIX    | 2465B/2467B       | OSCILLOSCOPE SERVICE MANUAL (UP TO SECTION 7)  | 252 | Y |
| TEKTRONIX    | 24x5A.2467        | OPTION 10 INTERFACING GUIDE                    | 150 | Y |
| TEKTRONIX    | 2467B             | OSCILLOSCOPE & OPTIONS OPERATOR MANUAL         | 129 | Y |
| TEKTRONIX    | 2707              | EXTERNAL TRACKING GENERATOR INSTRUCTION MANUAL | 178 | Y |
| TEKTRONIX    | 2711.2712         | SPECTRUM ANALYSER SERVICE MANUAL               | 669 | Y |
| TEKTRONIX    | 2712              | SPECTRUM ANALYSER OPERATING                    | 292 | Y |
| TEKTRONIX    | 2711,2712         | SPECTRUM ANALYSER PROGRAMMING                  | 276 | Y |
| TEKTRONIX    | 2714,2715         | SPECTRUM ANALYSER PROGRAMMING                  | 295 | Y |
| TEKTRONIX    | 2714,2715         | SPECTRUM ANALYSER REFERENCE                    | 40  | Y |
| TEKTRONIX    | 2714              | SPECTRUM ANALYSER USER MANUAL                  | 357 | Y |
| TEKTRONIX    | 2715              | SPECTRUM ANALYSER USER MANUAL                  | 347 | Y |
| TEKTRONIX    | 2782              | INSTALL/PERFORMANCE VERIFICATION               | 123 | Y |
| TEKTRONIX    | 2782              | SPECTRUM ANALYSER OPERATORS MANUAL             | 249 | Y |
| TEKTRONIX    | 2782              | SPECTRUM ANALYSER OPERATORS HANDBOOK           | 129 | Y |
| TEKTRONIX    | 2782              | SPECTRUM ANALYZER PROGRAMMING MANUAL           | 316 | Y |
| TEKTRONIX    | 7603              | OSCILLOSCOPE OPERATING & SERVICE MANUAL        |     |   |
| TEKTRONIX    | 321A              | OSCILLOSCOPE INSTRUCTION MANUAL                |     |   |
| TEKTRONIX    | 453               | OSCILLOSCOPE ARMY TECHNICAL MANUAL             | 259 | Y |
| TEKTRONIX    | 465B              | OSCILLOSCOPE                                   |     | Y |
| TEKTRONIX    | 475, DM44         | OSCILLOSCOPE OPERATORS MANUAL                  | 76  | Y |
| TEKTRONIX    | 475A              | OSCILLOSCOPE OPERATORS MANUAL                  |     |   |
| TEKTRONIX    | 475A              | OSCILLOSCOPE SERVICE MANUAL                    |     |   |
| TEKTRONIX    | 485 / R485        | OSCILLOSCOPE SERVICE MANUAL                    |     |   |
| TEKTRONIX    | 492 P             | SPECTRUM ANALYSER OPERATING                    | 77  | Y |
| TEKTRONIX    | 492 P             | SPECTRUM ANALYSER SERVICE VOL 1                | 303 | Y |
| TEKTRONIX    | 492 P             | SPECTRUM ANALYSER SERVICE VOL 2                | 494 | Y |
| TEKTRONIX    | 494/494P          | SPECTRUM ANALYSER OPERATING                    | 84  | Y |
| TEKTRONIX    | 494/494P          | SPECTRUM ANALYSER SERVICE VOL 1                | 328 | Y |
| TEKTRONIX    | 494/494P          | SPECTRUM ANALYSER SERVICE VOL 2                | 276 | Y |
| TEKTRONIX    | 494AP             | SPECTRUM ANALYSER PROGRAMMING                  | 180 | Y |
| TEKTRONIX    | 495P              | SPECTRUM ANALYSER USER MANUAL                  | 149 | Y |
| TEKTRONIX    | 496/496P          | SPECTRUM ANALYSER OPERATORS HANDBOOK           | 34  | Y |
| TEKTRONIX    | 496/496P          | SPECTRUM ANALYSER SERVICE VOL 1                | 251 | Y |
| TEKTRONIX    | 496/496P          | SPECTRUM ANALYSER SERVICE VOL 2                | 367 | Y |
| TEKTRONIX    | 545A              | OSCILLOSCOPE INSTRUCTION MANUAL                |     |   |
| TEKTRONIX    | 7603              | OSCILLOSCOPE SERVICE MANUAL                    | 211 | Y |

|           |         |                                                  |     |   |
|-----------|---------|--------------------------------------------------|-----|---|
| TEKTRONIX | 7A13    | DIFFERENTIAL COMPARATOR INSTRUCTION MANUAL       | 132 | Y |
| TEKTRONIX | 7A18    | DUAL TRACE AMPLIFIER OPERATING & SERVICE MANUAL  |     |   |
| TEKTRONIX | 7B53A   | DUAL TIMEBASE PLUG-IN OPERATING & SERVICE MANUAL |     |   |
| TEKTRONIX | 7D01    | LOGIC ANALYSER OPERATING & SERVICE MANUAL        |     |   |
| TEKTRONIX | 7854    | OSCILLOSCOPE OPERATORS MANUAL                    | 434 | Y |
| TEKTRONIX | A6302   | 20AMP AC/DC CURRENT PROBE USER MANUAL            | 34  | Y |
| TEKTRONIX | A6303   | 100AMP AC/DC CURRENT PROBE USER MANUAL           | 26  | Y |
| TEKTRONIX | CA      | PLUG-IN UNIT                                     |     |   |
| TEKTRONIX | CT-6    | AC CURRENT PROBE USER MANUAL                     | 46  | Y |
| TEKTRONIX | D       | PLUG-IN UNIT                                     |     |   |
| TEKTRONIX | D10     | SINGLE BEAM DISPLAY UNIT INSTRUCTION MANUAL      |     |   |
| TEKTRONIX | DC503   | ADJUSTMENT & SCHEMATIC                           | 28  | Y |
| TEKTRONIX | DD501   | DIGITAL DELAY INSTRUCTION MANUAL                 | 86  | Y |
| TEKTRONIX | FG501A  | FUNCTION GENERATOR INSTRUCTION MANUAL            | 58  | Y |
| TEKTRONIX | FG502   | FUNCTION GENERATOR INSTRUCTION MANUAL            |     |   |
| TEKTRONIX | M       | PLUG-IN UNIT                                     |     |   |
| TEKTRONIX | P2100   | PROBE USER MANUAL                                | 12  | Y |
| TEKTRONIX | P2200   | PROBE USER MANUAL                                | 14  | Y |
| TEKTRONIX | P3010   | PROBE USER MANUAL                                | 19  | Y |
| TEKTRONIX | P5050   | PROBE USER MANUAL                                | 20  | Y |
| TEKTRONIX | P5100   | PROBE USER MANUAL                                | 40  | Y |
| TEKTRONIX | P5102   | PROBE USER MANUAL                                | 31  | Y |
| TEKTRONIX | P5200   | PROBE USER MANUAL                                | 46  | Y |
| TEKTRONIX | P5205   | PROBE USER MANUAL                                | 54  | Y |
| TEKTRONIX | P5210   | PROBE USER MANUAL                                | 152 | Y |
| TEKTRONIX | P5210   | PROBE SERVICE MANUAL                             | 46  | Y |
| TEKTRONIX | P6006   | PROBE OPERATING MANUAL                           |     |   |
| TEKTRONIX | P6009   | PROBE USER MANUAL                                | 16  | Y |
| TEKTRONIX | P6010   | PROBE INSTRUCTION MANUAL                         | 20  | Y |
| TEKTRONIX | P6011   | PROBE INSTRUCTION MANUAL                         | 9   | Y |
| TEKTRONIX | P6015A  | 1000X PROBE USER MANUAL                          | 76  | Y |
| TEKTRONIX | P6016   | CURRENT PROBE INSTRUCTION MANUAL                 |     |   |
| TEKTRONIX | P6021   | CURRENT PROBE USER MANUAL                        | 56  | Y |
| TEKTRONIX | P6022   | CURRENT PROBE USER MANUAL                        | 48  | Y |
| TEKTRONIX | P6047   | PROBE INSTRUCTION MANUAL                         | 19  | Y |
| TEKTRONIX | P6101B  | PROBE USER MANUAL                                | 13  | Y |
| TEKTRONIX | P6103B  | PROBE USER MANUAL                                | 17  | Y |
| TEKTRONIX | P6105A  | PROBE USER MANUAL                                | 40  | Y |
| TEKTRONIX | P6106A  | PROBE USER MANUAL                                | 20  | Y |
| TEKTRONIX | P6109B  | PROBE USER MANUAL                                | 17  | Y |
| TEKTRONIX | P6111B  | 200MHZ 10X PASSIVE PROBE                         | 12  | Y |
| TEKTRONIX | P6112   | PROBE USER MANUAL                                | 15  | Y |
| TEKTRONIX | P6114B  | PROBE USER MANUAL                                | 17  | Y |
| TEKTRONIX | P6117   | PROBE USER MANUAL                                | 14  | Y |
| TEKTRONIX | P6119B  | PROBE USER MANUAL                                | 16  | Y |
| TEKTRONIX | P6122   | PROBE INSTRUCTION MANUAL                         | 32  | Y |
| TEKTRONIX | P6129B  | PROBE USER MANUAL                                | 15  | Y |
| TEKTRONIX | P6131   | PROBE USER MANUAL                                | 28  | Y |
| TEKTRONIX | P6133   | PROBE USER MANUAL                                | 11  | Y |
| TEKTRONIX | P6134C  | PROBE USER MANUAL                                | 9   | Y |
| TEKTRONIX | P6135A  | PROBE USER MANUAL                                | 74  | Y |
| TEKTRONIX | P6136   | PROBE USER MANUAL                                | 30  | Y |
| TEKTRONIX | P6137   | PROBE USER MANUAL                                | 20  | Y |
| TEKTRONIX | P6138A  | PROBE USER MANUAL                                | 16  | Y |
| TEKTRONIX | P6139A  | PROBE USER MANUAL                                | 16  | Y |
| TEKTRONIX | P6150   | PROBE USER MANUAL                                | 14  | Y |
| TEKTRONIX | P6156   | PROBE USER MANUAL                                | 14  | Y |
| TEKTRONIX | P6158   | PROBE USER MANUAL                                | 16  | Y |
| TEKTRONIX | P6201   | 900MHZ FET PROBE INSTRUCTION MANUAL              | 49  | Y |
| TEKTRONIX | P6202A  | 500MHZ FET PROBE USER MANUAL                     | 108 | Y |
| TEKTRONIX | P6204   | FET PROBE USER MANUAL                            | 69  | Y |
| TEKTRONIX | P6205   | FET PROBE USER MANUAL                            | 65  | Y |
| TEKTRONIX | P6207   | FET PROBE USER MANUAL                            | 84  | Y |
| TEKTRONIX | P6209   | FET PROBE USER MANUAL                            | 76  | Y |
| TEKTRONIX | P6217   | FET PROBE USER MANUAL                            | 84  | Y |
| TEKTRONIX | P6243   | PROBE USER MANUAL                                | 30  | Y |
| TEKTRONIX | P6245AD | PROBE USER MANUAL                                | 78  | Y |
| TEKTRONIX | P6246   | PROBE USER MANUAL                                | 34  | Y |
| TEKTRONIX | P6246   | PROBE SERVICE MANUAL                             | 54  | Y |
| TEKTRONIX | P6248   | PROBE USER MANUAL                                | 38  | Y |
| TEKTRONIX | P6249   | PROBE USER MANUAL                                | 80  | Y |
| TEKTRONIX | P6330   | PROBE USER MANUAL                                | 86  | Y |
| TEKTRONIX | P6339A  | PROBE USER MANUAL                                | 54  | Y |
| TEKTRONIX | P6434   | PROBE USER MANUAL                                | 48  | Y |
| TEKTRONIX | P6451   | DATA ACQUISITION PROBE INSTRUCTIONS              |     |   |
| TEKTRONIX | P6467   | HIGH SPEED PROBE ADAPTER USER MANUAL             | 83  | Y |
| TEKTRONIX | P6561A  | PROBE USER MANUAL                                | 16  | Y |
| TEKTRONIX | P6562A  | PROBE USER MANUAL                                | 16  | Y |

|                |                |                                                   |     |   |
|----------------|----------------|---------------------------------------------------|-----|---|
| TEKTRONIX      | P6563A         | PROBE USER MANUAL                                 | 16  | Y |
| TEKTRONIX      | P6701A         | CONVERTERS USER MANUAL                            | 74  | Y |
| TEKTRONIX      | P6701B         | CONVERTERS USER MANUAL                            | 132 | Y |
| TEKTRONIX      | P6701B         | CONVERTERS SERVICE MANUAL                         | 38  | Y |
| TEKTRONIX      | P6810          | PROBE INSTRUCTION MANUAL                          | 98  | Y |
| TEKTRONIX      | P7240          | PROBE INSTRUCTION MANUAL                          | 66  | Y |
| TEKTRONIX      | P7240          | PROBE USER MANUAL                                 | 46  | Y |
| TEKTRONIX      | P7260          | PROBE SERVICE MANUAL                              | 26  | Y |
| TEKTRONIX      | P7330          | PROBE INSTRUCTION MANUAL                          | 76  | Y |
| TEKTRONIX      | P7330          | PROBE USER MANUAL                                 | 48  | Y |
| TEKTRONIX      | PG508          | 50MHZ PULSE GENERATOR INSTRUCTION MANUAL          |     |   |
| TEKTRONIX      | RFM151         | SIGNALSCOUT CABLE TV RF ANALYZER INSTRUCTION MAN. |     |   |
| TEKTRONIX      | SD14           | SAMPLING HEAD USER MANUAL                         | 46  | Y |
| TEKTRONIX      | SD14           | SAMPLING HEAD SERVICE MANUAL                      | 74  | Y |
| TEKTRONIX      | SD-14 OPT 01   | SAMPLING HEAD INSTRUCTIONS                        | 8   | Y |
| TEKTRONIX      | SD-20          | SAMPLING HEAD USER MANUAL                         | 52  | Y |
| TEKTRONIX      | SD-22,26       | SAMPLING HEAD USER MANUAL                         | 44  | Y |
| TEKTRONIX      | SD-22,26       | SAMPLING HEAD SERVICE MANUAL                      | 86  | Y |
| TEKTRONIX      | SD-24          | SAMPLING HEAD USER MANUAL                         | 50  | Y |
| TEKTRONIX      | SD-24          | SAMPLING HEAD SERVICE MANUAL                      | 86  | Y |
| TEKTRONIX      | SD-30          | SAMPLING HEAD USER MANUAL                         | 38  | Y |
| TEKTRONIX      | SD-32          | SAMPLING HEAD USER MANUAL                         | 38  | Y |
| TEKTRONIX      | SD-32          | SAMPLING HEAD SERVICE MANUAL                      | 82  | Y |
| TEKTRONIX      | SD-51          | TRIGGER HEAD USER MANUAL                          | 34  | Y |
| TEKTRONIX      | SG503          | SINE WAVE GENERATOR INSTRUCTION MANUAL            | 53  | Y |
| TEKTRONIX      | TDS410A        | SCOPE PROGRAMMING MANUAL                          | 386 | Y |
| TEKTRONIX      | TDS500B        | SCOPE USER MANUAL                                 | 302 | Y |
| TEKTRONIX      | TDS684A        | SCOPE USER MANUAL                                 | 292 | Y |
| TEKTRONIX      | TDS684A        | SCOPE SERVICE MANUAL                              | 290 | Y |
| TEKTRONIX      | TDS684A        | SCOPE REFERENCE MANUAL                            | 6   | Y |
| TEKTRONIX      | TLA700         | PROBE ACCESSORY USER MANUAL                       | 2   | Y |
| TEKTRONIX      | TM501          | POWER MODULE INSTRUCTION MANUAL                   | 32  | Y |
| TEKTRONIX      | TM503          | POWER MODULE                                      | 33  | Y |
| TEKTRONIX      | TM515          | POWER MODULE INSTRUCTION MANUAL                   | 89  | Y |
| TEKTRONIX      | TR501          | TRACKING GENERATOR INSTRUCTION MANUAL             |     |   |
| TEKTRONIX      | TR503          | TRACKING GENERATOR INSTRUCTION MANUAL             | 71  | Y |
| TEKTRONIX      | TSG95          | PAL/NTSC SIGNAL GENERATOR SERVICE MANUAL          | 140 | Y |
| TEKTRONIX      | TSG100         | NTSC TELEVISION GENERATOR INSTRUCTION MANUAL      | 71  | Y |
| TEKTRONIX      | TSG1001        | PROGRAMMABLE TV GENERATOR USER MANUAL             | 62  | Y |
| TELEQUIPMENT   | D31,D31R       | DOUBLE BEAM OSCILLOSCOPE OPERATING & MAINTENANCE  |     |   |
| TELEQUIPMENT   | D61A           | OSCILLOSCOPE INSTRUCTION MANUAL                   | 46  | Y |
| TELEREADER     | CWR-685E       | CW, BAUDOT & ASCII READER OPERATING MANUAL        | 51  | Y |
| TELEREADER     | CWR-685E       | CW, BAUDOT & ASCII READER SERVICE MANUAL          | 89  | Y |
| TELEREADER     | CWR-880        | CW, BAUDOT & ASCII READER OPERATING MANUAL        | 23  | Y |
| TELLUROMETER   | MRA 5          | MICROWAVE DISTANCE MEASURE USER HANDBOOK          | 71  | Y |
| TELLUROMETER   | MRA3 MK II     | MICROWAVE DISTANCE MEASURE INSTRUCTION MANUAL     | 132 | Y |
| TELONIC        | 1019           | SWEEP/SIGNAL GENERATOR OPERATION & SERVICE        | 77  | Y |
| TELONIC        | HD-3           | SWEEP GENERATOR OPERATING & SERVICE MANUAL        | 44  | Y |
| TELONIC        | L-6            | PLUG-IN OSCILLATOR INSTRUCTION MANUAL             | 22  | Y |
| TELONIC        | SM2000         | SWEEP/SIGNAL GENERATOR INSTRUCTION MANUAL         | 43  | Y |
| TEN-TEC        | 260            | POWER SUPPLY OWNER'S MANUAL                       |     |   |
| TEN-TEC        | ARGOSY II 525D | OWNERS MANUAL                                     |     |   |
| TEN-TEC        | CENTURY 22     | OWNERS MANUAL                                     |     |   |
| TEN-TEC        | CORSAIR II     | HF TX/RX OWNER'S MANUAL                           |     |   |
| TEN-TEC        | OMNI-VI        | SCHEMATIC                                         |     |   |
| TEN-TEC        | SCOUT 555      | OWNERS MANUAL                                     |     |   |
| TEXSCAN        | AL-60B         | OPERATING & INSTRUCTION MANUAL                    |     |   |
| TEXSCAN        | CS-76          | SWEEP GENERATOR OPERATING & INSTRUCTION MANUAL    |     |   |
| TEXSCAN        | DU-120         | OSCILLOSCOPE INSTRUCTION MANUAL                   | 52  | Y |
| TEXSCAN        | FDM1-FDM2      | FREQ. DIVERSITY MONITOR OPERATING & MAINTENANCE   | 38  | Y |
| TEXSCAN        | TC250/500      | SWEEP GENERATOR OPERATING & INSTRUCTION           | 29  | Y |
| TEXSCAN        | VS-20          | SWEEP GENERATOR OPERATING & INSTRUCTION           | 50  | Y |
| THANDAR        | DM350          | DIGITAL MULTIMETER SERVICE MANUAL                 | 29  | Y |
| THANDAR        | PFM200         | FREQUENCY METER INSTRUCTION MANUAL                | 2   | Y |
| THANDAR        | PFM200         | FREQUENCY METER SERVICE MANUAL                    | 13  | Y |
| THANDAR        | SC110A         | OSCILLOSCOPE SERVICE MANUAL                       | 30  | Y |
| THANDAR        | TF200          | FREQUENCY METER SERVICE MANUAL                    | 21  | Y |
| THANDAR        | TG100          | FUNCTION GENERATOR SERVICE MANUAL                 | 15  | Y |
| THANDAR        | TG105          | PULSE GENERATOR SERVICE MANUAL                    | 15  | Y |
| THANDAR        | TM351          | DIGITAL MULTIMETER SERVICE MANUAL                 | 22  | Y |
| THANDAR        | TM352          | DIGITAL MULTIMETER SERVICE MANUAL                 | 32  | Y |
| THANDAR        | TM353          | DIGITAL MULTIMETER SERVICE MANUAL                 | 20  | Y |
| THANDAR        | TM354          | DIGITAL MULTIMETER SERVICE MANUAL                 | 20  | Y |
| THANDAR        | TP600          | PRESALER INSTRUCTION MANUAL                       | 8   | Y |
| THANDAR        | TSA250         | SPECTRUM ANALYSER ADAPTOR INSTRUCTION MANUAL      | 26  | Y |
| THE WAR OFFICE | METER, SURVEY  | RADIAC NO. 2 USER HANDBOOK                        | 25  | Y |
| THORCOM        | RLC100         | TNC                                               | 14  | Y |
| THORCOM        | RLC200         | TNC                                               | 19  | Y |

|                 |                       |                                                      |     |   |
|-----------------|-----------------------|------------------------------------------------------|-----|---|
| THORCOM         | RLC280                | TNC USER GUIDE & REFERENCE                           | 98  | Y |
| TIME            | 2003                  | DC VOLTAGE CALIBRATOR                                | 32  | Y |
| TOKYO HY-POWER  | HC-400L               | ANTENNA COUPLER OPERATING INSTRUCTIONS               | 10  | Y |
| TOKYO HY-POWER  | HL-2K                 | LINEAR AMPLIFIER                                     | 23  | Y |
| TOKYO HY-POWER  | HL-35V                | 144MHZ POWER AMPLIFIER INSTRUCTION MANUAL            | 6   | Y |
| TOKYO HY-POWER  | HL-50B                | HF/50MHZ LINEAR AMPLIFIER INSTRUCTION MANUAL         | 10  | Y |
| TOKYO HY-POWER  | HL-60U                | 430MHZ LINEAR AMPLIFIER INSTRUCTION MANUAL           | 8   | Y |
| TOKYO HY-POWER  | HT-106                | 50MHZ TRANSCEIVER INSTRUCTION MANUAL                 | 17  | Y |
| TOKYO HY-POWER  | HX-650                | HF - 50MHZ TRANSVERTER INSTRUCTION MANUAL            | 17  | Y |
| TONO            | 550                   | COMMUNICATIONS TERMINAL INSTRUCTION MANUAL           | 34  | Y |
| TONO            | MR-150W MR-250W       | 2M ALL MODE LINEAR AMPLIFIER INSTRUCTION MANUAL      |     |   |
| TOPWARD         | 5100                  | LCR METER INSTRUCTIONS, CAL., CIRCUITS               | 70  | Y |
| TOSHIBA         | TMC-1AX/2AX           | WATCHGUARD MINICAMERA SERVICE DATA                   |     |   |
| TRAK SYSTEMS    | 8810C-40              | GPS STATION CLOCK TECHNICAL MANUAL                   | 70  | Y |
| TRADIPER        | TE-15                 | GRID DIP METER                                       | 7   | Y |
| TWC             | RAT1000               | AUTO ATU SERVICE MANUAL                              | 57  | Y |
| VARIAN          | R-20                  | RUBIDIUM FREQUENCY STANDARD TECHNICAL MANUAL         |     |   |
| VCI             | HFT-1500              | DIGITAL ANTENNA TUNER OWNERS MANUAL                  | 15  | Y |
| W&G             | PS-30                 | LEVEL GENERATOR OPERATING MANUAL                     | 32  | Y |
| W&G             | PMG-3                 | AF LEVEL MEASURING SET OPERATING MANUAL              | 35  | Y |
| W&G             | RFZ-12                | RETURN LOSS MEASURING ATTCHMENT                      |     |   |
| W&G             | SDZ-12                | SIGNAL BALANCE RATIO MEASURING ATTACHMENT            |     |   |
| W&G             | SPM-31                | SELECTIVE LEVEL METER APPENDIX                       | 84  | Y |
| WALKER & LEACH  | GPO 35A               | RADIO RECEIVER OPERATING & MAINTENANCE               | 23  | Y |
| WATKINS JOHNSON | W8888                 | RECEIVER TECHNICAL MANUAL                            | 416 | Y |
| WAVETEK         | 171                   | SYNTHESIZER/FUNCTION GENERATOR OP & MAINT            | 41  | Y |
| WAVETEK         | 172B                  | PROGRAMMABLE SIGNAL SOURCE                           |     |   |
| WAVETEK         | 1038-N10              | NETWORK ANALYZER OPERATING & MAINTENANCE             | 220 | Y |
| WAVETEK         | 1076/1077             | RF SWEEP COMPARATOR                                  | 61  | Y |
| WAVETEK         | 1080/1081             | SWEEP GENERATOR INSTRUCTION MANUAL                   | 119 | Y |
| WAVETEK         | 1880                  | SYSTEM ANALYZER OPERATING HANDBOOK                   | 20  | Y |
| WAVETEK         | 1910                  | DISPLAY OSCILLOSCOPE INSTRUCTION MANUAL              |     |   |
| WAVETEK         | 3001/3002             | RF SIGNAL GENERATOR INSTRUCTION MANUAL               | 171 | Y |
| WAVETEK         | PMI 1038-NS20         | NETWORK ANALYSER OPERATIONAL HANDBOOK                | 35  | Y |
| WAYNE KERR      | 3245                  | PRECISION INDUCTANCE ANALYZER OPERATING              | 90  | Y |
| WAYNE KERR      | 4210                  | AUTOMATIC LCR METER OPERATION & MAINTENANCE          |     |   |
| WAYNE KERR      | 4225                  | AUTOMATIC LCR METER INSTRUCTION/SERVICE              | 65  | Y |
| WAYNE KERR      | 4250                  | AUTOMATIC LCR METER INSTRUCTION/SERVICE              |     |   |
| WAYNE KERR      | B424                  | COMPONENT BRIDGE OPERATING & MAINTENANCE             | 57  | Y |
| WAYNE KERR      | B500                  | LOG LCR BRIDGE OPERATING INSTRUCTIONS                | 9   | Y |
| WAYNE KERR      | B601                  | COMPONENT BRIDGE                                     |     | Y |
| WAYNE KERR      | B602                  | COMPONENT BRIDGE                                     | 24  | Y |
| WAYNE KERR      | B642                  | AUTO COMPONENT BRIDGE OPERATING & MAINTENANCE        | 95  | Y |
| WAYNE KERR      | PDD3502A              | BENCH POWER SUPPLY INSTRUCTION / SERVICE             | 46  | y |
| WEIR            | 4000                  | LAB PSU OPERATING INSTRUCTIONS                       | 11  | Y |
| WEIR            | 403,413,423           | BENCH VARIABLE POWER SUPPLIES                        | 12  | Y |
| WEIR            | 413,423               | BENCH VARIABLE POWER SUPPLIES                        | 12  | Y |
| WEIR            | 731,732,761,762       | POWER SUPPLY TECHNICAL INFO.                         | 11  | Y |
| WEIR            | 761.1/762.1           | POWER SUPPLY TECHNICAL INFO.                         | 12  | Y |
| WESTERN         | PM2000A               | SWR/POWER METER                                      |     |   |
| WILTRON         | 360B                  | VECTOR NETWORK ANALYZER SYSTEM MAINT MANUAL          | 409 | Y |
| WILTRON         | 560A                  | NETWORK ANALYSER OPERATING & SERVICE                 | 493 | Y |
| WILTRON         | 610B                  | SWEPT FREQUENCY GENERATOR INSTRUCTION                |     |   |
| WILTRON         | 610D                  | SWEEP GENERATOR INSTRUCTION MANUAL (INC SCHEMATICS)  | 113 | Y |
| WILTRON         | 6100D SERIES          | RF PLUG-IN OPERATION & MAINTENANCE MANUAL            |     |   |
| WILTRON         | 6211D,15D,19D,23D,29D | RF PLUG-IN OPERATION & MAINT MANUAL (INC SCHEMATICS) | 85  | Y |
| WILTRON         | 6213D                 | RF PLUG-IN OPERATION & MAINT MANUAL (INC SCHEMATICS) | 56  | Y |
| WILTRON         | 6221D,25D,37D,47D     | RF PLUG-IN OPERATION & MAINT MANUAL (INC SCHEMATICS) | 58  | Y |
| WILTRON         | 6407/6409             | RF ANALYZER OPERATION & MAINTENANCE MANUAL           | 269 | Y |
| WILTRON         | 66xxA series          | PROGRAMMABLE SWEEP GENERATOR OPERATING               | 74  | Y |
| WILTRON         | 66xxB series          | PROGRAMMABLE SWEEP GEN OPERATION & MAINTENANCE       | 538 | Y |
| WILTRON         | S110/S111/S330/S331   | SITEMASTER USERS GUIDE                               | 81  | Y |
| WIRELESS SET    | B70                   | 4580/4860 MHZ FM LINK USER MANUAL                    | 44  | Y |
| ZYCOMM          | FM-2512               | VHF/FM MOBILE RADIO SERVICE MANUAL                   | 29  | Y |
| ZYCOMM          | FM9000H/M             | VHF HANDPORTABLE SERVICE MANUAL                      | 11  | Y |