

Audio Jack pins are numbered from the front to the back, starting with pin #1 as Ground.


- #1 Ground
- #2 Tip
- #3 Ring Short
- #4 Ring
- #5 Tip Short

OR you may use any 5V to 12V Source

5 Message Buttons

ASSY Notes:
 "TBD" pads are for future use. Ignore for now.
 Mount OLED on 4, 20mm long, header pins and on top of J2 and J3.
 Use silicone glue to hold the Piezo speaker to the assy.
 A bit of silicone on the side of the OLED will help keep it in place against the board.
 Trim the push button levers as needed, M1,M3,M5 are short levers and M2,M4 are long levers.
 Push "Home" during Power On to set FlashMagic ISP programming mode. Power On again to reset.

Handy 2.2"x1.7"x0.9"
 "Packing" Enclosure

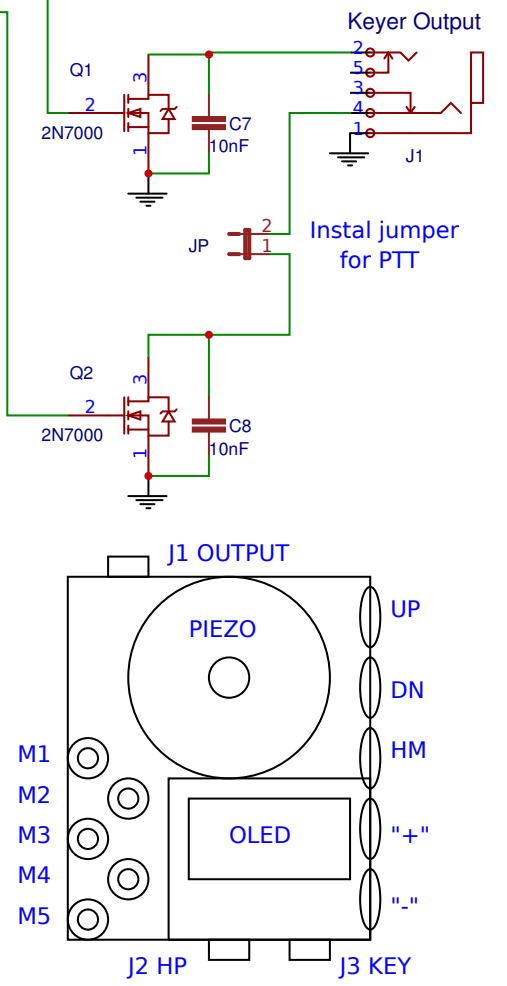

TITLE: MCB-III (MCT-I) CW Word Trainer		REV: 1.0
Date: 2018-01-10	Sheet: 1/1	
EasyEDA V4.1.3	Drawn By: K5BCQ	