

Login

Logging In

This MBO has an automatic login procedure for registered stations. When you first link with the system, it seizes the link, identifies, sends any announcement it may have, followed by the prompt '(your call de MBO call) and the >' character , and waits for your command.

If your call was not known to the system and the Sysop has the 'Self registration' feature activated, you will automatically be registered and can use the system right away.

WinLink tracks each user's connect time on a 24 hour basis (midnight to midnight). The sysop may limit your station usage time by allocating a limited number of minutes per day. When you first register as a new user to this station you are automatically given 30 minutes.

Once you have logged on, the system is ready for your command whenever it sends a prompt.

You may log out of the system with LOGOUT, LOGOFF, BYE or QRT command. Any time the link is lost the current user is automatically logged out.

If a message is being sent to the system during a link failure, that part of the message that was received is filed and is available to the addressee.