

PK232 Command Set

8B 8BITCONV	AU AAB	AB ABAUD	AG ACHG	AA ACRDISP
AK ACRPACK	AT ACRRTTY	AE ADDRESS	AD ADELAY	AI ALFDISP
AP ALFPACK	AR ALFRTTY	AL ALIST	AM AMTOR	AC ARQ
AO ARQTMO	AS ASCII	AY ASPECT	AW AWLEN	AV AX25L2V2
AX AXDELAY	AH AXHANG	BA BAUDOT	BE BEACON	BI BITINV
BK BKONDEL	BT BTEXT	CL CANLINE	CP CANPAC	CX CASEDISP
CU CBELL	CC CCITT	CF CFROM	CB CHCALL	CD CHDOUBLE
CH CHSWITCH	CK CHECK	CQ CMDTIME	CM CMSG	CI CODE
CN COMMAND	CE CONMODE	CO CONNECT	CY CONPERM	CG CONSTAMP
CI CPACTIME	CR CRADD	CT CTEXT	CW CWID	DS DAYSTAMP
DA DAYTIME	DC DCDCONN	DL DELETE	DF DFROM	DI DISCONNE
DW DWAIT	EA EAS	EC ECHO	ES ESCAPE	FA FAX
FN FAXNEG	FE FEC	FL FLOW	FR FRACK	FS FSPEED
FU FULLDUP	GR GRAPHICS	HB HBAUD	HD HEADERLN	HI HID
HO HOST	HP HPOLL	ID ID	IL ILFPACK	IO IO
JU JUSTIFY	KI KISS	LR LEFTRITE	LO LOCK	MX MAXFRAME
MB MBX	MC MCON	MD MDIGI	MM MEMORY	MI MFILTER
MF MFROM	MH MHEARD	MN MONITOR	MO MORSE	MP MSPEED
MR MRPT	MS MSTAMP	MT MTO	MA MYALIAS	ML MYCALL
MG MYSELCAL	MK MYALTCAL	NE NEWMODE	NO NOMODE	NR NUCR
NF NULF	NU NULLS	OK OK	OP OPMODE	PA PACKET
PL PACLEN	PT PACTIME	PR PARITY	PS PASS	PX PASSALL
PE PERSIST	PP PPERSIST	PC PRCON	PF PRFAX	PO PROUT
PY PRTYPE	RW RAWHDL	RB RBAUD	RC RCVE	RE RECEIVE
RX RXREV	RD REDISPLA	RL RELINK	RS RESET	RP RESPTIME
RT RESTART	RY RETRY	RF RFEC	SE SELFEC	SP SENDPAC
SI SIGNAL	SL SLOTTIME	SQ SQUELCH	SR SRXALL	ST START
SO STOP	TB TBAUD	TC TCLEAR	TM TIME	TR TRACE
TW TRFLOW	TI TRIES	TD TXDELAY	TF TXFLOW	TX TXREV
UN UNPROTO	UR USERS	US USOS	VH VHF	WI WIDESHFT
WO WORDOUT	WR WRU	XW XFLOW	XM XMIT	XO XMITOK
XF XOFF	XN XON			
END				