

WLCmds.txt

The following commands are supported.
 The first column lists the primary command (short form).
 You may optionally spell out commands as listed in
 the second column (alias).

Cmd	Alias	Function
A	ABORT	Sending station shall Stop Sending
B	BYE	Log off from WinLink
CANCEL #		Delete my message number # (1)
CHANGExx		Remote control commands, reserved for remote Sysops
D #	DELETE	Delete my message number# (1)
E	EXPERT	Expert Mode (ON/OFF); Show current mode w/o parameter
H	HELP	Read the Main Help file (this file)
K #	KILL	Delete my message number # (1)
I	INFO	Read the Information File for this mode
L	LIST	List all my PRIVATE and NTS messages
LM	LIST	List all my PRIVATE and NTS messages
LB		List new Bulletins since your last inquiry
LB #		List Bulletins in the system, starting with Bul #
LLB # (loc)		List last # Bulletins filed, beginning at "loc" (2)
LF		List stations' FORWARDING file (for MBOs only)
LH		List all HELP messages/files
LI		List stations' INTERCEPT file (for MBOs only)
LL		List new Messages since your last inquiry (2)
LL # (loc)		List last # messages filed, beginning at "loc" (2)
LN		List all my unread messages
LOGOUT, LOGOFF, QRT		Log out from WinLink
LR		List users in last 24 hours
LT		List all NTS messages in the system
LY		List this station's usage statistics
L> CALL	LTO	List all messages addressed to "CALL" 2 (1)
L< CALL	LFM	List all messages from "CALL" (2)
L@ CALL		List all messages addressed "@ CALL" (2)
NTS		List all "pending" NTS messages
PAGE		Page Mode (ON/OFF). Show current mode w/o parameter
R #	READ #	Read a specific message number WITHOUT headers
RC		Read all my pending messages without your confirmation
RH #		Read a specific message number WITH routing headers
RM	RN	Read all my unread messages WITHOUT headers
RMM # # # #..		Read multiple message numbers, stop after each msg
RMMC # # # #..		Read multiple message numbers contiguously
SP CALL	S	Send a PRIVATE message to CALL. May stay at this MBO (3)
SP CALL@BBSCALL.HR		Send a PRIVATE message to CALL at BBSCALL (4)

WLCmds.txt

SB TOPIC Send a BULLETIN to TOPIC
SB TOPIC@DESTN Send a Bulletin to TOPIC at DESTINATION
SFM Send a file of contiguous messages (see help on
SFM for details)
ST Send a NTS message
TIME Show daily BBS usage limit and time left
T TALK Alert the Sysop
V VERSION Ask for the current WinLink software version

Messages are terminated with the /EX character sequence starting at the beginning of a new line and followed by an <ENTER>.

Note: (1): You may still re-read a Deleted message until the next MBO message

purge cycle, but you must remember its message number

(2): MBO users can see any message in the system while Keyboarders

can only see messages addressed TO or FROM themselves. (loc) allows you to start the list with that message

number, the oldest message ('O') or the newest message ('N') See the LIST help file for a more detailed explanation

(3): Sending a message w/o routing information may stay at that MBO

until the recipient connects to that same station to read it.

(4): BBSCALL.HR = Callsign of BBS with hierarchical route, where the message will automatically be forwarded

to!

e.g. VK2AGE.#NE.NSW.AUS.OC

^^^ ^^^^^^^^^^^^^^^^^^^

| | Hierarchical route
| BBS-callsign