

## Baofeng UV-5R Quick Guide

VFO/MR –select Frequency Mode.

A/B - select upper display.

BAND - select VHF or UHF range [in freq.mode]

[M]+7+[M] ▲▼ select "dual-watch OFF" [M]+[E]

[M]+1+[M] ▲▼ select 5.0 KHz Step [M]+[E]

[M]+5+[M] ▲▼ WIDE Bandwidth. [M]+[E]

[M]+28+[M] Enter Chan # to delete. [M]+[E]

### Program a frequency into memory:

Press VFO/MR-Freq. Mode-key in frequency

[M]+25+[M] ▲▼ select Offset + - or OFF [M]+[E]

[M]+13+[M] ▲▼ key or Keypad set PLTone. [M]+[E]

[M]+2+[M] ▲▼ High/Low Power. [M]+[E]

[M]+27+[M] Enter Chan # store Receive Freq. [M]+[E]

[\*SCAN] Key - Display will show Transmit Freq.

[M]+27+[M] This will store Transmit Freq. [M]+[E]

Press VFO/MR – return to Channel Mode

0 SQUELCH [5]	10 Rec-DCS [OFF]	20 PTT-LT [0]	30 RX-LED
1 FRQ STEP [5.]	11 R-CTCS [OFF]	21 UpDisplay FREQ CHAN NAME	31 TX-LED
2 TXP [H/L] Togg [# #]	12 T-DCS [OFF]	22 LoDisplay FREQ CHAN NAME	32 ALARM [SITE]
3 Batt SAVE OFF/2/4	13 T-CTCS [OFF/67-254]	23 Busy Lockout [OFF]	33 BAND VHF
4 VOX [OFF]	14 VOICE [ENG]	24 Key Lock [OFF] [# #] toggle	34 TDR-AB OFF
5 WN BAND [Wide]	15 ANI-ID Comm. use	25 Freq. Shift OFF/+/-	35 STE [OFF]
6 Display [5]	16 DTMFST [OFF]	26 OFFSET .500/.600	36 RP-STE [OFF]
7 Dual Watch [ON/OFF]	17 S-CODE [N/A]	27 MEM-CH 000-127	37 RPT-RL [OFF]
8 KEY BEEP [ON/OFF]	18 SC-REV [CO]	28 DEL-CH 000-127	38 PONMSG MSG
9 Time Out [120]	19 PTT-ID [OFF]	29 WT-LED	39 ROGER [OFF]

**40 RESETS EVERYTHING [DANGER]**

Suggested settings for Ham Radio Use. - KC7OM ©

**Print Instructions**  
**Make sure Actual Size is selected.**  
**Print two sided flip pages on long edge**

**Quarter fold and place in between  
radio and battery.**