
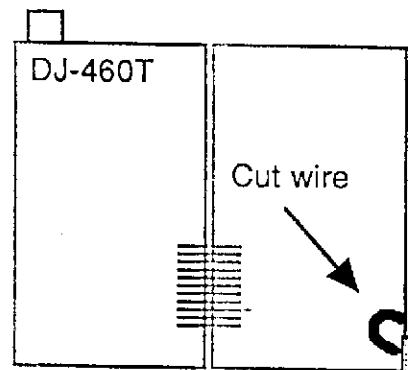


# ALINCO DJ-460T

## EXPANDED RF

1. Remove Battery and Antenna.
2. Remove 2 screws back of case and four screws from battery slide clip.
3. Remove Main dial, Vol & SQL knobs. Remove the retaining rings.
4. Remove the top cover.
5. Open radio.
6. Locate and cut wire behind the battery release button.
7. Reassemble radio.
8. Reset microprocessor. (Press and hold [F] key and turn power on.

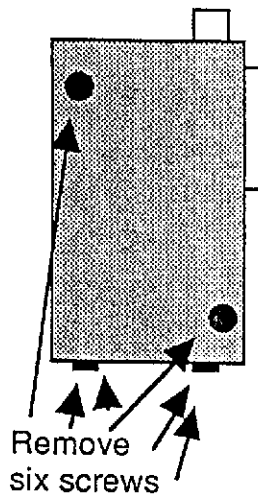

**CAUTION-** These Modifications have not been tested. The Author, Publisher and all other parties takes NO responsibility or Liability for any damage or violation resulting from these Modifications. Performing any modification may be a Violation of FCC Rules and will void the Warranty of the radio. Use of any Modified radio may be a violation of FCC Rules. If you have any doubts, DO NOT PERFORM THIS MODIFICATION.