


# MIC JACK PIN ASSIGNMENTS ALINCO MOBILE RADIOS

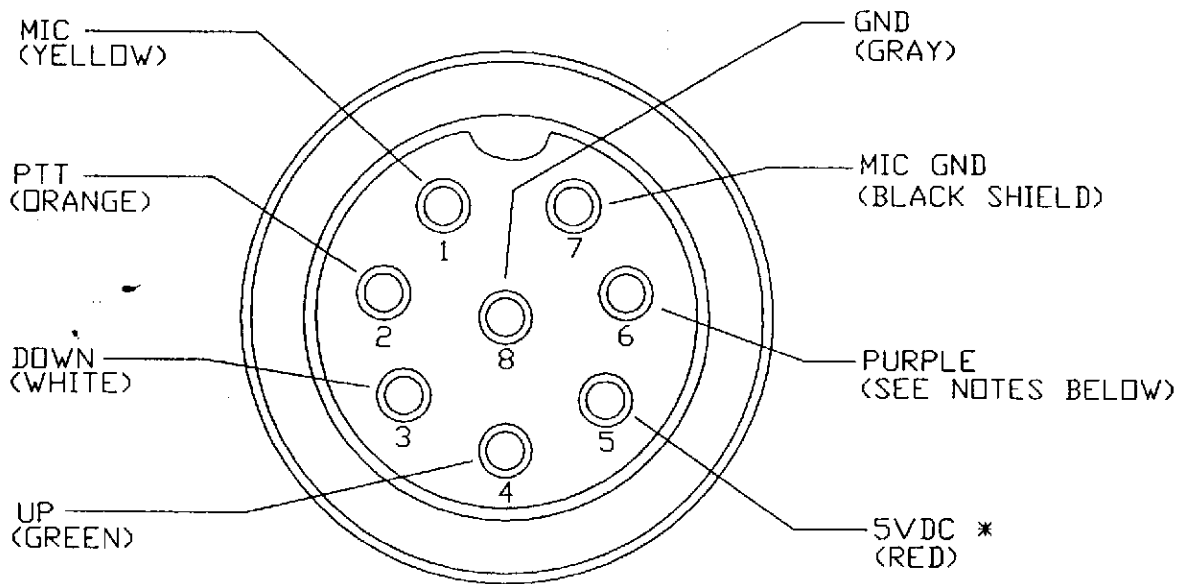

Note: Pin 6 serves different purposes for different models:

1200 (Data Radio)/119 = Amplified audio

590/592/599/600 = Remote (Serial bus line for remote commands from microphone).

110/112/570 = Open (No connection)

130 = P.C. programming bus

\* Maximum current sink from pin 5 is 25 mA.