


# 1200 bps Packet Operation

## Connections for Packet Operation

Connect the TNC, etc., to the microphone jack (on the front panel) and SP jack (on the rear panel) on the transceiver.

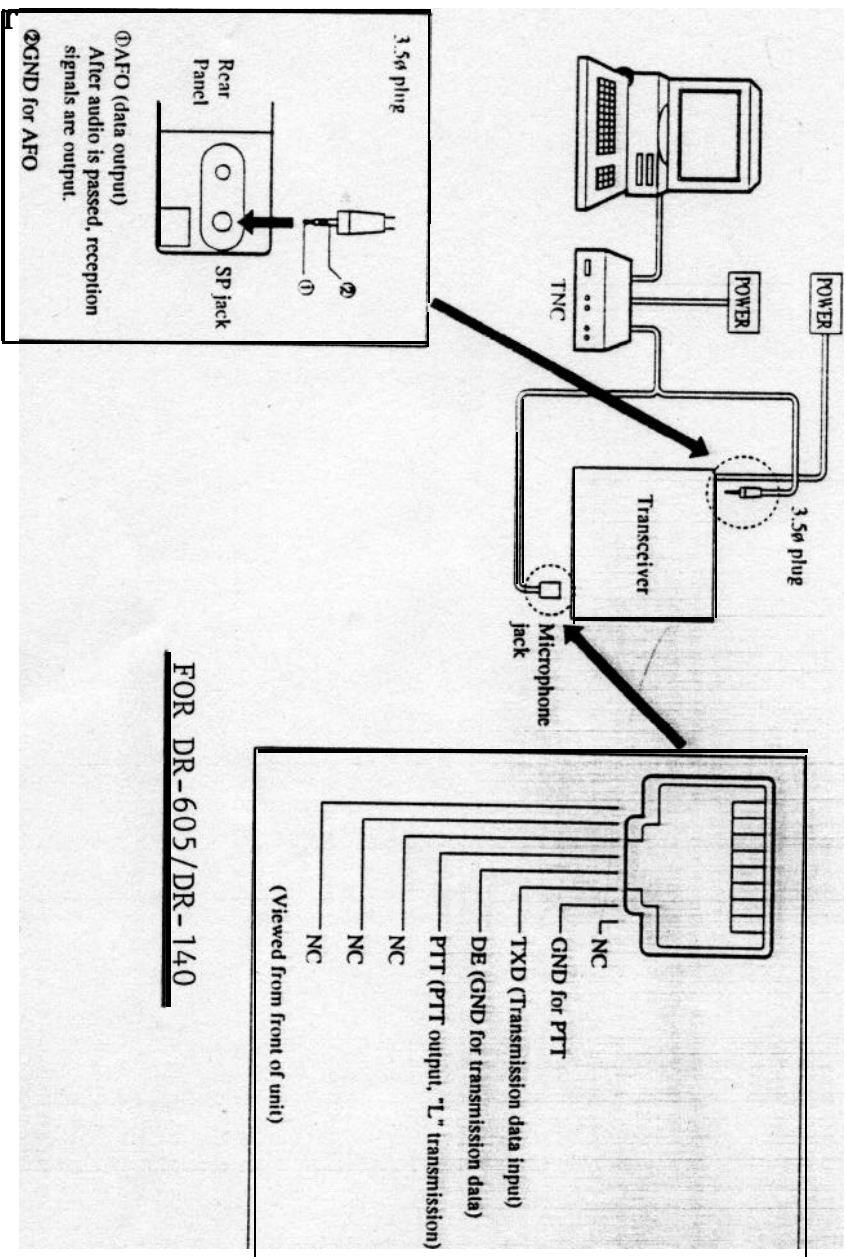

FOR DR-605/DR-140