

## **MENU**

**OUT** POWER OUTPUT, 0.1-7.0 W

(hold DISPLAY to select P=0)

**STL** SIDETONE VOLUME LEVEL, 0-31

**STP** SIDETONE PITCH (Hz) or SPOT

**T-R** QSK DELAY, 0 - 900 ms

**RPT** AUTOREPEAT DELAY, 0-255 sec

**INP** KEYING DEVICE: Hnd, PDn, PDr

(hold DISPLAY to select ADn, ADr)

**IAB** IAMBIC MODE, A or B

**AGC** AGC On or Off; no S-meter if off

**LED** RIT/XIT/ATTN LEDs On or Off

**FLx** XTAL FILTER BW, 200-900 Hz

(hold FILTER to select FL1/2/3,

then *tap* WPM +/- to set bandwidth)

**Bx** BAND ASSIGNMENT, MHz

(*tap* BAND to select B1 or B2,

then *tap* WPM +/- to specify band)

**CAL** VFO CALIBRATION/TEST, per-band

(hold DISPLAY to select 1 kHz/100 Hz)

**SIG** S-METER ZERO SET: Lxx, xx = 30-70

(hold DISPLAY for scale: Hx, x = 2-6)

**NB** NOISE BLANKER: Off, NB1, NB2

**ATU** AUTO-TUNER mode (see ATU manual)

**PFn** PROGRAMMABLE FUNCTION BTN;

shortcut to selected menu entry

(set to "NOR" to use as XIT)

*Tap* to enter menu, hold to edit; use WPM+

/- to scroll

menu or modify parameters

*Tap* once to show band,

*tap* twice to change bands

Hold to select display

mode: normal, S-meter,

or BAT (supply voltage)

*Tap* for RIT on/off, hold for XIT on/off

(PFn normally = XIT; see MENU)

RX: VFO freq or S-meter

TX: bargraph, 1 bar per watt

## **LCD**

*Tap* to play message 1 or 2,

hold to record message 1 or 2

(when prompted with "1-2"

during message play,

*tap* 1 or 2 for single play,

hold 1 or 2 for auto-repeat)