


# MIDLAND 70-1336 PROGRAMMING INFO

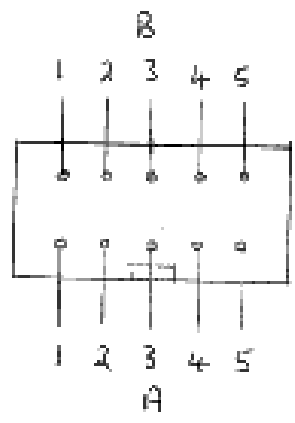

- |                |              |
|----------------|--------------|
| Pin 1A — GND   | Pin 1B — Nc  |
| Pin 2A — Nc    | Pin 2B — CD  |
| Pin 3A — SD    | Pin 3B — RD  |
| Pin 4A — CTS   | Pin 4B — RTS |
| Pin 5A — SWcut | Pin 5B — Nc  |

10 pin SOCKET ON SIDE OF RADIO

