

After install Fldigi on your computer and going through the Fldigi Wizard set up program.

Need to check out other setups.

At Configuration

A) **User Interface** "UI"

B) **General**

1) Visible modes, **OPTION**

2) Only check ☐

1. MT63 500L
2. MT63 1000L
3. MT63 2000L

C) **User Interface, OPTION**

1. ☐ Check for up date
2. **Prompt to SAVE Configuration**

D) **Modems**

MT-63, All should be check EXCEPT the last one.

☐ Allow manual tuning

E) **Audio**

1. Check ☐ Port Audio:
2. Set to Capture: *Internal Mic (IDT High Definition Codec)*
3. Set to Playback: *Speakers /Headphone (IDT High Definition Audio Codec)*

Use's using SIGNALINK, set your AUDIO:

Set to Capture: *Microphone (USB Audio CODEC)*
Set to Playback: *Speakers (USB Audio CODEC)*

F) **ID**

1. **RsID**
2. Reed-Solomon ID (Rx)Receive modes
Only check ☐
 - a. **MT63 500L**
 - b. **MT63 1000L**
 - c. **MT63 2000L**
3. **ONLY one:** ☐ Searches passband
4. **Slide bar: Errors** 0 for HF 1or2 VHF and UHF
5. **Slide bar: Squelch open "0" Zero**
6. Reed-Solomon ID (Tx)Transmit modes
Only check ☐
 - a. **MT63 500L**
 - b. **MT63 1000L**
 - c. **MT63 2000L**
7. **CW**
Check ☐ Transmit callsign
Speed (WPM) 10min-25

G) Misc

1. NBEMS
2. NBEMS date file interface: CHECK
 - ☐ Enable
 - ☐ Open message
3. Reception of flmsg files: CHECK
 - ☐ Open with flmsg
 - ☐ Open in browser

Flmsg: "See Below" Locate flmsg

4. Set 3.0 Timeout (secs)

Whatever you download a Update FLDIGI you need to check FLMSG: setting, NBEMS file.

LOCATE flmsg

Flmsg setup for System 7 and 8

C:\Program Files (x86)\flmsg-1.1.xx\flmsg.exe

C:\
Program files(x86)\
flmsg-1.1.xx\
flmsg.exe

////////////////////////////////////

Flmsg setup for Vista and XP

C:\Program Files\flmsg-1.1.xx\flmsg.exe

C:\
Program files\
flmsg-1.1.xx\
flmsg

On Fldigi top right side turn on **RxID** and **TxID**.

RxID button - toggles the detection of [Reed Solomon Identification](#) codes.

TxID button - toggles the transmission of the RSID signal.