



Audio Jack pins are numbered from the front to the back starting with pin #1 as Ground

MCT II is a greatly simplified (fewer parts populated) MCT III board with 3V power and a Piezo speaker.

Push "HM" during Power On to set FlashMagic ISP programming mode. Power On again to reset.

TITLE: <b>MCT II LPC824 CW Word Trainer</b>		REV: 1.0
Date: 2018-01-12	Sheet: 1/1	
EasyEDA V4.1.3	Drawn By: K5BCQ	