

VHF/UHF SWR/Power Meter
(190-0320)
17348

Operation

Faxback Doc. #

USE WITH SWR FUNCTION

1. Set function to SWR.
2. Set range switch to 15 for 0-15 W transceivers and 60 for 15-60 W transceivers.
3. Transmit and measure using chart on the back of the meter.

VHF/UHF SWR/Power Meter (190-0320) Specifications Faxback Doc. #
14652

Bands: 2m, 70
cm

MHz Ranges:

2m: 140 - 150
MHz
70cm: 430 - 450
MHz

Measuring Range: up to 60
W

Connectors: S0-
239

Dimensions: 2 9/16" x 3 1/4" x 1
1/16"

Specifications are typical; individual units might vary. Specifications
are subject to change and improvement without notice.

(TLC/all-04/20/95)

190-0320 VHF/UHF/SWR PWR METER Faxback Doc. # 21281

To order parts call 1-800-843-7422 or visit your local RadioShack store.

Reference #	Cat.No.	Description	NP Part #
-----	-----	-----	-----
	10822591	MANUAL,SERVICE 19-320	MS1900320
	10844413	MANUAL,USERS 19-320	MU1900320

(This list was generated on 07/08/2005)