


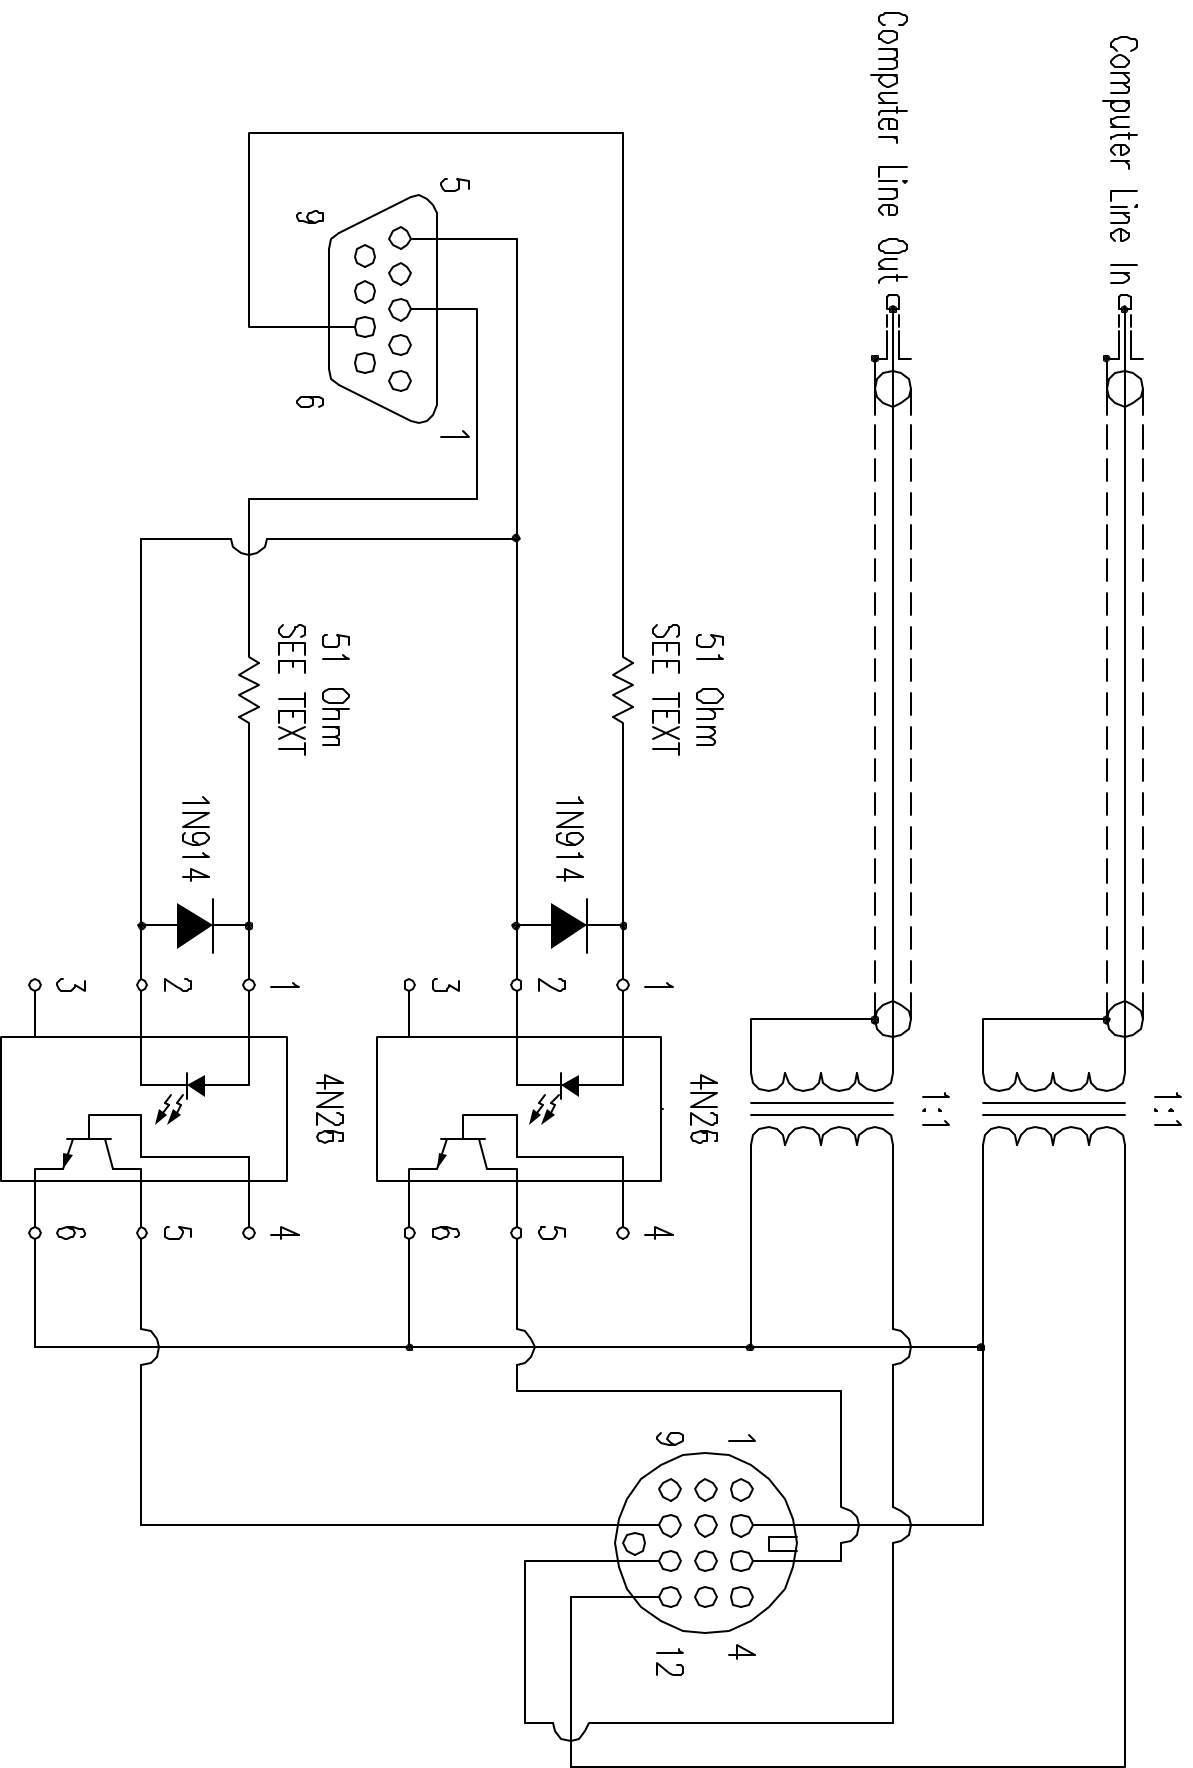

Notes:
 Use 51 Ohm resistor for 5V RS-232 Signal levels.
 Use 1.2K Ohm resistor for 12V RS-232 Signal levels.