



TTY-232 board connections -- Remove jumper from H101-1 to H101-2