

N1KDO's VX-5R Crib Notes

Key	Key Alone	FW then Key	Key held down
TN FRQ 1	Frequency Entry Digit "1"	Activate CTCSS or DCS operation	Enable display of sub-band frequency
CD TAG 2	Frequency Entry Digit "2"	Set CTCSS tone or DCS code number	Select Frequency only or Frequency & Label display
DT VLT 3	Frequency Entry Digit "3"	Activate the DTMF autodialer function	Display battery voltage and type
MG DSP 4	Frequency Entry Digit "4"	Activate the Memory Group mode	Select large or small display characters
AP ICO 5	Frequency Entry Digit "5"	Activate Automatic Power Off Feature	Select alphanumeric or icon display
RP ONT 6	Frequency Entry Digit "6"	Select + or - repeater shift	Display operating and transmit timers
ST TMP 7	Frequency Entry Digit "7"	Select Tuning Step for VFO operation	Display internal temperature
BRO 8	Frequency Entry Digit "8"	(none)	Display current barometric pressure
BP ALT 9	Frequency Entry Digit "9"	Enable/Disable Keypad Beeper	Display current altitude
SQ WX 0	Frequency Entry Digit "0"	Adjust the Squelch	Recall weather channels
SET AR BAND	Change Band	Enter "Set Mode"	Activate ARTS feature
SKP SC MR	Switch to Memory Mode	Mark a channel to be skipped during scan	Initiate Memory Channel scanning
EMG HM/RV	Reverse Transmit and Receive Frequencies	Switch to the "Home" channel	Activate the Emergency Feature
LOCK TX PO	Select Transmitter Power	Activate Keyboard Lock	(none)
DW SC VFO	Select VFO Mode	Activate "Dual Watch"	Activate VFO scanning
PTT	Transmit	Temporary High Power Transmit	Transmit
MONI	Disable Squelch (Noise and Tone)	Reverse Transmit and Receive Frequencies	(none)
LAMP	Illuminate Display and Keypad for 5 seconds	Activate Spectrum Analyzer Feature	Lock Display and Keypad lamp on until lamp button pressed