INSTRUCTION MANUAL

MODEL 92C V

RF MILLIVOLTMETER

92C b-173



ienca elept.

TEL: 201-887-5110 TWX: 710-986-8241 ROUTE 287 AT SMITH ROAD PARSIPPANY, N. J. – 07054



5 6 6 5 🗩

Model 92C

TABLE OF CONTENTS

CHAPTER		PAGE
1	SPECIFICATIONS	1
Π	GENERAL DESCRIPTION 2.1 GENERAL 2.2 EQUIPMENT DESCRIPTION 2.2.1 Wide Frequency Range 2.2.2 Wide Voltage Range 2.2.3 True RMS Response 2.2.4 Low Noise 2.2.5 Minimal Zero Adjustment	7 7 8 8 8 9 9 9
	OPERATING PROCEDURE 3.1 INSTALLATION PROCEDURE 3.1.1 Operating Controls and Indicators 3.2 OPERATING PROCEDURES 3.2.1 Initial Operating Procedure 3.3 OPERATING NOTES 3.3.1 Overload Limits 3.3.2 Connection for Measurements Below 100 MHz 3.3.3 Connection for Measurement Above 100 MHz 3.3.4 Low-Level Measurement 3.3.5 Making the Zero Adjustment 3.3.6 Signal Overload on 3 mV Range 3.3.7 Temperature Effects 3.3.8 Hum, noise and Spurious Pick-up 3.4 LOW-FREQUENCY MEASUREMENTS 3.5 CORRECTION CURVES FOR ACTUAL VOLTAGE vs METER READINGS 3.6 CORRECTION CURVE FOR MODEL 91-88 3.7 CORRECTION CURVE FOR MODEL 91-14A	10 10 11 11 12 12 12 14 14 14 14 15 15 15
IV	THEORY OF OPERATION 4.1 GENERAL 4.1.1 RF Probe 4.1.2 Attenuator and Amplifiers 4.1.3 Synchronous Detector 4.1.4 Shaping Amplifier 4.1.5 Chopper-Driver Circuits 4.1.6 Power Supply	18 19 19 19 20 20 20

92C a-871

TABLE OF CONTENTS (Cont'd)

CHAPTER		PAGE
V	MAINTENANCE 5.1 PERIODIC CALIBRATION 5.2 PRECAUTIONS WHEN CHECKING CALIBRATION 5.3 CALIBRATION CHECK 5.4 CALIBRATION PROCEDURE 5.5 TROUBLE-SHOOTING	21 21 21 21 21 21
	5.5.1 No meter indication, ZERO control has no effect 5.5.2 All readings are abnormally low 5.5.3 Readings are erratic on one range 5.5.4 Pilot lamp lighted, instrument inoperative 5.5.5 Pilot lamp dark, instrument inoperative 5.5.6 Replacement of Probes	22 23 23 23 24 24 24

LIST OF ILLUSTRATIONS

FIGURE No.		PAGE
1	Input Resistance of RF Probe as a Function of Input Level and Frequency	5
2	Input Capacitance vs. Input Level of Model 91–12F Probe (at 10 MHz)	6
3	Typical VSWR of Model 91–12F Probe with Model 91–8B 50 Ω BNC Adapter	6
4	Typical VSWR of Model 91–12F Probe with Model 91–14A Type N Tee Adapter and Model 91–15A 50 Ω Termination	6
5	Method For Making Low–Inductance Connection to Test–Signal Point Directly Using the RF Probe	13
6	Assembly of Model 91–14A Type N Tee Adapter	13
7	Correction Curves, Actual Voltage vs. Meter	16
8A	Model 91–8B 50 Ω Adapter Correction Curve	17
8B	Model 91–14A Type N Tee Adapter Correction Curve	17
9	Model 92C Block Diagram	18

111

LIST OF ILLUSTRATIONS (Cont'd)

FIGURE No		PAGE
10	Calibration Instructions on Underside of Top Cover	25
List of Replac	eable Parts	Following Text
Schematics		Endfold

CHAPTER I

SPECIFICATIONS

Voltage Range:	500 μ V to 3V (300V up to 700 MHz with accessory
	100:1 Voltage Divider) (see Table 1)

Full Scale Voltage Ranges:

3, 10, 30, 100, 300, 1000, and 3000 mV.

dBm Range: -50 to +23 dBm (+63 dBm up to 700 MHz with optional accessory, Model 91-7C 100:1 Voltage Divider)

Frequency Range:

10 kHz to 1.2 GHz (uncalibrated response to approximately 8 GHz).

Accuracy:

		2% fs plus					
300 mV to 3	V 1% rd	g			10% rdg		
500 $_{\mu}V$ to 300 m $^{\prime}$	V 2% rd	g 1%	rdg 3	3% rdg	7% rdg		
	10 kHz	50 kHz	150 MHz	700	MHz 1.2	GHz	
Meter:	4-1/2-i Two line 0 to 0 to One log -10 to -	nch taut-band ear voltage sca 3; 0.05 per 10; 0.1 per d parithmic dBm s 3; 0.2 per d	les division livision cale livision max.				
Meter Unrest:	Typicall	y, less than 1%	6 on the 3 mV r	ange.			
Power:	115 to 2	$230 \vee \pm 10\%$, 50) to 400 Hz, 4	w.			
RFI:	There is or probe	no detectable	radiated or con	ducted lea	akage from ins	strument	
Temperature:	In acc	cordance with A	ANSI (ASA) Spe	ec. 39.7			
	Tempe	erature	Temper	ature	Influenc	e	
	Ra	nge	Instrum	ent	RF Prob	e	
	Ref. 2 Norm Sever	21 ° C to 25 ° C al, 18 ° C to 30 e, 10 ° C to 40	0 ° C 0 ° C ± 1% rd	g	0 ± 1% rdg ± 4% rdg	3	

Waveform Response:	True rms response for input levels up to 30 mV (3V to 700 MHz with 100:1 Voltage Divider), with transition to peak-to-peak (calibrated in rms) at higher levels.
Crest Factor:	84 to 1.4 depending upon input level (see Table II).
Input Impedance:	See Figures 1 and 2.
VSWR:	Less than 1.15 to 1.2 GHz (Return Loss greater than 23 dB). See Figures 3 and 4.
Power Sensitivity:	5 nW, minimum detectable power in 50 ohms.
Dimensions:	5.2" H (without rubber feet), 8.3" W (1/2 of standard 19 inch rack module) 11.5" D (132 x 211 x 292 mm).
Weight:	Net 7.5 lbs. (3.4 kg) (with standard accessories) Shipping – 10 lbs. (4.6 kg)
Accessories Furnished:	Model 91–12F, RF Probe. RF Probe with low-noise cable and con- nector assembly for measurements from 10 kHz to 1.2 GHz; see Fig- ures 1 and 2 for input resistance and capacitance.
	Model 91–13B, Probe Tip. Removable Probe Tip with grounding clip lead; for use up to approximately 100 MHz.
	Model 91–8B, 50 Ω BNC Adapter. Use for measurements up to 600 MHz in a 50-ohm system, for VSWR see curve of Figure 3.
Warm-Up:	Warm-up period, 1 min. Adjust zero on 3 mV range when measuring below 30 mV.
Accessory Kit (Optional) Model 91–24A:	Model 91-6C, Unterminated BNC Adapter. Used for coaxial con- nection up to approximately 100 MHz, or to 400 MHz when fed from a 50-ohm source in an electrically short system.
	Model 91–7C, 100:1 Voltage Divider. Attenuates input signal by a factor of 100 (\pm 1%), permitting measurements up to 300 volts and extending the rms measuring range to 3 volts; increases input resistance by a factor of 1000; operates from 50 kHz to 700 MHz. Maximum input potential, 1000 volts, dc plus peak ac.
	Model 91–14A, 50Ω Tee Adapter. Type N Tee Connector; with Model 91–15A termination (see below) permits connecting into 50-ohm line; required for measurements above approximately 100 MHz: for VSWR see curve of Figure 4.
	Model 91–15A, 50 Ω Termination. Type N 50-ohm termination for use with Model 91–14A Tee Connector.

SPECIFICATIONS (Cont'd)

Other Accessories (Optional) Available: Model 91-4C, Special 1 kHz to 250 MHz RF Probe. Low-frequency probe for measurements ranging from 1 kHz to 250 MHz; input resistance essentially the same as that of Model 91-12F, RF Probe.

Model 91-16A, Unterminated Type N Adapter. May be used with all probes, except Model 91-23A. Used for coaxial connection up to approximately 100 MHz, or to 400 MHz when fed from a 50-ohm source in an electrically short system.

Model 92-1A, Rack Mounting Kit. Kit for mounting Model 92C as one-half of a module in a standard 19 inch rack.

IMPORTANT NOTE:

To exploit fully the capabilities of this instrument, the accessories listed below are required for the indicated ranges of operation.

Tabl	le	1.	Req	uired	accessories
	-				

MEASURING RANGE	REQUIRED ACCESSORY	REMARKS
100 MHz to 600 MHz	Model 91-8B 50Ω Adapter for shielded connection to 50-ohm line; other impedances avail- able on request.	Supplied as standard equipment with the Model 92C.
Above 600 MHz	Model 91–14A Tee Connector and 91–15A 50 Ω Termination for connection into 50–ohm line.	Available separately.
1 kHz to 250 kHz	Model 91-4C RF Probe.	Available separately.
Input levels up to 300V; rms response with levels to 3V.	Model 91–7C 100:1 Voltage Divider; operates over frequency range from 50 kHz to 700 MHz.	Available separately.

For details on the availability of these and other Boonton Electronics Accessories for RF Voltmeters, call on your local Boonton Electronics Sales Engineering Representative, or write directly to the factory at the address on the title page of this instruction book.

TI		2	<u> </u>	E
ab	e	1.	Crest	Factor
	-	_		

VOLTAGE RANGES (mV) AND CREST FACTORS							
VOLTAGE RANGE (mV)	3	10	30	300*	1000*	3000*	
CREST FACTOR**	84 to 14	21 to 4.2	8.4 to 1.4	84 to 14	21 to 4.2	8.4 to 1.4	

* With accessory 100:1 Voltage Divider (see Table 1).

**Maximum permissible ratio of peak to rms value of voltage.

STANDARD EQUIPMENT OPTIONS

92C-03	dBV option:	dB scale	e is ref	erred to	51V.	

- 92C-04 dBV option: dB scale, referred to 1 V, is uppermost.
- 92C-05 75 Ω dBm option: dBm scale is referred to 75 Ω : 75 Ω 91-8B/1 BNC adapter supplied.
- 92C-06 75 Ω dBm option: dBm scale, referred to 75 Ω , is uppermost: 75 Ω 91-8B/1 BNC adapter supplied.
- 92C-07 50 Ω dBm option: dBm scale, referred to 50 Ω , is uppermost.
- 92C-08 Rear signal input option.
- 92C-12 dBmV option: dBmV scale is uppermost.





92C a-871



Figure 2. Input Capacitance vs. Input Level of Model 91-12F Probe (Measured at 10 MHz)









92C a-871

CHAPTER II

GENERAL DESCRIPTION

2.1 GENERAL. The Model 92C RF Millivoltmeter is a solid state, sensitive, rf millivoltmeter used for measurements from the low radio frequencies to the gigahertz region, and over a voltage range from 500 microvolts to 3 volts.

The Model 92C provides true rms response for input signals up to 30 millivolts, gradually approaching peak-to-peak response calibrated on the meter scale in rms above this level. It is characterized by high input impedance (see Figures 1 and 2), excellent stability, and low noise.

The Model 92C is particularly suitable for production and laboratory applications. It offers a convenient and accurate means for making a wide variety of measurements. Among the typical uses of the Model 92C are the following:

In transistor testing the instrument may be used to measure β , f_t , and other transistor parameters.

VSWR and return loss measurement using the Model 92C with bridge methods, directional couplers, and adjustable or slotted lines.

Gain and loss measurements in wide-band amplifiers, including such design characteristics as stage gain, flatness of the pass band, upper cut-off or corner frequency, negative feedback factors, and other parameters.

Proper adjustment of tuned circuits in narrow-band amplifiers.

The adjustment, measurement of performance, and evaluation of parameters of rf filters.

Measurement of vswr or return loss and attenuation of rf attenuators.

Measurement of output levels of signal generators, adjustment of baluns, harmonic distortion of rf signals, and adjustment of circuits for minimum voltage (null) or maximum voltage (peak).

The Model 92C has a basic accuracy of 1% rdg. + 2% fs. The standard features of the instrument are as follows:

Measures 500 µV to 3V* from 10 kHz to 1.2 GHz. True rms response to 30 mV** Convenient push-button ranging and half-rack packaging. High input resistance, low input capacitance. Overload protection to 400 Vdc, 10 Vac. VSWR less than 1.15 up to 1.2 GHz. * To 300 V, up to 700 MHz with accessory 100:1 divider. ** To 3V, up to 700 MHz with accessory 100:1 divider.

The characteristics of the instrument include: solid state chopper, high reliability, fast warm-up, lengthy intervals between calibrations, light weight, and all other advantages of solid state design.

2.2 EQUIPMENT DESCRIPTION. The instrument is sensitive, accurate, sturdily constructed, and protected against overloads. It will perform over extended periods of time without failure or need for recalibration. It is packaged as a compact (half-rack) bench instrument that can be easily mounted in a standard 19-inch rack using an inexpensive hardware kit.

Important input and accuracy specifications are stipulated on a reference plate fastened to the exterior top cover of the instrument. Clips for holding out-of-use accessories are provided at the rear of the instrument. Calibration instructions are reproduced on the underside of the top cover of the instrument.

The standard accessories furnished with the Model 92C include the following: A Model 19-12F RF Probe with a low-noise cable and connector assembly; a Model 91-88 50-ohm BNC Adapter, and a Model 91-13B Probe Tip (removable) with a grounding clip lead.

A complete kit of probe accessories is available as optional equipment, including a storage case with space for the Model 91–12F RF Probe and the other standard accessories.

2.2.1 Wide Frequency Range. The calibrated range of the Model 92C extends from 10 kHz to 1.2 GHz, with uncalibrated response to beyond 8 GHz. Relative accuracy above 1.2 GHz is typically ± 0.5 dB.

A Model 91-8B 50-ohm BNC Adapter is supplied as a standard accessory with the instrument for 50-ohm voltage measurements up to 600 MHz. A correction curve (Figure 8A) is included for frequencies above 50 MHz. For higher-frequency measurements and for through-line voltage measurements the optional accessory, Model 91-14A Tee Adapter, is recommended. It is designed to compensate for the rf probe capacitance and to present a good vswr (better than 1.15) up to 1.2 GHz. It may be used in conjunction with the Model 91-15A 50-ohm load for terminated voltage measurements. In a coaxial line its insertion loss is low; however, a chart (Figure 8B) is supplied showing loss vs. frequency.

An optional accessory, the Model 91–4C RF Probe, has a frequency range of 1 kHz to 250 MHz for lower-frequency applications.

2.2.2 Wide Voltage Range. The Model 92C has seven ranges, from 3 millivolts full scale to 3 volts full scale, arranged in a 3-10-30 sequence. No attenuator attachments are required for measurements up to 3 volts. While this range is ample for most rf voltage measurements, the capability of the instrument can be increased to 300 volts (up to 700 MHz) by using the optional accessory, Model 91-7C 100:1 Voltage Divider. Use of the Divider also increases the input resistance of the Model 91-4C RF Probe by a factor of greater than 100.

2.2.3 <u>True RMS Response</u>. The Model 92C provides true rms response for signal inputs below approximately 30 millivolts (below 3 volts, up to 700 MHz, with the Model 91-7C 100:1 Voltage Divider). As the input level increases, the waveform response gradually approaches peak-to-peak, calibrated on the meter scale in rms. Thus, in addition to making precise sinusoidal voltage measurements at all levels, the instrument measures non-sinusoidal or asymmetrical signals within the rms region without loss of accuracy.

2.2.4 Low Noise. The Model 92C has been designed and constructed to hold noise from all sources to a minimum.

The probe cable is of special low-noise design; a vigorous flexing causes only momentary, minor deflections on the most sensitive range. The Model 91–12F Probe is not sensitive to shock or vibration; even tapping on the probe barrel causes no visible deflection on any range.

Amplification takes place at 94 Hz, reducing susceptibility to any 50 or 60 Hz linefrequency fields.

2.2.5 <u>Minimal Zero Adjustment</u>. Zero adjustment is not required on the upper five sensitivity ranges of the Model 92C. For measurements on the lower two ranges, the ZERO control is set on the most sensitive range before operation. This control balances out small thermal voltages in the probe elements and, once adjusted, requires only infrequent checking during the course of subsequent measurements.

CHAPTER III

OPERATING PROCEDURE

3.1 INSTALLATION PROCEDURE. The Model 92C has been inspected and tested at the factory before packing, and is shipped ready for operation. If there is any indication of shipping damage, immediately notify the carrier before attempting to put the instrument into operation.

3.1.1 Operating Controls and Indicators. The controls and indicators installed on the Model 92C are shown in Table 3.

COMPONENT	FUNCTION			
(Symbol on Rear Panel)	This safety requirement symbol has been adop- ted by the International Electrotechnical Com- mission, Document 66 (Central Office) 3, para- graph 5.3 which directs that an instrument be so labeled, if, for the correct use of the instru- ment, it is necessary to refer to the instruction manual. In this case it is recommended that reference be made to the instruction manual when connecting the instrument to the proper power source.			
	Verify that the right fuse is installed for the power available and that the switch on the rear panel 0.03A and 0.06A, 50-400 Hz, is set to the applicable operating voltage of 115 V or 230 V. Within a brief time, the use of this symbol will be acted upon by ANSI (ASA).			
Fuse Holder and Fuse (Rear Panel)	A fuse holder is located on the rear panel for installing either a 1/16 ampere, 117 V, or a 1/32 ampere, 220 V, Bussman MDL SLO-BLO fuse.			
Slide Switch (Rear Panel)	Switch which is set to 115 V or 230 V, accord- ing to the available power source. Be sure that the proper fuse is located in the fuse holder.			

Table 3. Model 92C Controls and Indicators

COMPONENT	FUNCTION
PWR ON	This switch turns on the instrument.
RANGE, FULL SCALE (mV and dBm) (Push-buttons)	These range push buttons, (3, 10, 30, 100, 300, 1000 and 3000 mV) and (-40, -30, -20, -10, 0, +10 and +20 dBm) select the voltage range.
PROBE (Jack)	The probe cable connects to the instrument through this PROBE jack. Always check that the knurled ferrule nut of the probe cable con- nection is tightened when in use.
ZERO (Control)	This control is used to zero the instrument.
Component Holders (Clips) (Rear Panel)	Three component holders or component clips are located on the rear panel for securing ac- cessories which are not in use.
METER	A 4 1/2-inch taut-band meter with two linear voltage scales reading out 0 to 3 with 0.05 per division; 0 to 10 with 0.1 per division; and one logarithmic dBm scale reading out -10 to +3 with 0.2 per division maximum.

Table 3. Model 92C Controls and Indicators (Cont'd)

3.2 OPERATING PROCEDURES. The following paragraphs describe the initial operating procedure for the Model 92C, the various operating notes, and the recommended connection procedures.

3.2.1 Initial Operating Procedure. The Model 92C is put into service by the following procedure:

a. Check the panel meter zero position and, if necessary, adjust the mechanical zero control to align the pointer with the zero reference.

NOTE:

Check to see that the serial number of the probe to be used matches that of the particular model of the Model 92C. Each instrument is calibrated for its particular rf probe. Use of a probe other than that for which the instrument was calibrated may result in errors in measurement.

- b. Connect the probe cable to the PROBE jack on the front panel.
- c. Next, verify that the proper power source is available. The instrument should be plugged only into a power source having the voltage and frequency indicated on the instrument rear panel.
- d. With the power cord plugged into the proper ac power source, turn the instrument on. The Model 92C is operational within 30 seconds.

3.3 OPERATING NOTES. While measuring with the Model 92C is a direct and straightforward process, there are certain precautions and procedures which MUST be observed to obtain satisfactory results.

3.3.1 Overload Limits. The Model 91-12F RF Probe supplied with the Model 92C is overload-protected to 10 volts, ac, and to 400 volts, dc. EXCEEDING THESE LIMITS MAY RESULT IN PERMANENT DAMAGE TO THE PROBE.

The Model 91-8B 50-ohm Adapter should not be subjected to continuous overload of more than 10 volts (dc + rms ac) to avoid excessive heating of the terminating resistor.

When voltages above these limits are likely to be encountered, the Model 91-7C 100:1 Voltage Divider is required. Maximum rating of the Voltage Divider is 1000 volts, dc + peak ac.

3.3.2 Connection for Measurements Below 100 MHz. The RF Probe supplied with the Model 92C is equipped with a detachable tip and ground lead. For measurements of signals below approximately 100 MHz, this tip provides a convenient means for both signal and ground connection.

3.3.3 Connection for Measurement above 100 MHz. For frequencies above 100 MHz, the probe tip should NOT be used with the Model 92C. Connection should be made directly to the center contact of the probe with the ground connection kept as short as possible (see Figure 5).

The connection recommendations outlined in Table 4 below should be followed to maintain specified accuracy.

FREQUENCY	SIGNAL CONNECTION
Up to 100 MHz	Probe Tip and grounding lead (supplied)
100 MHz to 250 MHz	Probe without tip (see Figure 5) (supplied)
250 MHz to 600 MHz	Probe with Model 91–8B 50Ω BNC Adapter (supplied)
Beyond 600 MHz	Probe with Model 91–14A Type N Tee Adapter and Model 91–15A Type N 50Ω Termination (see Figure 6) (optional ac- cessories)

Table 4. Connection Recommendations



Figure 5. Method for making low-inductance connections to test signal point directly using the RF Probe. (Use for in-circuit measurements when lowest capacitance loading is required or when ground lead inductance of probe tip cannot be tolerated).





3.3.4 Low-Level Measurement. The Model 92C has a sensitivity of 300 microvolts, and will provide reliable, reproducible measurements of signal levels as low as 500 micro-volts.

When using the most sensitive range, a preliminary zero adjustment is required. On the 10 mV range, particularly for measurements above mid-scale, proper zero adjustment is less critical, although still recommended.

3.3.5 <u>Making the Zero Adjustment</u>. When the instrument is to be used on the 3 mV range, the following zero procedure applies:

- a. Set the RANGE FULL SCALE selector to the 3 mV position.
- b. See that no voltage is applied to the probe, and that the probe is adequately shielded from local fields (for test procedure, see paragraph 3.3.8).
- c. Adjust the ZERO control to bring the reading toward a zero reference condition. Noise will cause the reading to fluctuate up to $\pm 2\%$ of full scale. Adjust the ZERO control so that the reading averages zero.

3.3.6 Signal Overload on 3 mV Range. On the most sensitive (3 mV) range, application of a large ac signal overloads the amplifier and a short time is required for the highimpedance input circuit to discharge. This effect is significant for signals above approximately 100 millivolts. Typically, application of a 1 volt signal will require a recovery time of about fifteen seconds before subsequent measurements may be made. It should be noted, however, that such overloads cause no damage to the equipment as long as they are within the limits outlined in paragraph 3.3.1.

3.3.7 <u>Temperature Effects</u>. The accuracy specifications for the Model 92C apply over temperatures from 50°F to 104°F. Outside of these limits, operation of the equipment is possible but appreciable inaccuracies can be expected. However, no permanent change in probe characteristics will result from any reasonable high or low temperature exposure.

It should be noted that inaccuracies of measurement resulting from temperature effects may occur shortly after soldering to the probe tip, or measuring with the probe in close proximity to sources of intense heat, such as vacuum tubes.

When making low-level measurements (below approximately 2 millivolts) it is important to make sure that the probe has attained a uniform temperature throughout its body. A temperature gradient between the inside and outside of the probe can generate a small thermal voltage that may add to the dc output of the detector diodes. This can be compensated for by turning off the signal source and re-adjusting the ZERO control. 3.3.8 Hum, Noise and Spurious Pick-up. When measuring low-level signals precautions should be taken to avoid the possibility of measurement errors from hum, noise, or stray rf pick-up. Although hum and low-frequency noise are attenuated at the input, it is still possible for unwanted high-level signals to cause errors. In some cases it may be necessary to provide extra shielding around the probe connections to reduce stray pickup. Typical sources of spurious radiation are: induction or dielectric heating units, diathermy machines, local radio transmitters and grid dip meters.

3.4 LOW-FREQUENCY MEASUREMENTS. The Model 91-12F RF Probe supplied with the Model 92C provides measurements within the specified accuracy from 10 kHz to 1.2 GHz. For measurements at lower frequencies the Model 91-4C RF Probe is available. It operates over a frequency range from 1 kHz to 250 MHz. Important Note: After installing the Model 91-4C RF Probe, the Model 92C must be checked for accuracy of calibration, and recalibrated if required (see paragraphs 5.3 and 5.4).

3.5 CORRECTION CURVES FOR ACTUAL VOLTAGE vs. METER READINGS. Use the correction curves of Figure 7 to correct meter readings on the Model 92C and Model 92C Option Instruments.

3.6 CORRECTION CURVE FOR MODEL 91-8B. Use the correction curve of Figure 8A to make corrections when using the Model 91-8B, 50Ω BNC Adapter with the Model 92C and Model 92C Option Instruments.

3.7 CORRECTION CURVE FOR MODEL 91–14A. Use the correction curve of Figure 8B when using the Model 91–14A Type N Tee Adapter.



Down-Scale Correction (0 to 3 scale)

Figure 7. Correction Curves, Actual Voltage vs. Meter Reading

92C a-871



CORRECTION FOR ADAPTER LOSS

Figure 8A. Model 91-8B 50Ω BNC Adapter Correction Curve.

CORRECTION FOR INSERTION LOSS



Figure 8B. Model 91-14A Type N Tee Adapter Correction Curve. Input voltage to tee adapter is indicated by voltmeter. Subtract the correction from the indicated value, in dB, to obtain output voltage of tee.

92C a-871

CHAPTER IV

THEORY OF OPERATION

4.1 GENERAL. The operating principles of the Model 92C are shown in the following block diagram. The essential elements of the instruments are the probe, chopper driver, chopper, attenuator, preamplifier, amplifier, pulse generator, synchronous detector, shaping amplifier, power supply, and a meter.



Figure 9. Block Diagram

4.1.1 <u>RF Probe</u>. The RF Probe embodies a full-wave diode detector which rectifies the signal under study to a dc voltage whose level is a function of the input level. While operating in the square-law region (below approximately 30 millivolts) the detector provides true rms response. As the input level increases beyond 30 millivolts, waveform response gradually approaches peak-to-peak, calibrated on the scale in rms.

In addition to increasing efficiency, use of full-wave rectification in the detector probe permits measurement of signals having highly asymmetrical waveforms without errors stemming from turn-over effect.

The diodes used in the RF Probe have been carefully selected for specific characteristics. The user is urged NOT to attempt their replacement with any off-the-shelf types. In case of damage to probe components, call on your local Boonton Electronics Sales Engineering Representative or the factory for instructions.

4.1.2 <u>Attenuator and Amplifiers</u>. The dc output of the probe is converted to ac by the chopper, and the resultant ac signal applied to the attenuator and amplifier sections. For each range the output voltage from the 2nd amplifier is approximately 3V peak-to-peak. This is accomplished by ranging both the attenuation and the gain of the second amplifier in the following manner:

RANGE	1 ATTN	GAIN 2nd AMP.
3 mV 10 30 100 300 1000 3000	1 1 0.15 0.04 0.01 0.004	100 10 1 1 1 1 1 1

The preamplifier has a constant gain of X100, and is designed for very low input noise. Both amplifiers have wide bandwidths and are stabilized by large amounts of negative feedback.

4.1.3 <u>Synchronous Detector</u>. The amplified ac signal from the second detector is converted to dc by the synchronous detector. The peak-to-peak amplitude is derived from a shunt-series capacitor storage circuit using JFET switches. The synchronous detector is driven by pulses generated in the chopper-driver circuit, thus assuring exact synchronization. The characteristics of the detector determine the effective bandwidth of the amplifier-detector combination and allow modification of the bandwidth for different range conditions. The detector also provides conversion without offset.

4.1.4 Shaping Amplifier. The conversion of rf to dc in the probe is non-linear, the response being virtually square-law for the lowest ranges and gradually becoming quasilinear for the 3V range. The shaping amplifier converts the non-linear output of the synchronous detector to a linear output by using a segmental approximation to the exact correction. The shaping amplifier is actually an operational amplifier so connected that, as the signal increases at its output, its gain is reduced by successively paralleling resistors across the feedback resistors. The number of segments required adequately to linearize the response varies from 6 for the "square-law" ranges down to 2 for the 3V range. The output of the shaping amplifier is +10V which drives the panel meter.

4.1.5 <u>Chopper-Driver Circuits</u>. The chopper-driver block provides all of the drive signals required by the instrument. The chopper frequency is obtained by dividing the output of a unijunction oscillator by two. The oscillator also generates the switching pulse for the synchronous detector. Diode gating feeds the pulse to the proper JFET depending upon chopper phase.

4.1.6 <u>Power Supply</u>. The power supply converts the ac input power to regulated +15V and -15V outputs. Each supply is protected by current limiting against accidental short circuits. The +15V supply is a zener-biased follower, and no adjustment is provided. The -15V supply is referred to a 6.2V zener, and the voltage is adjustable to -14.9V, $\pm 0.1V$.

CHAPTER V

MAINTENANCE

5.1 PERIODIC CALIBRATION. The Model 92C is designed to provide trouble-free operation over extended periods of time. However, as with any precision instrument, the instrument should be checked periodically to verify proper calibration. To make such calibration checks, the following equipment is required:

- a. A reliable signal source of 200 kHz to 500 kHz with less than 1% distortion at levels up to 3 volts.
- b. A precision ac voltmeter.
- c. A precision dc voltmeter capable of measuring -15.0V, $\pm 0.1\%$.

5.2 PRECAUTIONS WHEN CHECKING CALIBRATION. When checking the calibration of an instrument having the sensitivity and bandwidth of the Model 92C, it is essential to take precautions against errors resulting from stray pick-up voltages. (See paragraph 3.3.8.) A well-shielded signal source must be used in conjunction with coaxial connections to both the Model 92C and the standard reference meter. Even with a wellshielded generator and connections, it is sometimes possible for the reference meter to pick up stray rf signals and feed them into the probe. It is advisable to test for this condition by disconnecting the standard meter and noting any change in level.

5.3 CALIBRATION CHECK. Using the equipment listed in paragraph 5.1, check the calibration of the Model 92C on each range, using a test voltage equal to the full scale value. If the check reveals that recalibration is required, the procedure outlined in paragraph 5.4 should be followed.

5.4 CALIBRATION PROCEDURE. The Model 92C should be calibrated at room temperature (21° to 25°C) after a minimum warmup of one minute.

A calibration outline is provided inside the top cover of the instrument (see Figure 10). The adjustment references listed below are the same as those recorded on the top cover.

NOTE

Check the mechanical zero on the Model 92C with the power off before proceeding with the following adjustments.

Adjustment No. 1. Measure the -15.0V dc supply voltage at Test Point No. 5 located on the main amplifier board to the left of R145. Adjust R145 to $-15V \pm 0.1V$.

Adjustment No. 2. Set the RANGE FULL SCALE SELECTOR to the 3 mV Range and zero the instrument as described in paragraph 3.3.5. Adjustment No. 3. Set the RANGE FULL SCALE SELECTOR to the 30 mV Range and adjust R296 for a zero meter reading.

Adjustment No. 4. Set the RANGE FULL SCALE SELECTOR to the 3 mV Range (zero as in Adjustment No. 2 above), apply 3.00 mV, $\pm 0.2\%$, input and adjust R208 for a 3.00 mV reading.

Adjustment No. 5. Set the RANGE FULL SCALE SELECTOR to the 10 mV Range (zero as in Adjustment No. 2 above), apply 10.0 mV, \pm 0.2%, input and adjust R220 for a 10.0 mV reading.

Adjustment No. 6. Set the RANGE FULL SCALE SELECTOR to the 30 mV Range, apply 30.0 mV, $\pm 0.2\%$, input and adjust R228 for a 30.0 reading.

Adjustment No.7. Set the RANGE FULL SCALE SELECTOR to the 100 mV Range, apply 100 mV, $\pm 0.2\%$, input and adjust R236 for a 100 mV reading.

Adjustment No. 8. Set the RANGE FULL SCALE SELECTOR to the 300 mV Range, apply 300 mV, $\pm 0.2\%$, input and adjust R255 for a 300 mV reading.

Adjustment No. 9. Set the RANGE FULL SCALE SELECTOR to the 1000 mV Range, apply 1000 mV, $\pm 0.2\%$, input and adjust R268 for a 1000 mV reading.

Adjustment No. 10. Set the RANGE FULL SCALE SELECTOR to the 3000 mV Range, apply 3000 mV, $\pm 0.2\%$, input and adjust R281 for a 3000 mV reading.

5.5 TROUBLE-SHOOTING. The conservative design of the Model 92C results in an instrument requiring a minimum of repair and maintenance. Should trouble develop, however, the procedures outlined in the paragraphs following will help in locating the defective component or circuit. They are listed in order of probability commencing with the RF Probe, which may be subjected to an accidental voltage overload severe enough to damage its diodes. Unless a fault is obvious enough to be immediately apparent, it is suggested that the trouble-shooting procedure be followed in the order given.

5.5.1 No meter indication, ZERO control has no effect: This symptom may indicate an open diode in the RF Probe. If another probe is available, substitution for the suspected probe will quickly determine whether or not this has happened. If no other probe is available, follow the procedure below.

a. Remove the probe connector from the front panel jack.

b. Jump the two terminals of the jack with a short piece of wire, and test the operation of the ZERO control on the 3 mV Range. If this control will now zero the meter, the trouble is probably in the probe. This can be confirmed by making a resistance measurement with an ohmmeter between the two pins on the probe connector. Using a high range on the ohmmeter, a good probe will show approximately $20 \text{ k}\Omega$ in one direction and virtually infinite resistance in the other. If a diode is open, resistance in either direction will be extremely high. 5.5.2 All readings are abnormally low: This is an indication that a probe diode has short-circuited under a severe overload. This condition cannot easily be verified with a VOM: if another probe is available, substitution for the suspected probe will quickly check this.

NOTE

The diodes used in the RF Probes are highly specialized components. Their replacement with other diodes should not be attempted. If the tests above verify that a diode has failed, the probe should be returned to the factory for repair.

5.5.3 Readings are erratic on one range:

- a. Check the tightness of the miniature connectors on the cable wiring between the two PC boards. If one of them appears loose on the pin, crimp with a pair of long-nosed pliers.
- b. Locate the miniature calibration potentiometer associated with the defective range in the row along the top edge of the vertical PC board (see Calibration Chart). Test it with an ohmmeter for correct resistance, and for good rotor contact. Refer to the Schematic or the Table of Replaceable Parts for the resistance value.
- c. Test the contacts on the appropriate section of the panel range switch for firm contact and low resistance.
- d. Using the Schematic, methodically trace the operating circuits of the instrument with an oscilloscope and a multitester. Waveforms, dc and ac voltages, and other values are included on the schematic.

5.5.4 Pilot lamp lighted, instrument inoperative:

- a. Remove the top and bottom covers of the instrument to allow easy access to all points of the circuitry. The vertical PC board may also be removed from the case and allowed to rest across the side frames; the cable is long enough to permit this, except for the two leads to the LED pilot lamp (brown and white/brown). These may be left unconnected.
- b. With the instrument turned on, check the dc output of the power supply. The +15 volts is available at the front terminal of C114, and the -15 volts at C115. Both voltages are measured to the chassis.
- c. If there is no dc output, check the terminations of the three wires from the power transformer on the back panel to the printed circuit board (red, red/yellow, and red/white) to see that they grip the pins firmly. Measure the ac voltages between these pins, and then the dc voltages through the power supply section to the output points.

d. If the normal dc output voltages are measured in Step b, the trouble should be sought in the other sections of the instrument. It is suggested that the Block Diagram, Figure 9, be consulted in conjunction with the Schematics at the back of the Instruction Book. Using an oscilloscope and voltmeter, a thorough analysis of the circuits should be made, working back from the output to the input. Dc and ac voltages, as well as waveforms, are indicated in the Schematics for critical points in the circuits.

5.5.5 Pilot lamp dark, instrument inoperative: This normally indicates primary power failure.

- a. Check the position of the line voltage switch on the rear panel to be sure that it is in the correct position for the line voltage used.
- b. Remove the line fuse from its socket on the rear panel and test it. See that it is the right size for the available line voltage.
- c. Remove the instrument's top cover by taking out the screw on the top rear of the cover. Examine the terminations of the two leads (grey and white/grey) running to the rear terminals of the panel power switch. See that the miniature connectors grip the pins firmly.
- WARNING: These leads carry the ac line voltage. Unplug the instrument's power cable before touching them.
- d. With the instrument still unplugged, test the panel power switch for continuity.
- e. With the power applied, methodically trace the operating circuits with oscilloscope and VOM, with particular attention to the range in question.
- NOTE: Removal of the bottom cover allows access to all parts of the circuitry. The vertical PC board may be removed by taking out the mounting screws from the four metal mounting pillars. The interconnecting wires are long enough to allow the board to function outside the case. The two short wires to the bottom of the panel range switch (brown and white/brown) are the supply leads to the LED pilot lamp; these must be unplugged before removing the PC board, and may be left unconnected during testing.

5.5.6 <u>Replacement of Probes</u>: The Model 92C has been calibrated at the factory with the probe supplied with the instrument. Both instrument and probe should have the same serial number. Should another probe be used, or the original probe be repaired, the instrument's calibration MUST be checked. In some cases full recalibration will be required (see procedure in Par. 5.4). Similarly, if the RF Probe supplied with the instrument is exchanged for a Model 91-4C Low Frequency Probe, recalibration may be required.

NO R	R FUNCTION	RANGE mV	INPUT ±0,2%	ADJUST TO
1 145	45 -15V ADJ	-	-	-15V ± 0.1V
2 401	OI FRONTPANEL	3	0	0
3 296	296 DC ZERO	30	0	0
4 208	208 RANGE ADJ	3	3 mV	3 mV
5 220	20 RANGE ADJ	10	IOmV	IOmV
6 228	28 RANGE ADJ	30	30 m V	30 m V
7 236	236 RANGE ADJ	100	100mV	IOOmV
8 255	255 RANGE ADJ	300	300mV	300mV
9 268	268 RANGE ADJ	1000	1000mV	1000mV
10 281	281 RANGE ADJ	3000	3000 mV	3000mV
	3000mV @ R28	300mV 🛞 - R25	100mV @ R23	3 mV (Ø R20 10 mV (Ø R22) 30 mV (Ø R22) R22

Figure 10. Calibration Instructions

92C a-871

25

TABLE OF REPLACEABLE PARTS

Reference			D	escriptio	n	BEC Part No.
A201 A202	Op Amp "			LM301 LM302		535002 535003
C101 C102 C103 C104 C105 C106 C107 C108 C109 C110 C111	Capacitor,	PE EL MIC EL EL EL EL EL EL EL EL PE	100n F 10μF 100p F 33μF 10μF 1.0μF 1.0μF 50μF 100n F	200V 20V 500V 20V 15V 20V 100V 35V 25V "	±10% ±20% ±5% ±20% ±20% ±20% ±20% ±20%	234005 283205 200001 283205 283206 283205 236007 283199 283199 283159
C112 C113 C114 C115	и п п	EL EL	250µF " 100µF	40∨ " 25∨ "		283207 " 283105
C201 C202 C203 C204 C205 C206 C207 C208	Capacitor,	PC PE MICA " PE MICA EL	100n F 6.8n F 100p F " 18n F 100p F 50µ F	25∨	10% 10% 5% " 5% 5%	234046 234044 200001 " 234064 200001 283159
C209 C210 C211 C212 C213 C214 C215 C216 C217		CER MICA CER PE PC " CER	10nF 33pF 10nF 22nF 100nF " 10nF		±5% 10% "	224119 200049 224119 230101 234046 " 224119
C401 C402	Capacitor,	PC "	100n F	50V "	±10%	234046

- PL 1 -

R	eference	Description	BEC Part No.
CR101 CR102 CR103	Diode "	FD300 1N914	530052 530058
CR104 CR105 CR106 CR107 CR108 CR109 CR110	Diode, Zener " Bridge, Rectifier Diode "	1N5243B 1N5235B 1N914 1N914 "	530101 530089 530058 532013 530058
CR111 CR112 CR113	Diode, Zener	" 1 N5246B 1 N5234B	530090 530093
CR201 CR202 CR203 CR204 CR205 CR206 CR207 CR208 CR209	Diode " " " " " " "	1N914 " " " " " "	530058 " " " " " "
CR210 CR211 CR212 CR213 CR214 CR215 CR216 CR217		FD300 1N914 " " FD300 1N914 "	530058 " " 530052 530058 "

F401	Fuse	1/16A 117V	545518
F401	н	or 1/32A 220V	545522
1401		1/024 2201	545522

M40I Meter

554238

- PL 2 -

	Reference		Description	BEC Part No.
Q101	Transistor,	Field Effect	2N5459	528019
0102	н	н	11	п
Q104	п	н	TI\$58	528038
Q105			HDGP100	528057
Q106	н	Field Effect	2N5459	528019
Q107	н	Factory S	elected	528044
Q108	n		2N5088	528047
Q109	н		2N5087	528042
Q110	11		MPSA66	528048
Q111			2N5087	528042
Q112			2N5088	528047
Q113		Field Effect	TIS58	528038
Q114		11	u u	п
Q115	п	u	п	11
Q116	11	11	2N5459	528019
Q117	н	п	п	"
Q118			Not Used	
Q119	н		MPSA66	528048
Q120			2N3903	528024
Q121	н		2N3905	528025
Q122		Field Effect	2N5459	528019
Q123	н	н	п	
Q124	п		2N4921	528034
Q125			2N4918	528033
Q126	н		2N5087	528042
0.001	- •.		2515007	529042
Q201	Iransistor		210308/	520042
Q202			21940/1	520012
Q203			214308/	J20042
Q204			MPE A 20	5200/2
Q205			MP3A20 2NI5097	528043
Q200			2143087	J20042
Q20/			2015000	5200/7
Q208			2193088	52004/
Q209				н
Q210	11		2015097	528042
0210			214300/	11
0212				п
0214	11		AADS A 20	528043
0214	11		2015097	528042
0213	н			528043
0210			MITSAZU 2N15097	528042
QZI/			214300/	520042

Reference		Description	BEC Part No.	
Q218	Transistor	2N5087	528042	
Q219		MPSA20	528043	
Q220	н	2N5087	528042	
Q221	u.	11		
Q222		MPSA20	528043	
Q223	н	2N5087	528042	
Q224	11		11	
Q225		MPSA12	528052	
Q226		TIS58	528038	
Q227			"	

Re	ference	nce Description					BEC Part No.	
R101	Resisto	r, Comp.		1ΜΩ	5%	1/2W	301159	
R102	"	0		Factory S	electe	d		
R103	н			2ΚΩ	5%	1/2W	301094	
R104		MF		5.62MΩ	1%	1/4W	325397	
R105	u			24.3KΩ	1%	3/8W	340405	
R106	11	11		80.6KΩ	1%	3/8W	326467	
R107	н	II.		374KΩ	1%	3/8W	340547	
R108	н	н		294KΩ	1%	3/8W	340535	
R109	u	и		1.0MQ	1%	3/8W	326700	
R110	п	Comp.		91KO	5%	1/2W	301134	
R111	н			47KO	5%	1/2W	301127	
R112	п	0		33KO	5%	1/2W	301123	
R113	п	п		300KO	5%	1/2W	301146	
R114	н	ME		1690	1%	3/8W	340147	
R115	н	Comp		1000	5%	1/2W	301111	
R116		"		10132	"	"		
R117	н	п		33KO	5%	1/21	301123	
R118		ME		15 0KO	1%	3/8W	340378	
R110	н	Comp		1560	5%	1/2/	301115	
R120	п	comp.		3 640	5%	1/2/	301100	
P121	11	Comp		340	5%	1/2/	301 009	
P122		comp.		1.40	5%	1/2/	201150	
D102	ш			2 740	5%	1/2/	201.007	
D124	н	н		5.440	5%	1/2/	201105	
D125	н			"	11	1/200	001100	
D124	н			140	50/	1 /2/1/	201007	
D127	11			5 140	5%	1/2/	301104	
D120	11	н		15KO	5%	1/2/	301115	
P120				160	5%	1/2/	301087	
D120	п	н		1040	5%	1/2/1	201111	
D121	н			20 140	1%	3/0/1/	324207	
D122	н			30.1152	1%	2/011	320377	
DIDD		11		2010	10/	2/011	2/0174	
D124	u			30122	10/	2/011	240042	
R134		Comm		140	50/	1/2/1/	201150	
R133		Comp.		11/152	50/	1/200	201004	
RI30				2440	5%	1/200	201120	
KI3/				2452	5%	1/200	301120	
R138	u	11		24	50/	1/2/1/	201.004	
R137				20	570	1/244	201 505	
R140				8.252	5%	1/200	301505	
K141				1000	5%	1/2/	301063	
R142				11	"	"	"	
D1 //	н	ME		3 9280	1%	3/8W	340311	
D145	11	Var		140	20%	1/2/1/	311257	
D1/4		ME		1 75KO	1%	3/2/	340321	
140		1411		+./JK12	1 /0	5/ 644	040021	

Reference			Description	BEC Part No.
R201	Resistor,	Comp.	150KΩ 5% 1/2W	301139
R202	н	ME	100KO 1% 3/8W	340478
R 204	п	Comp	10KO 5% 1/2W	301111
R205		MF.	51 1KO 1% 3/8W	340443
R206	н		2.74KΩ 1% 3/8W	340292
R207	н	Comp.	Salastad	
R208	11	Var.	1ΚΩ ±20%	311284
R209	11	Comp.	10KΩ 5% 1/2W	301111
R210	11	MF	28.7KΩ 1% 3/8W	340414
R211	п	11	200KΩ 1% 3/8W	340515
R212	н		1.0MΩ 1% 3/8W	326700
R213	н	Comp.	100Ω 5% 1/2W	301063
R214			33KΩ 5% 1/2W	301123
R215	н	MF	40.2KΩ 1% 3/8W	326401
R216	н		191KΩ 1% 3/8W	340512
R217	11	Comp.	100KΩ 5% 1/2W	301135
R218	п		3.3KΩ 5% 1/2W	301099
R220	н	Var.	1KΩ ±20%	311284
R221	11	MF	29.4 KΩ 1% 3/8W	340415
R222	11		95.3KΩ 1% 3/8W	340476
R223		Comp.	4.7KΩ 5% 1/2W	301103
R224			10KΩ 5% 1/2W	301111
R225		MF	28.0KΩ 1% 3/8W	340412
R226			64.9KΩ 1% 3/8W	340456
R227	n	Comp.	10KΩ 5% 1/2W	301111
R228		Var.	1KΩ ±20%	311284
R229	"	Comp.	270KΩ 5% 1/2W	301145
R230	11	MF	26.1KΩ 1% 3/8W	340408
R231	"	u	46.4KΩ 1% 3/8W	340438
R232		Comp.	10KΩ 5% 1/2W	301111
R233			390KΩ 5% 1/2W	301149
R234	11	MF	45.3KΩ 1% 3/8W	326403
R235		"	2.74KΩ 1% 3/8W	340292
R236	1	Var.	1KΩ ±20%	311284
R237		Comp.	18KΩ 5% 1/2W	301117
R238			15KΩ 5% 1/2W	301115
R239			10KΩ 5% 1/2W	301111
R240	"	"	47KΩ 5% 1/2W	301127
R241		MF	21.5KΩ 1% 3/8W	340398
R242			240KΩ 1% 3/8W	340524
R243			26.1KΩ 1% 3/8W	340408
R244	0		154KΩ 1% 3/8W	340501
R245		Comp.	10KΩ 5% 1/2W	301111

- PL 6 -

Reference			Description				BEC Part No.	
R246	Resistor.	MF	54.9KΩ	1%	3/8W		340447	
R247	"		191KO	1%	3/8W		340512	
R248		н	31 6KO	1%	3/8W		340418	
P240	п		82 5KO	1%	3/8W		340468	
D250	н	н	17940	1%	3/8/		326514	
R250			21 (10	1 /0	3/011		2/0/10	
KZJI		C	1000	F0/	3/000		201112	
RZ5Z		Comp.	12052	3%	2/01		301113	
R253		MF	17.860	1%	3/800		340388	
R254		MF	2./4KΩ	1%	3/8/		340292	
R255		Var.	ΙΚΩ	±20%	- /		311284	
R256	11	Comp.	100KΩ	5%	1/2W		301135	
R257	n	MF	24.3KΩ	5%	1/2W		340405	
R258	11		232ΚΩ	1%	3/8W		340522	
R259	н	11	95.3KΩ	1%	3/8W		340476	
R260	н		453KΩ	1%	3/8W		340557	
R261	u	Comp.	100KΩ	5%	1/2W		301135	
R262	u	"	12KO	5%	1/2W		301113	
R263		ME	200KO	1%	3/8W		340515	
R260			634KO	1%	3/8W		340575	
D245	н		31 KKO	1%	3/8/		340418	
RZOJ		n	14 240	10/	2/011		240277	
K200			14.3652	1 70	3/000		3403/7	
K26/		V	2.74652	1%	3/800		340292	
R268		Var.	IKQ	±20%	1 /01/		311284	
R269		Comp.	ΤΟΟΚΩ	5%	1/2W		301135	
R270		MF	31.6KΩ	1%	3/8W		340418	
R271		Comp.	100KΩ	5%	1/2W		301135	
R272	"	MF	34.8KΩ	1%	3/8W		340423	
R273	и		523KΩ	1%	3/8W		340565	
R274		Comp.	2ΚΩ	5%	1/2W		301094	
R275			27ΚΩ	5%	1/2W		301121	
R276		MF	162KΩ	1%	3/8W		340503	
R277	п	н	806KΩ	1%	3/8W		340587	
R278		Comp.	3ΚΩ	5%	1/2W		301098	
R 279		ME	10KO	1%	3/8W		326376	
R 280	п		2 74KO	1%	3/8W		340292	
R 281	п	Var	IKO	+20%	0/011		311284	
D 202	н	Comp	1 440	5%	1/2/1/		301092	
N202	п	comp.	1240	5%	1/2//		201112	
KZOJ			12132	5%	1/200		201102	
K284			4./KΩ	3%	1/200		301103	
R285			4/002	5%	1/200		3010/9	
R286			750 Ω	5%	1/2W		301084	
R287			100KΩ	5%	1/2W		301135	
R288		MF	127KΩ	1%	3/8W		340491	
R289	л		604KΩ	1%	3/8W		340572	
R290	п	Comp.	150KΩ	5%	1/2W		301139	
R291		н	510KΩ	5%	1/2W		301152	

Re	ference	Description	BEC Part No.
R292 R293 R294 R295 R296 R297 R298 R299	Resistor, Comp. """ "MF "Var. "Comp. """	15KΩ 5% 1/2W 10KΩ 5% 1/2W 4.7KΩ 5% 1/2W 49.9 kΩ 1% 3/8W 2KΩ ±20% 100KΩ 5% 1/2W 2KΩ 5% 1/2W 3KΩ 5% 1/2W	301115 301111 301103 340438 311285 301135 301094 301098
R401 R402 R403 R404	Resistor, Var. "MF "" Comp.	5KΩ 100KΩ 1% 3/8W "Factory Selected	311283 340478 "
\$201	Switch	PB10	465169
S402	Switch, Slide		465134
T401	Transformer	Power	446052
IC401	Switch, Solid-State	Factory Selected	534020



3 (4)







0

TEST POINT

2

3

٩

5

6

- 8. EXTERNAL MARKINGS.
- 9. _____ SIGNAL PATH. 10. _____ FEEDBACK PATH.
- II.O TEST POINT.
- 12. LAST NUMBER USED: R 299 C217 R 404
- 13. NUMBERS NOT USED: R219





MODEL 92C Schematic, Switch 830529 C