

SWR readout ICOM TRX

Send :

\$FE \$FE 66 E0 15 12 \$FD

Where

66 = address TRX

E0= address sender

15 & 12 = command

\$FD = end of string indicator

The reply :

\$FE \$FE 66 E0 15 12 01 26 \$FD

01 & 26 = relative meter readout of '126' = SWR of about 3
(relative value ranges from 00 00 to 02 55 = full scale)

PWR readout ICOM TRX

Same system : command & reply = 15 11

By ON7EQ 09/2012