



* * * RUN MENU * * *

1- INSTALL JP1	S1/ 9-8-7	S1/ 6-5-4	S1/ 3-2-1
2- PRESS RESTART	CYL-TME	FOX CALL	DEL START
3- MAKE THE MENU SELECTIONS	0= Continuous/0= MO	0= NOW	
4- PRESS RESTART TO OPERATE	1= continuous\1= MOE	1= 0H30	
	2= 2 min.	2= MOI	2= 1H00
	3= 3 min.	3= MOS	3= 1H30
	4= 4 min.	4= MOH	4= 2H00
	5= 5 min.	5= MO5	5= 2H30
	6= 6 min.	6= MON	6= 3H00
	7= 7 min.	7= MOD	7= 3H30

* * LOAD HIDER'S CALL LETTERS MENU * *

1- REMOVE JP1	S1/ 9	S1/ 8-7-6-5	S1/ 4-3-2-1
2- PRESS RESTART	NOT USED	MSD FOR LOADING CALL LETTERS	LSD FOR LOADING CALL LETTERS
3- LOAD THE CALL LETTERS			

THE MONTREAL 2 METERS ARDF FOX

FM modulation for zone 2
.75 WATT OUTPUT

BY JACQUES BRODEUR
VE2EMM

Ver 3 Nov. 1999 Rev. June 00
For non commercial amateur use only