


BASICS OF CROSSOVER DISTORTION

W2AEW

LM358 OP AMP EXAMPLE

- OCCURS WHEN THE OUTPUT NEEDS TO ALTERNATIVELY SWITCH BETWEEN SOURCING & SINKING CURRENT
- AC COUPLED LOAD
- OUTPUT SWINGS ABOVE & BELOW THE LOAD'S REFERENCE POINT.

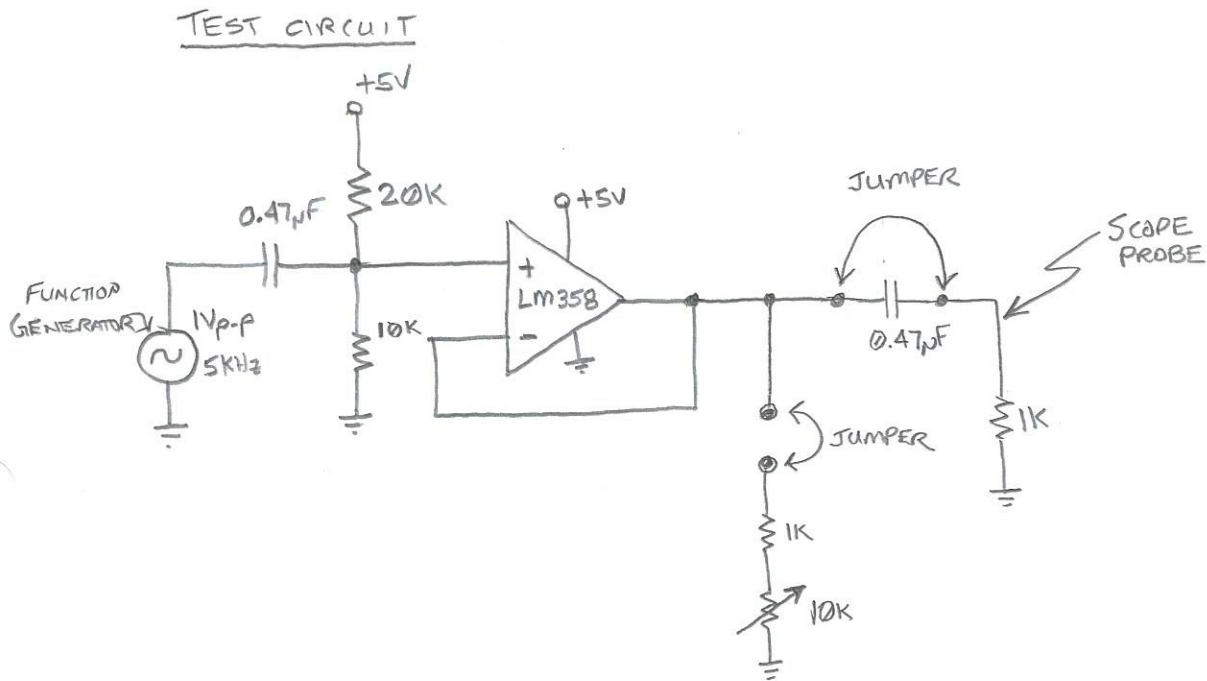

- WHY?

- LOOK AT THE SCHEMATIC OF THE OUTPUT STAGE