

# Racing Box manual - Swing Machine manual

- Press the "Set" button during normal game play to enter the main menu.
- Press the "Set (OK)" button to enter the options or exit the item.
- Press the "Up (Right)" or "Down (Left)" button to select and adjust items.
- Select "Game Set", "Audit", "Language" to enter the submenus.

## 1. Game selection Speed:

<b>1.0. SYS SET:</b>	Game Set	Audit	Language	
				<Exit>

<b>1.1. Game Set:</b>		
	<i>Parameter</i>	<i>Remarks</i>
Playtime	1-9	Unit: minutes
The number of coins	0-9	Start the play (0 to free play)
Dome Music	ON/OFF	
Auto Start	ON/OFF	
Game Mode	Automatic / Manual	
Light Eye	Open / Closed	
Ticket Refund	0-3000	0 to turn off the refund function
Reset Switch	ON/OFF	Motor reset
The machine selection	Standard / Horse	
Game selection	Speed / Go Kart	
Ticket Switch	ON/OFF	
<Save>	<Default>	<Back>

<b>1.2. Audit (Account):</b>	
The permanent accounts	0-9999
The total coin	0-9999
The total Refund	0-9999
<Clear>	<Back>

*Note: If Option "Clear", then clears the total coin and the total refund.*

<b>1.3. Language:</b>	Chinese / English
<Save>	<Back>

**2. Game selection Go Kart:**

<b>2.0. SYS SET:</b>	Game Set	Audit	
			<Exit>

<b>2.1. Game Set:</b>		
	<i>Parameter</i>	<i>Remarks</i>
Language	Chinese / English	
Playtime	1-9	Unit: minutes
The number of coins	1-20	Start the play
Luck draw the difficult	0-10	0 to turn off this function
Dome Music	ON/OFF	
Game List		
Game selection	Go Kart / Speed	
<Save>	<Default>	<Back>

<b>2.2. Audit (Account):</b>	
The permanent accounts	0-9999
The total coin	0-9999
The total Refund	0-9999
<Clear>	<Back>

*Note: If Option "Clear", then clears the total coin and the total refund.*

**Game Description**

Input tokens, game player can control the steering wheel to choose their own like game into mobile.



### 3. Wiring

Remarks	Pin definition	Pin definition	Pin definition	Remarks	
12V Power Output	12V	1	2	12V	12V Power Output
12V Power Output	12V	3	4	12V	12V Power Output
5V Power Output	5V	5	6	5V	5V Power Output
	3.3V	7	8		
Ground wire	GND	9	10	GND	Ground wire
Ground wire	GND	11	12	GND	Ground wire
Sound speaker	SNDSC-	13	14	GND	Ground wire
Sound speaker	SNDSC+	15	16	KE1	OK (Confirm) button
Direction Right	KE2	17	18	KE3	Direction Left
	KE4	19	20	KE5	
	KE6	21	22	KE7	Retreat (Receding Lottery)
NC	KE8	23	24	KE9	NC
NC	KE10	25	26	KE11	NC
Refund	C-	27	28	C+1	Coin
	C+2	29	30	LED1	Button Light
	LED2	31	32	LED3	
Motor SSR	SSR	33	34	HSSR	Handing HSSR wire

## 4. Game List

### Game selection Speed:

1. FIRE CAR
2. BEAR RACER
3. HAPPY MOTOR
4. SAVIOUR FORCE
5. LITTLE HORSCMAN
6. Crazy Horse
7. Dream Horse Riding
8. Rooster vs Helicopter
9. Driving Auto in the city
10. A horse under the rainbow
11. Happy Take Gold
12. Catching Butterflies
13. Numbers and Letters
14. COOL MOTOR
15. Bear Kart

### Game selection Go Kart (Happy Karting):

16. Christmas Carnival
17. Space Adventures
18. Towns Speed
19. City of Stone's
20. Rainbow Castle
21. Speed town
22. Wilderness racing
23. Mined adventure
24. Aurora Dream
25. Mushroom town
26. Desert Jouney
27. Mysterious ruins
28. Sunny Beach
29. Universe Tour
30. Underwater World
31. Candy Land