

^{***}Inverting gates are optional, only if the Radio use "BUS-" and "BUSY" lines

Radio Interface Box MOTOROLA

YO4HFU, rev 1.3/2019

^{***}LEDs are ON during Bus/Busy inactivity (for power supply indication).