


## 1/2 Wave Dipole Configurations

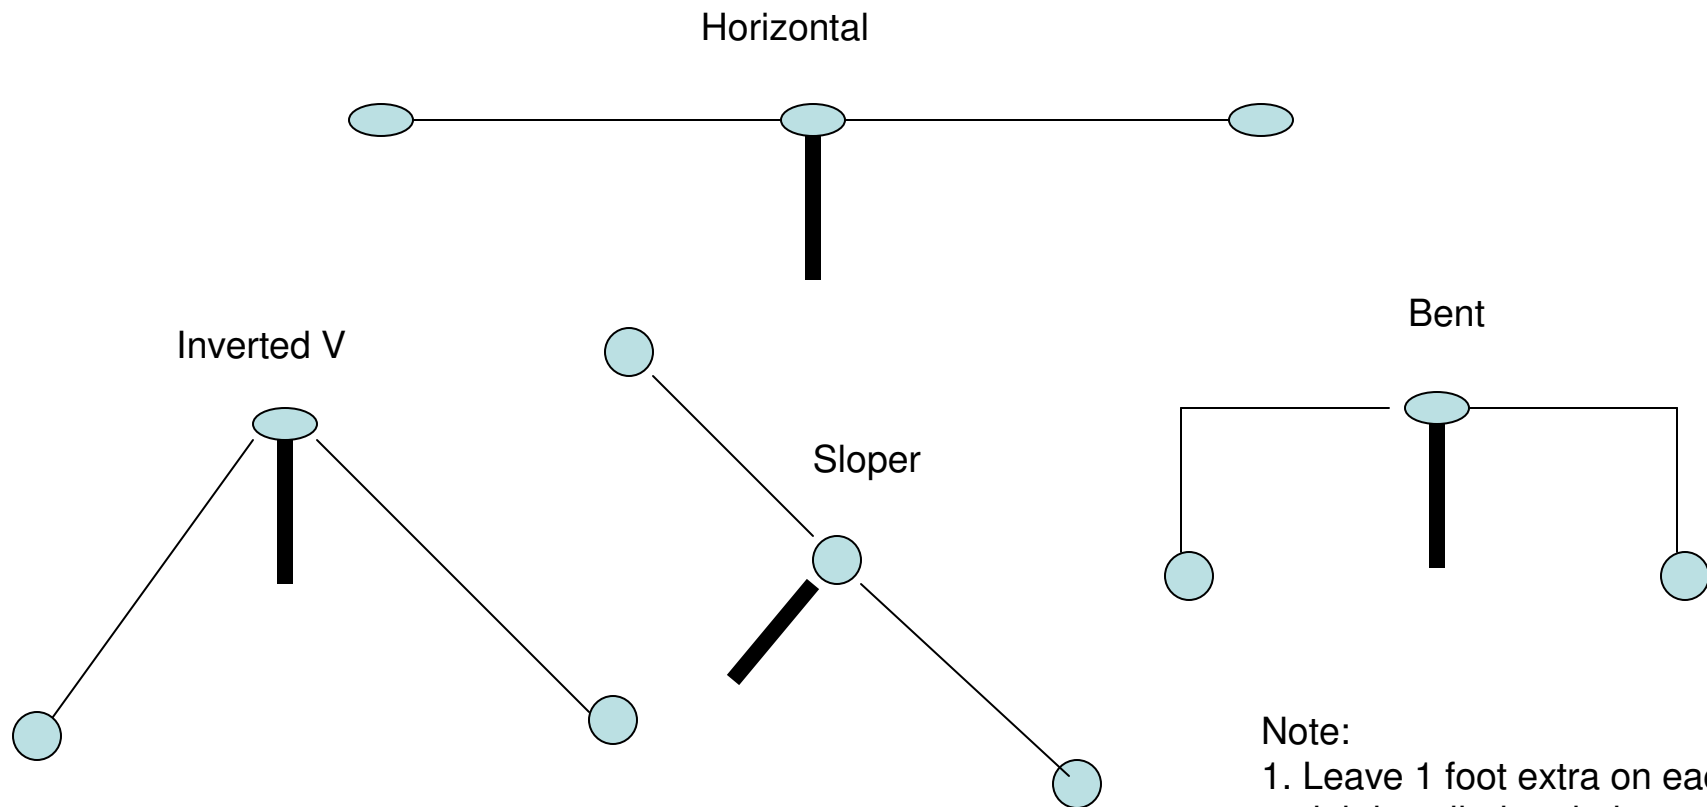

**Note:**

1. Leave 1 foot extra on each end tightly coiled and trim until 1:1 SWR is obtained.
2. High voltages are present at the ends of antennas, the ends should be at least 10 ft off ground.