

Editor's Note: This Application Note supersedes hp Application Note 56, dated 6/15/62. The material is substantially the same, but terminology has been changed to agree with NBS recommendations, additional concepts have been introduced, and attenuation measurement analysis has been simplified with the introduction of an additional chart.

INTRODUCTION

The subject of mismatch error in the measurement of microwave power or attenuation is a confusing one to those who do not work with it frequently. The purpose of this Application Note is to present the basic principles in an easily understandable and usable form and to make the process of error analysis as simple as possible.

BASIC PRINCIPLES

Consider a dc source with an internal resistance R_G and an external load R_L . Obviously, no power can be delivered to R_L when it is either zero or infinity, so there must be some in-between value at which the power delivered is maximum. It is easily shown that this occurs when R_L equals R_G . Any other value of R_L results in the delivery of less than the maximum available power, or a "mismatch".

Consider next the extension to the general case, where the source has an internal impedance which at any frequency can be represented by a resistance and a reactance. Whether series or parallel equivalent circuits are used is immaterial, but the source and load reactances must be of equal magnitude and opposite sign so that they will be in resonance and therefore have no effect on the power delivered. Again, the two resistances should be equal. Hence, to get maximum available power from the source, the load impedance should be the complex conjugate of the source impedance. When the two actual impedances are known, the power delivered can be calculated and compared with the maximum available power to determine the mismatch loss.

MISMATCH AT MICROWAVE FREQUENCIES

At microwave frequencies, a complication arises. The length of transmission line used to connect the load to the source can be long enough electrically to transform the load impedance to some other value at the source terminals. What the source "sees" is determined by the actual load impedance, the electrical length of the line, and the characteristic impedance (Z_0) of the line. In the optimum situation, all elements

in a system have the characteristic impedance of the line and there is a maximum transfer of power. In general, however, neither source nor load has Z_0 impedance. Furthermore, the actual impedances are almost never known completely. They are given only in the form of SWR's, which lack phase information. As a result, the power delivered to the load, and hence the mismatch loss, can be described only as lying somewhere between two limits. This uncertainty increases with SWR, which is one of the fundamental reasons why manufacturers strive to reduce the SWR's of microwave components.

In the special case where either source or load has unity SWR, the mismatch loss is unique and calculable from the other SWR. The accuracy specification on some commercial power measurement systems is based on the assumption of a Z_0 source. Practically speaking, however, almost no sources have exactly Z_0 impedance and such an accuracy specification is unrealistic.

BASIS OF ANALYSIS

To analyze a particular case of mismatch an appropriate basis of calculation must be chosen. If the power actually delivered to the load is to be compared with the maximum available from the source, this is on a conjugate basis. If comparison is made with the power the source will deliver to a Z_0 load, this is on a Z_0 basis. These are two of a number of possibilities.

Considerable confusion has arisen over the use of terms such as "match" and "mismatch" since it is not always clear just what basis is intended. R.W. Beatty of NBS has proposed a complete set of specific terms and definitions which, if generally adopted, would eliminate this confusion. These are shown in a table on page 6. From here on, all terms used in this Application Note will follow these definitions where any possibility of ambiguity might otherwise exist. Thus, "conjugate mismatch" and " Z_0 mismatch" are used to describe the actual figures obtained in the examples.

The general formula for power transfer between a source and a load of reflection coefficients Γ_G and Γ_L is

$$\frac{(1 - |\Gamma_G|^2)(1 - |\Gamma_L|^2)}{|1 - \Gamma_G \Gamma_L|^2}$$

where $|\Gamma_G|$ and $|\Gamma_L|$ can be obtained from the SWR's σ_G and σ_L by the simple relation $|\Gamma| = \frac{\sigma - 1}{\sigma + 1}$. This is

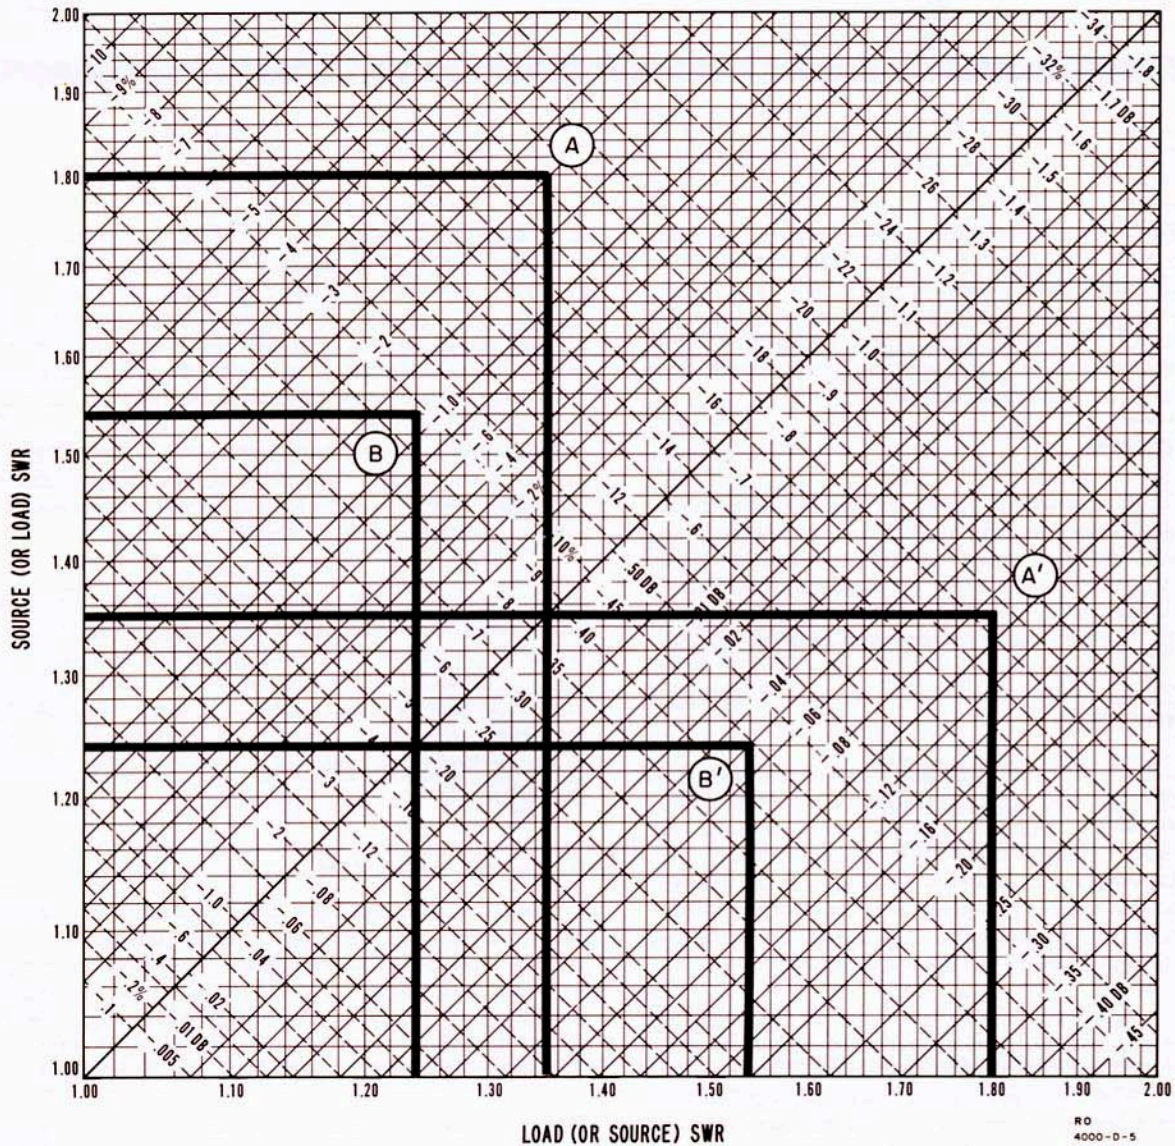


Figure 1. Conjugate Mismatch Loss Chart

the fraction of the maximum available power that is actually absorbed by the load. Here the Z_0 mismatch losses associated with the source and the load are given by $(1 - |\Gamma_G|^2)$ and $(1 - |\Gamma_L|^2)$, respectively, while the uncertainty in the power transfer is given by $|1 - \Gamma_G \Gamma_L|^2$, since Γ_G and Γ_L are complex quantities. The limits of uncertainty are obtained by evaluating $(1 \pm |\Gamma_G| |\Gamma_L|)^2$. It can be seen that the rather vague term "mismatch error" applies in general to a combination of calculable mismatch losses and uncertainties.

If a conjugate basis is to be used, the effects of all three terms are included and the entire expression lies between two limits never exceeding unity. On a Z_0 basis of comparison, only two terms need be evaluated, since the first term in the numerator

gives the fractional power delivered to a Z_0 load by the source. Note, however, that $|\Gamma_G|$ must still be known in order to determine the uncertainty. This fact must be recognized somehow in any statement of power measurement accuracy. The expression for Z_0 mismatch can have limits above and below unity as well as both below unity.

When the conjugate basis is used, mismatch is always expressed as a loss. Figure 1 is a chart giving conjugate mismatch loss limits for SWR's up to 2.00. The diagonal lines running upward to the right give the maximum possible power transfer (minimum loss) for any combination of source and load SWR's, while the lines running upward to the left give the minimum possible power transfer (maximum loss). Note that for convenience the upper left half gives the loss in percentage, the lower right half in db.

$$\text{Uncertainty - DB} = \frac{1}{(1 \pm |\Gamma_G| |\Gamma_L|)^2}$$

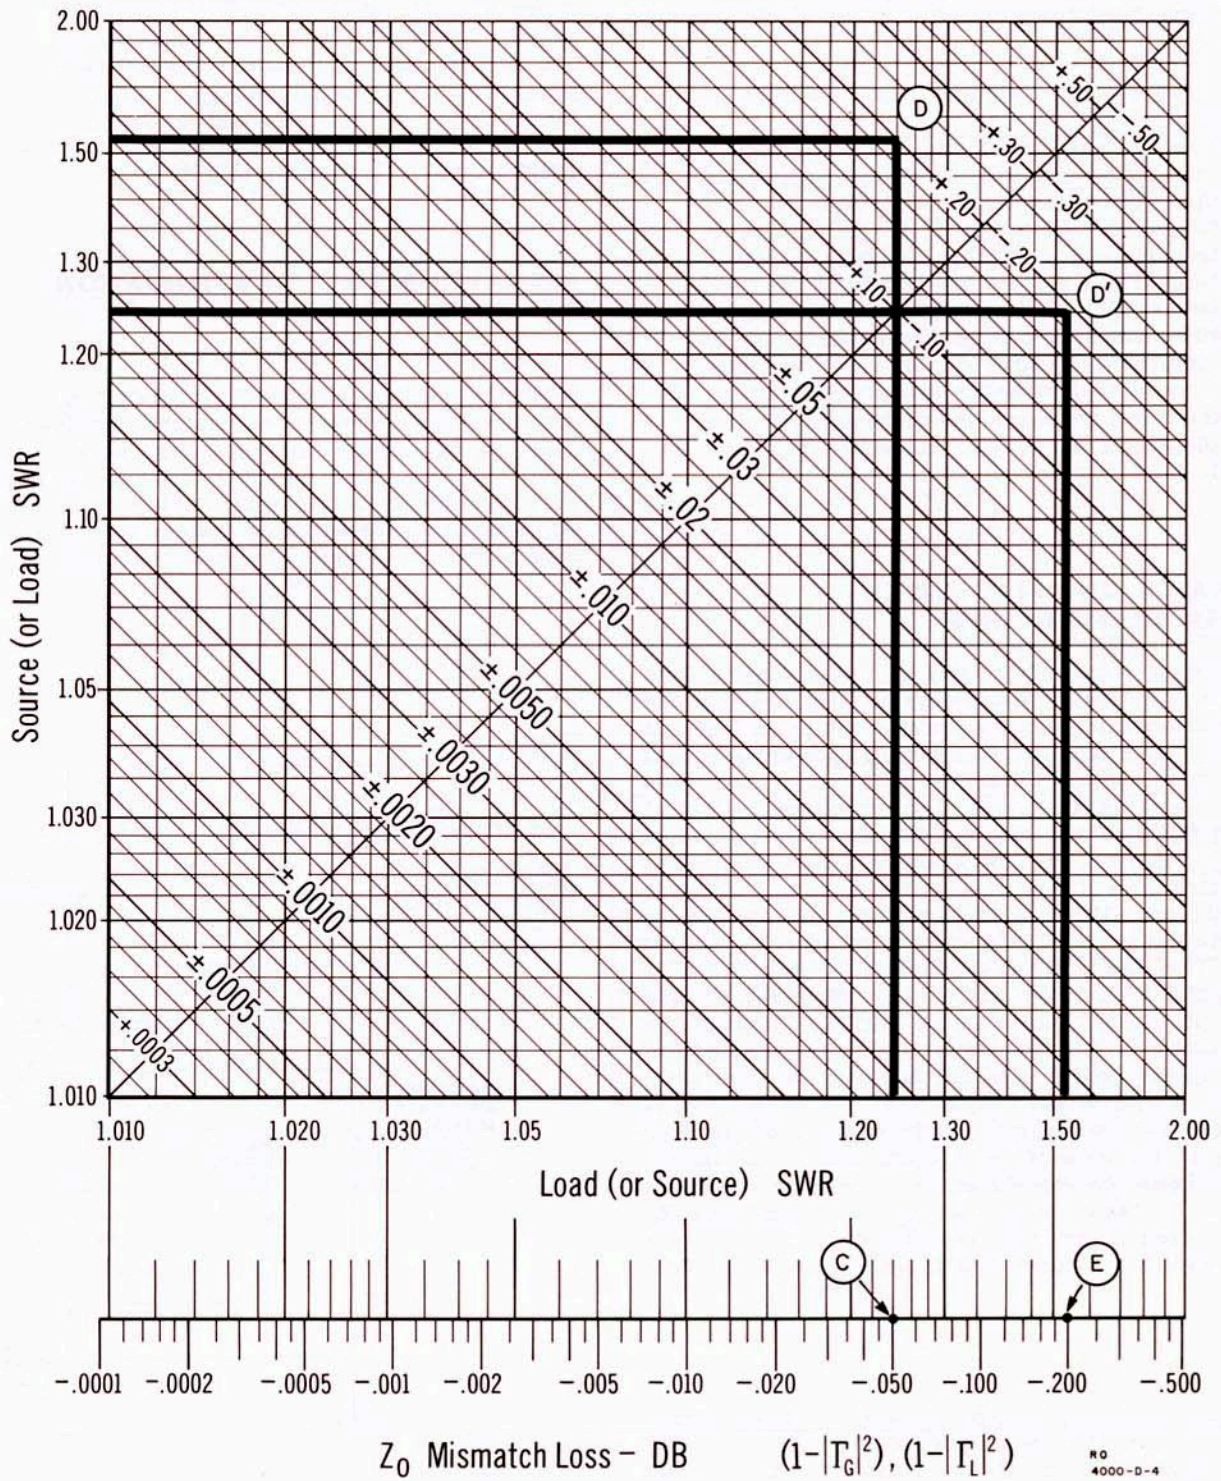


Figure 2. Z₀ Mismatch Loss Uncertainty (db)

When the Z_0 basis is used, Figure 2 applies. The Z_0 mismatch loss is obtained from the bottom scale and the uncertainty from the chart. Here there is only one set of diagonal lines, but note that the upper left half gives the upper limit of uncertainty, the lower right half the lower, and that these begin to differ appreciably in the upper right corner.

Note

For the sake of clarity and consistency, attenuation and loss in db are expressed throughout this Application Note as ten times the logarithm of fractional power transferred, and thus become negative numbers. A plot such as Figure 3 can then be drawn in the usual manner, with quantities increasing in an upward direction. It must be remembered, however, that it is conventional to define attenuation in db as ten times the logarithm of the reciprocal of the fractional power transferred, in order to get a positive number.

MISMATCH UNCERTAINTIES IN POWER MEASUREMENTS

An example may help clarify the use of these charts in power measurement analysis. Suppose that the power output of a signal generator having an SWR not greater than 1.80 is measured with a power meter and a bolometer mount having an SWR not greater than 1.35. If it is inconvenient to measure the actual SWR's these values may be taken as a worst possible case. Figure 1 (points A and A') shows conjugate mismatch loss limits of -.090 db, or -2.0%, and -.83 db, or -17.4%, a range of uncertainty of .74 db. Suppose the actual SWR's are now measured and found to be 1.54 and 1.24, respectively. Points B and B' on Figure 1 now give limits of -.050 db (-1.2%) and -.445 db (-9.8%), a range of .395 db. It should be clear that even with the substantial improvement from using actual SWR's (and all these figures are quite typical at microwave frequencies), the mismatch uncertainty can easily be considerably greater than all others in the measurement combined. It is almost always better to use a tuner in a power measurement system to establish a condition of conjugate or Z_0 match, even though this is at the cost of introducing the loss of the tuner itself, which may be several percent.

Since signal generators are customarily rated in terms of the power they will deliver to a Z_0 load ("Z₀ available power"), the Z_0 basis is the one to use if it is desired to see whether a generator meets specs. Continuing the same example: From Figure 2, (point C), the Z_0 mismatch loss of the bolometer mount is -.050 db (-1.15%). On this is an uncertainty of +.200, -.195 db (points D and D'). Although it is

not normally necessary to plot data, all the various quantities in the example are plotted in Figure 3 to illustrate their relationship, with the generator Z_0 mismatch loss obtained from point E. A db scale is used rather than percentage, since the different bases on which the various percentages are expressed would require different vertical scales. It is readily seen that the actual powers obtained by the two analyses are the same and that the only difference is the basis to which they are referred. On a Z_0 basis, the output of the generator to a Z_0 load would be somewhere between .150 db below and .245 db above the power actually absorbed by the bolometer mount.

MISMATCH ERRORS IN ATTENUATION MEASUREMENTS

Attenuation measurements are complicated by the fact that there can be several mismatches involved. However, it is usually not necessary to evaluate Z_0 mismatch loss. Only uncertainty terms are required, all obtainable from the chart of Figure 2. When an attenuator is inserted into a system, the Z_0 mismatch loss terms for source and load (detector) occur in

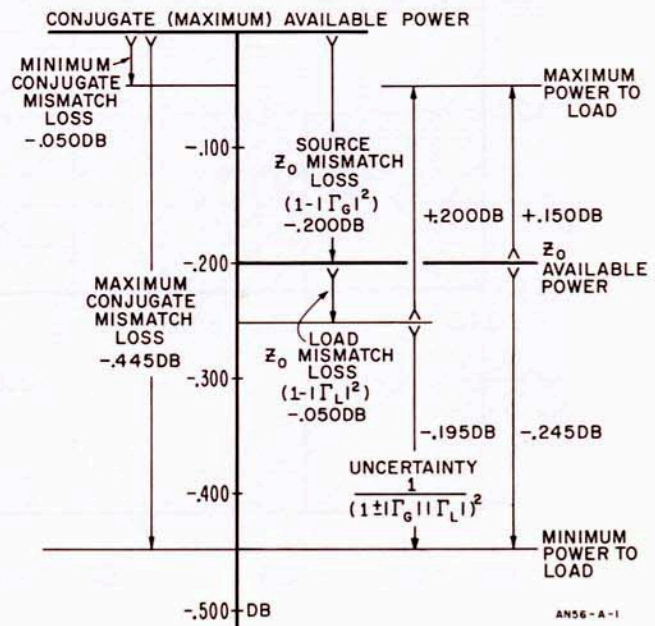


Figure 3. Example of Uncertainty in Microwave Power Measurement

similar fashion in the two expressions for the power absorbed by the detector before and after insertion. Thus, when the ratio is taken to find the attenuation, these terms cancel out, leaving only uncertainty. The expression for the indicated fractional power transfer is

$$\frac{|S_{21}|^2 |1 - \Gamma_G \Gamma_L|^2}{|1 - \Gamma_1 \Gamma_G|^2 |1 - S_{22} \Gamma_L|^2}$$

Here S_{21} is a transmission coefficient determining the fractional power transferred under ideal conditions. Only the SWR's corresponding to the other coefficients are required to evaluate the uncertainty. Γ_G and Γ_L are defined as before. S_{22} is the reflection coefficient corresponding to the SWR seen looking into the output end of the attenuator with a Z_0 load connected to the input end. This is the SWR referred to in the usual specifications on an attenuator. S_{11} is the corresponding coefficient at the input end, but Γ_1 is used instead, because if the attenuation is small - say less than 10 or 20 db - there is an interaction between generator and detector through the attenuator which can be accounted for in this way. Γ_1 corresponds to the SWR seen looking into the input end of the attenuator with the detector connected to the output end. It becomes virtually equal to S_{11} if the attenuation is large or if the detector reflection is very small.

In the case of a variable attenuator which is not removed and inserted, but adjusted to two different settings, matters are either simpler or more tedious. If the SWR's do not change during adjustment, mismatch uncertainties all cancel out and a very accurate measurement of change in attenuation is possible. This is typical of piston attenuators. If the SWR's do change, then they must be measured at both ends of the attenuator before and after adjustment and all the Z_0 mismatch losses evaluated. Source and detector SWR's must also be measured and all the uncertainties evaluated. This may be necessary with waveguide rotary-vane attenuators at low settings.

In any case, if the measurement uncertainty is to be minimized, Γ_G and Γ_L must be made as small as possible. Ideally, the corresponding SWR's are 1.00, but as a practical matter, a reduction to 1.05 or less, by tuners, pads, or levelling, is generally adequate. The following example illustrates the procedure for evaluating mismatch uncertainty in an insertion-type attenuation measurement: Consider an attenuator with SWR's of 1.15 at the input end and 1.20 at the output, when terminated in Z_0 at the other end in each case, and assume that the attenuation is so large that generator-detector interaction through the attenuator may be neglected. Let the generator and detector SWR's be 1.05 and 1.10. Prior to insertion of the attenuator into the system - while a reference level is being set on the detector - there is an uncertainty of $\pm .010$ db, obtained at the intersection of 1.05 and 1.10 on Figure 2. After insertion - while reading final detector level - the input end SWR's of 1.05 and 1.15 give $\pm .015$ db and the output end SWR's of 1.20 and

1.10 give $\pm .038$ db. Adding these gives an overall uncertainty of $\pm .063$ db in the measured value.

If the attenuator had a small value of attenuation, the SWR seen looking into the input end with the detector connected to the output would be used instead of 1.15 and the same procedure followed.

The same results can be obtained by using the conjugate mismatch loss chart, Figure 1, but the process above is considerably simpler.

For convenience, Figure 4 gives the uncertainty resulting from various system and attenuator SWR's. Here the generator and detector SWR's are assumed to be the same, as are the SWR's at the two ends of the attenuator. In the usual case, of course, all four SWR's are different and the uncertainties at the two ends of the attenuator are different. If the system SWR's are both reduced to 1.05 or less, however, the uncertainties are ordinarily so small that commercial specification attenuator SWR's may be used rather than actual measured values. This results in a conservative figure for the overall measurement uncertainty.

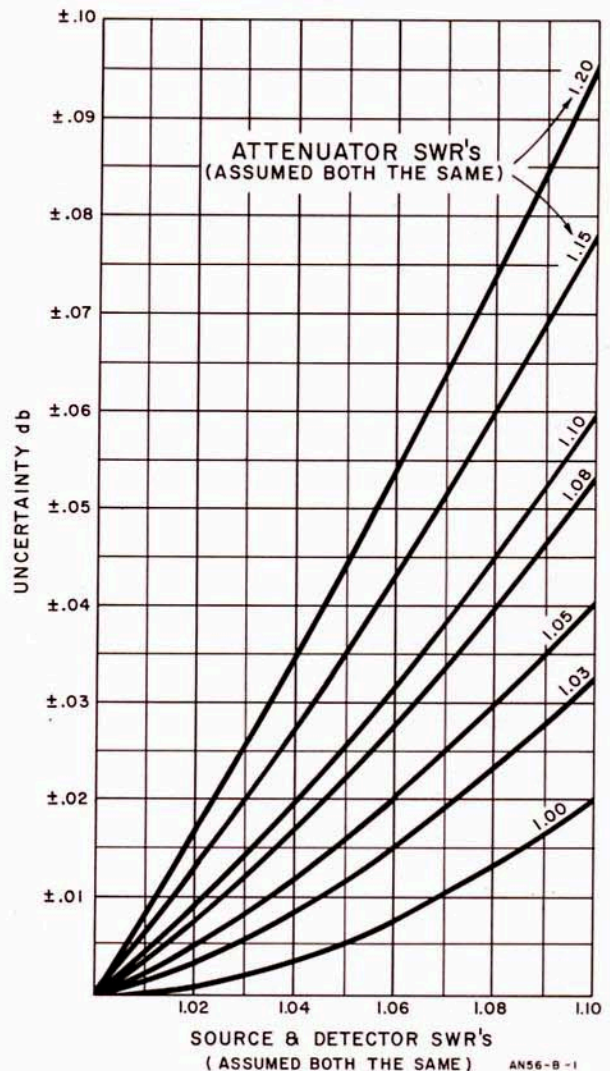


Figure 4. Attenuation Measurement Uncertainty

MAXIMUM AND MINIMUM LOSS CALCULATIONS

In case a mismatch loss chart is not available, the maximum and minimum conjugate mismatch losses corresponding to two SWR's, σ_1 (the larger) and σ_2 , may readily be determined as follows: The maximum loss corresponds to that which would occur if one SWR were equal to the product $\sigma_1 \sigma_2$ and the other to unity, while the minimum loss corresponds to that which would occur if one SWR were equal to

the quotient σ_1/σ_2 and the other to unity. Using the relation between SWR and reflection coefficient, the fractional expression for minimum power transfer (maximum loss) is $\frac{4 \sigma_1 \sigma_2}{(\sigma_1 \sigma_2 + 1)^2}$ while the fractional

expression for maximum power transfer (minimum loss) is $\frac{4 \sigma_1 \sigma_2}{(\sigma_1 + \sigma_2)^2}$. The loss in db is ten times the log

of either expression (or, conventionally, its reciprocal for a positive number of db).

ATTENUATION AND MISMATCH TERMS

1. Substitution Loss:

A general term referring to the change in power absorbed by a load when first one waveguide junction (these words are used in the broadest sense) and then another (such as an attenuator) is used to connect a source to the load.

2. Transducer Loss:

What the substitution loss becomes when the first waveguide junction is a perfect transducer and initially the maximum available power is delivered to the load.

3. Insertion Loss:

What the substitution loss becomes when the first waveguide junction is a perfect (lossless and phase-shift-less) connector, so that in general there is some initial mismatch loss.

4. Attenuation:

What any of the above losses becomes when the source and load both have Z_0 impedance. Under these conditions, what is measured on an attenuator is a property of the attenuator alone, so that this is the ideal system in which to make measurements.

5. Residual Attenuation:

The minimum attenuation of a variable attenuator. What is measured when a variable attenuator is set to its minimum position and inserted into an ideal system.

6. Incremental Attenuation:

The change in attenuation between minimum setting and any other setting on a variable attenuator. Residual Attenuation and Incremental Attenuation together make up Attenuation.

7. Conjugate Match:

The condition for maximum power absorption by a load, in which the impedance seen looking toward the load at a point in a transmission line is the complex conjugate of that seen looking toward the source.

8. Conjugate Mismatch:

The condition in the situation above in which the load impedance is not the conjugate of the source impedance.

9. Conjugate Mismatch Loss:

The loss resulting from conjugate mismatch.

10. Z_0 Match:

The condition in which the impedance seen looking into a transmission line is equal to the characteristic impedance of the line.

11. Z_0 Mismatch:

The condition in which the impedance seen looking into a transmission line is not equal to the transmission line characteristic impedance Z_0 . In general, conjugate match is a case of Z_0 mismatch.

12. Z_0 Mismatch Loss:

The loss resulting from a Z_0 mismatch.

13. Conjugate Available Power:

Maximum available power.

14. Z_0 Available Power:

The power a source will deliver to a Z_0 load.

References:

Beatty, R. W., "Intrinsic Attenuation", IEEE Transactions on Microwave Theory and Techniques, Vol. MTT-11, No. 3, May 1963, p. 179.

Beatty, R. W. "Insertion Loss Concepts", Proceedings IEEE, Vol. 52, No. 6, June 1964, p. 663.

MISMATCH LOSS CHARTS

Pages 8 through 11 carry reproducible copies of the charts used in Figure 1 and 2 plus an expanded conjugate mismatch loss chart for greater resolution when working with small SWR's and a Z_0 mismatch loss and uncertainty chart in percent rather than db. These charts are included for your convenience in analyzing the error involved in your microwave measurements.

TEST EQUIPMENT


Hewlett-Packard manufactures a complete line of microwave test instrumentation. A partial listing includes Signal Generators, Power Meters, SWR

Meters, and waveguide components such as attenuators, slide-screw tuners, detectors, and directional couplers. The entire line of microwave instrumentation is listed in the Hewlett-Packard Catalog, along with brief descriptions of some basic microwave measurements, photographs, and specifications. The catalog is available upon request from any Hewlett-Packard Field Office.

ACKNOWLEDGMENT


Portions of this Application Note first appeared under the title "Straight Talk on Microwave Mismatch", by B. P. Hand in the December 20, 1961 issue of Electronic Design.

$$\text{Uncertainty - \%} \quad \frac{1}{(1 \pm |\Gamma_s| |\Gamma_l|)^2}$$

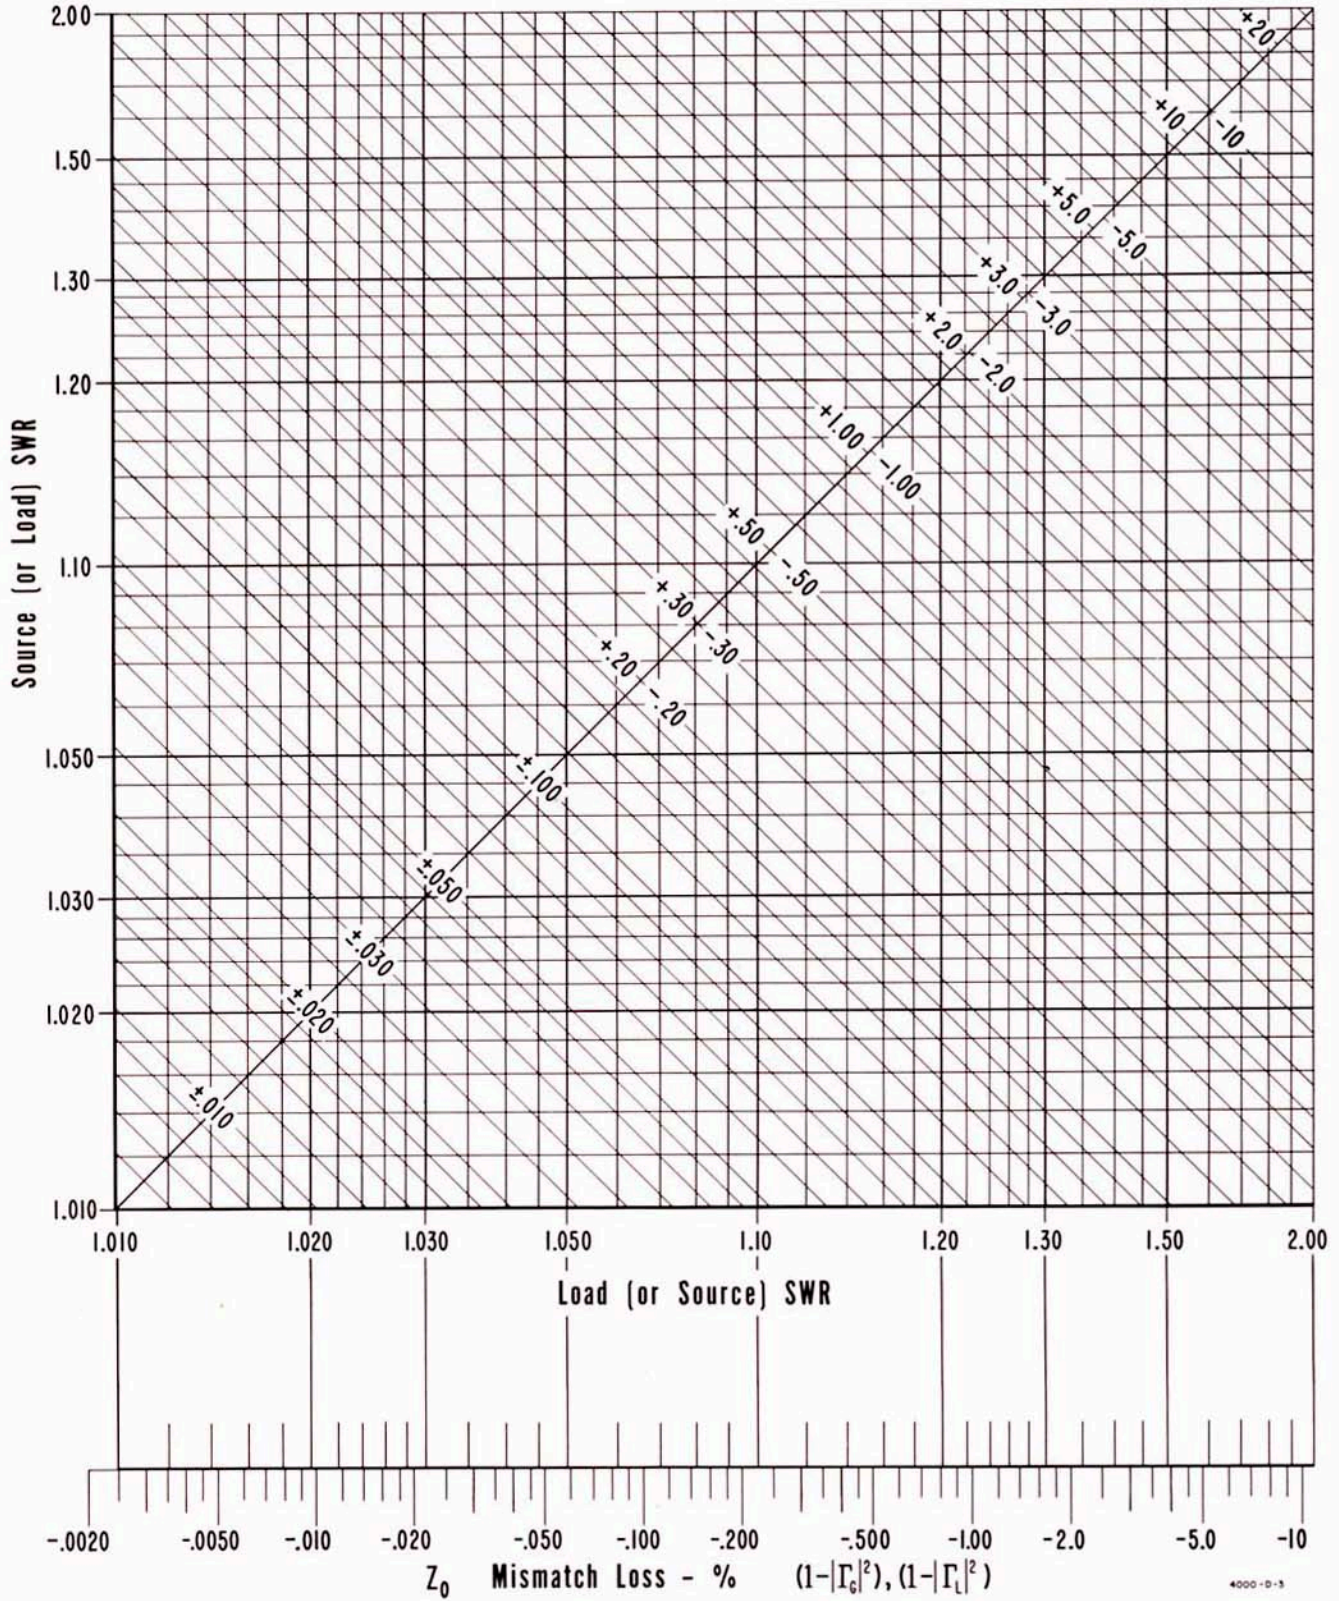


4000-D-3


Uncertainty - DB $\frac{1}{(1 \pm |\Gamma_G| |\Gamma_L|)^2}$

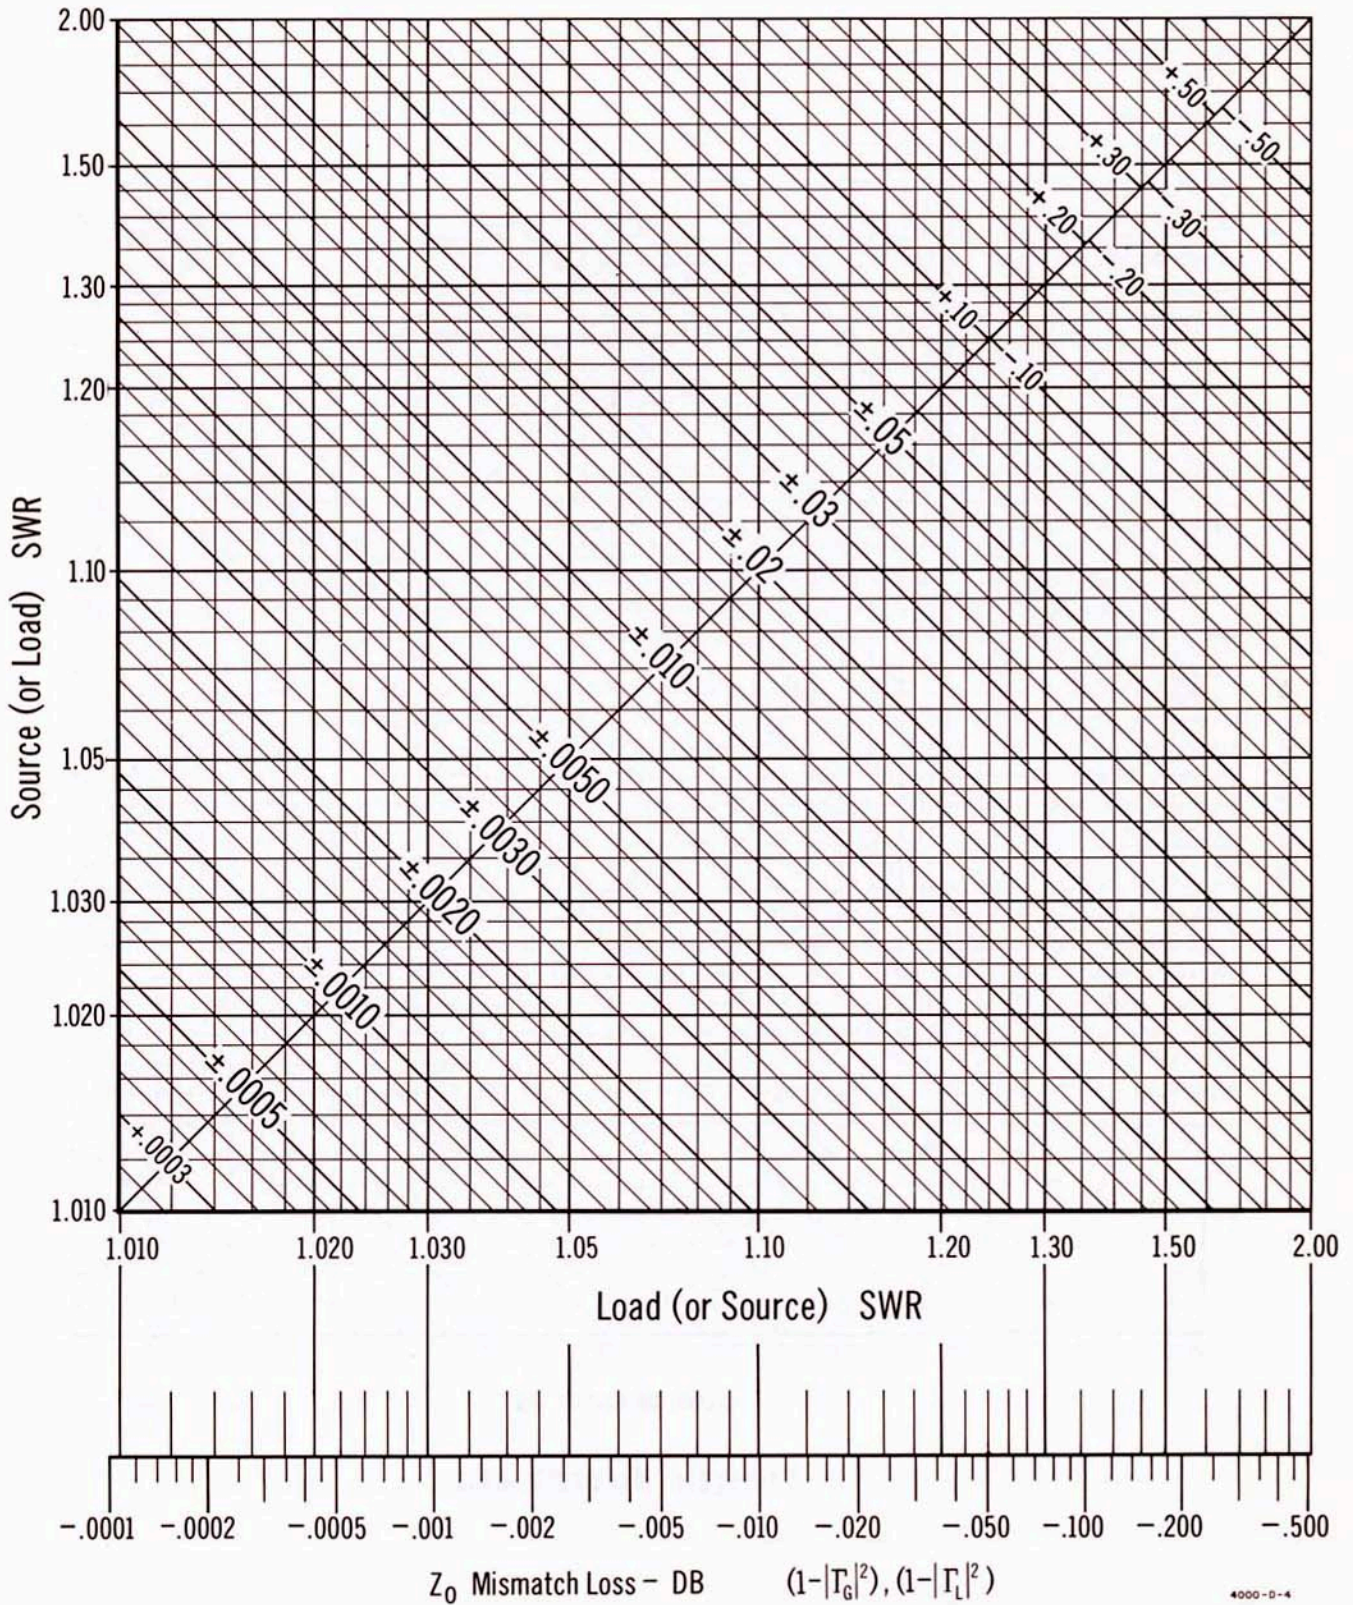

4000-D-4

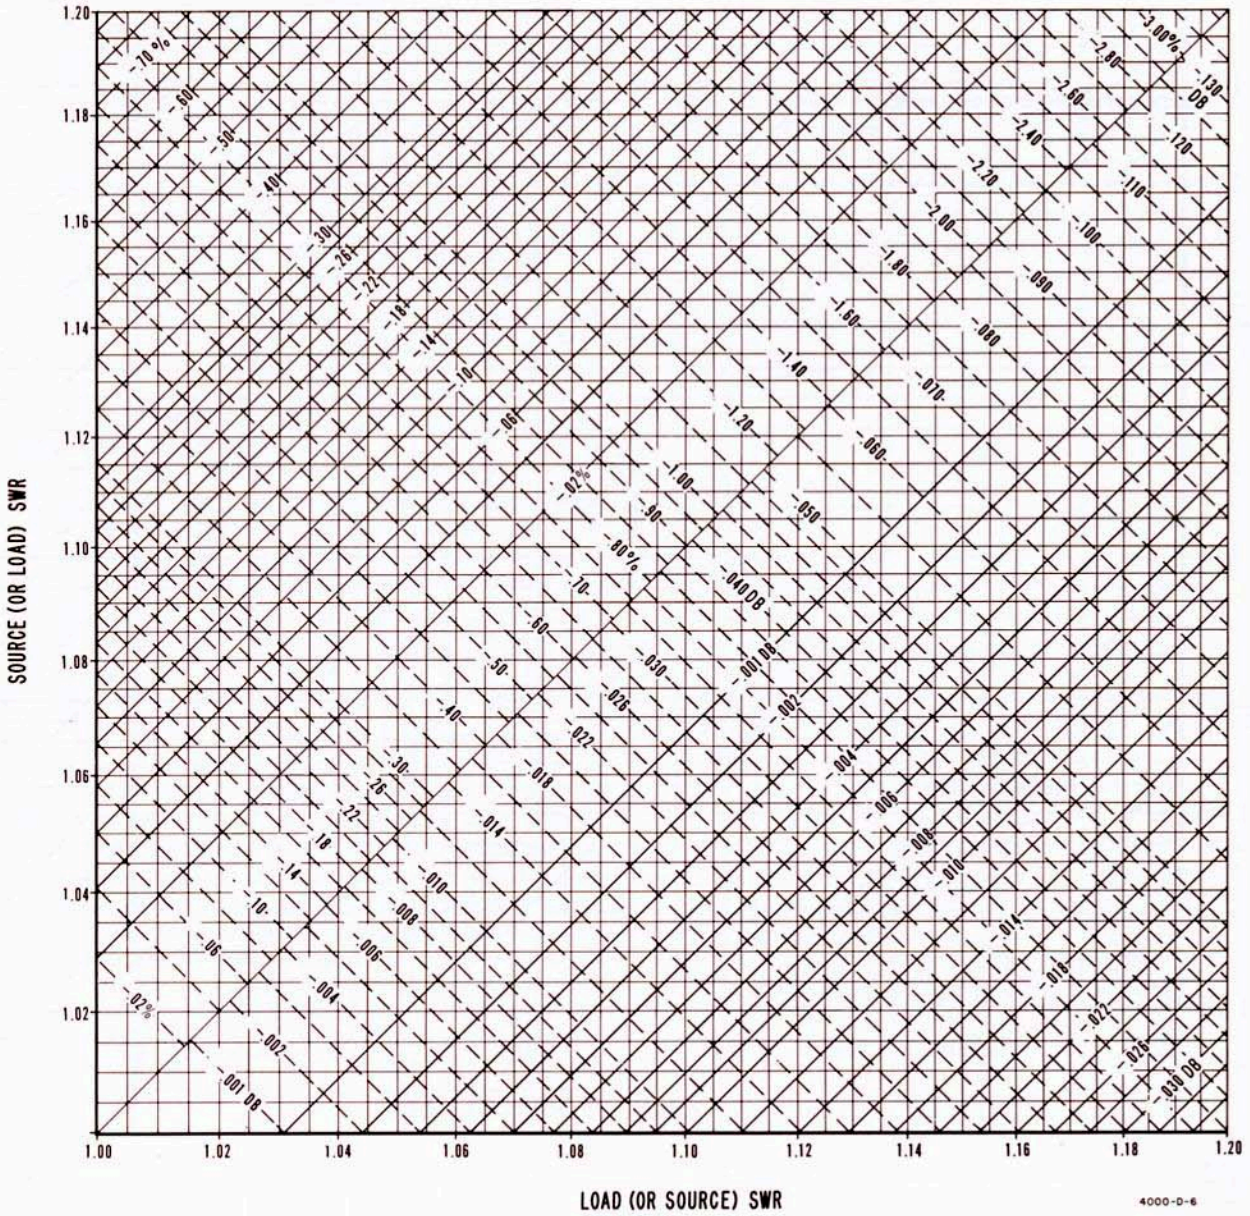

Conjugate Mismatch Loss

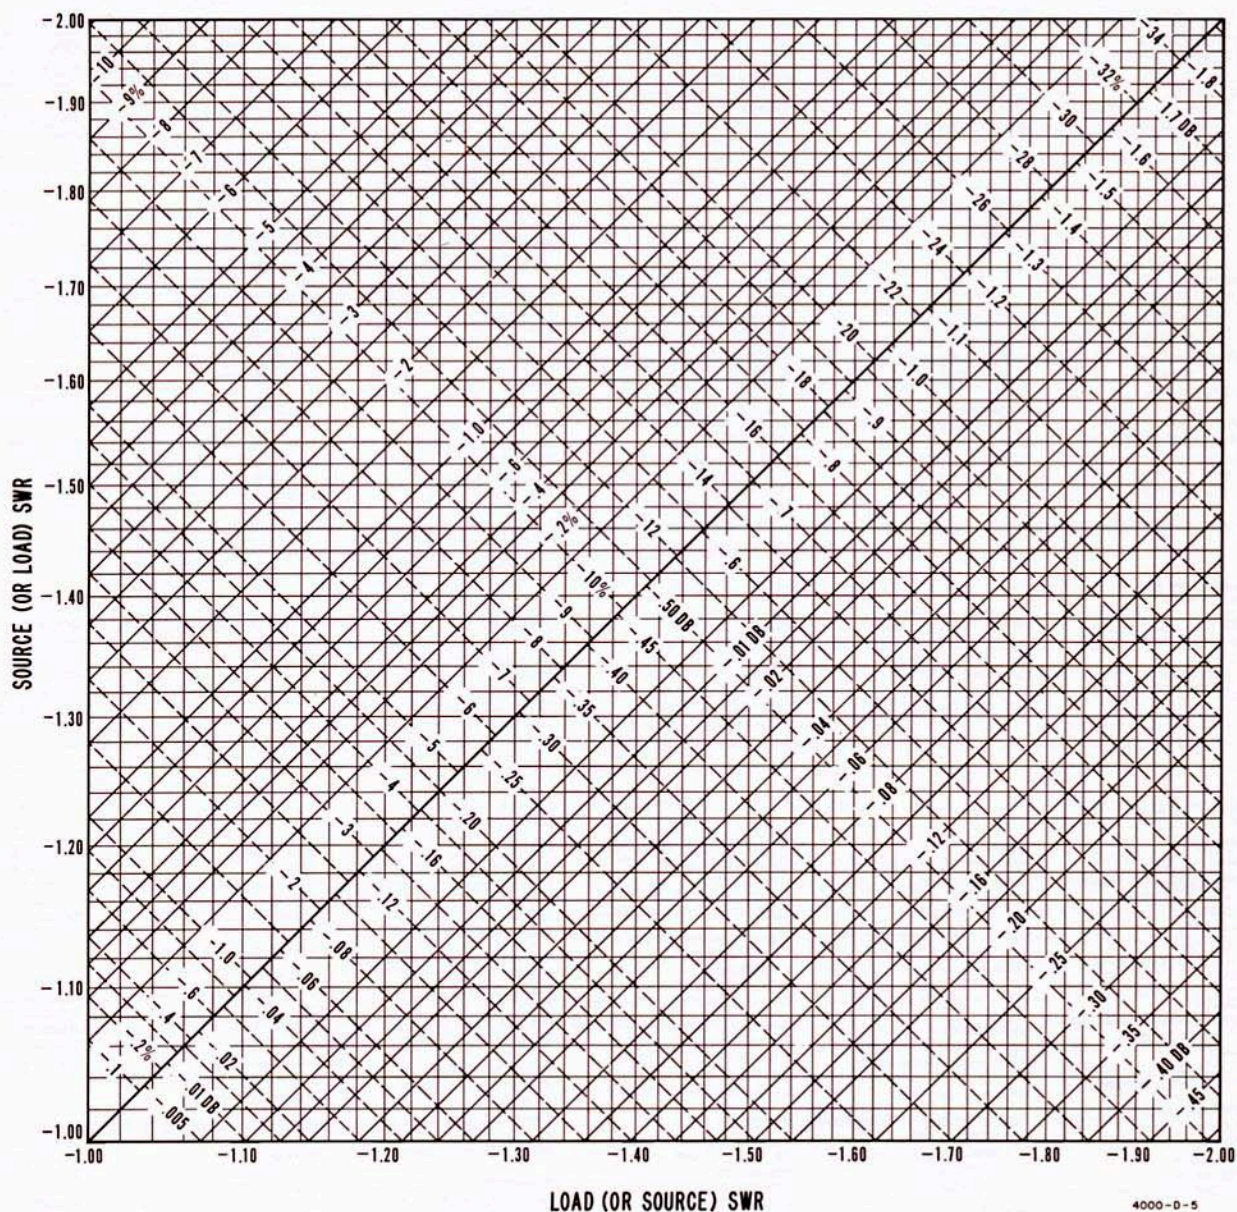

Conjugate Mismatch Loss

4000-D-5



SALES AND SERVICE OFFICES

UNITED STATES

ALABAMA

P.O. Box 4207
2003 Byrd Spring Road S.W.
Huntsville 35802
Tel: (205) 881-4591
TWX: 810-726-2204

ARIZONA

3009 North Scottsdale Road
Scottsdale 85251
Tel: (602) 945-7601
Tel: (602) 910-950-1282

232 South Tucson Boulevard
Tucson 85716
Tel: (602) 623-2564
TWX: 910-952-1162

CALIFORNIA

3939 Lankershim Boulevard
North Hollywood 91604
Tel: (213) 877-1282
TWX: 910-499-2170

1101 Embarcadero Road
Palo Alto 94303
Tel: (415) 327-6500
TWX: 910-373-1280

2591 Carlsbad Avenue
Sacramento 95821
Tel: (916) 482-1463
TWX: 910-367-2092

1055 Shafter Street
San Diego 92106
Tel: (714) 223-8103
TWX: 910-335-2000

COLORADO

7965 East Prentice
Englewood 80110
Tel: (303) 771-3455
TWX: 910-935-0705

CONNECTICUT

508 Tolland Street
East Hartford 06108
Tel: (203) 289-9394
TWX: 710-425-3416

111 East Avenue
Norwalk 06851
Tel: (203) 853-1251
TWX: 710-468-3750

DELAWARE

3941 Kennett Pike
Wilmington 19807
Tel: (302) 655-6161
TWX: 510-666-2214

FLORIDA

Suite 106
9999 N.E. 2nd Avenue
Miami Shores 33138
Tel: (305) 758-3626
TWX: 810-848-7262

P.O. Box 20007
Herndon Station 32814
621 Commonwealth Avenue
Orlando
Tel: (305) 841-3970
TWX: 810-850-0113

P.O. Box 8128
Madeira Beach 33708
410 150th Avenue
St. Petersburg
Tel: (813) 391-0211
TWX: 810-863-0366

GEORGIA

P.O. Box 28234
2340 Interstate Parkway
Atlanta 30328
Tel: (404) 436-6181
TWX: 810-766-4890

ILLINOIS

5500 Howard Street
Skokie 60076
Tel: (312) 677-0400
TWX: 910-223-3613

INDIANA

4002 Meadows Drive
Indianapolis 46205
Tel: (317) 546-4891
TWX: 810-341-3263

LOUISIANA

P.O. Box 856
1942 Williams Boulevard
Kenner 70062
Tel: (504) 721-6201
TWX: 810-955-5524

MARYLAND

6707 Whitestone Road
Baltimore 21207
Tel: (301) 944-5400
Tel: (301) 862-0850
P.O. Box 727
Twinbrook Station 20851
12303 Twinbrook Parkway
Rockville
Tel: (301) 427-7560
TWX: 810-828-9684

MASSACHUSETTS

Middlesex Turnpike
Burlington 01803
Tel: (617) 272-9000
TWX: 710-332-0382

MICHIGAN

24315 Northwestern Highway
Southfield 48075
Tel: (313) 353-9100
TWX: 810-232-1532

MINNESOTA

2459 University Avenue
St. Paul 55114
Tel: (612) 645-9461
TWX: 910-563-3734

MISSOURI

9208 Wyoming Place
Kansas City 64114
Tel: (816) 333-2445
TWX: 910-771-2087

2812 South Brentwood Blvd.
St. Louis 63144
Tel: (314) 644-0220
TWX: 910-760-1670

NEW JERSEY

391 Grand Avenue
Englewood 07631
Tel: (201) 567-3933
TWX: 710-991-9707

NEW MEXICO

P.O. Box 8366
Station C 87108
6501 Lomas Boulevard N.E.
Albuquerque
Tel: (505) 255-5586
TWX: 910-989-1665
156 Wyatt Drive
Las Cruces 88001
Tel: (505) 526-2485
TWX: 910-983-0550

NEW YORK

1702 Central Avenue
Albany 12205
Tel: (518) 869-8462

1219 Campville Road
Endicott 13760
Tel: (607) 754-0050
TWX: 510-252-0890

236 East 75th Street
New York 10021
Tel: (212) 879-2023
TWX: 710-581-4376

82 Washington Street
Poughkeepsie 12601
Tel: (914) 454-7330
TWX: 510-248-0012

39 Saginaw Drive
Rochester 14623
Tel: (716) 473-9500
TWX: 510-253-5981

1025 Northern Boulevard
Roslyn, Long Island 11576
Tel: (516) 869-8400
TWX: 510-223-0811

5858 East Molloy Road
Syracuse 13211
Tel: (315) 454-2486
TWX: 710-541-0482

NORTH CAROLINA

P.O. Box 5187
1923 North Main Street
High Point 27262
Tel: (919) 882-6873
TWX: 510-926-1516

OHIO

5579 Pearl Road
Cleveland 44129
Tel: (216) 884-9209
TWX: 810-421-8500

2460 South Dixie Drive
Dayton 45439
Tel: (513) 298-0351
TWX: 810-459-1925

OREGON

Westhills Mall, Suite 158
4475 S.W. Scholls Ferry Road
Portland 97225
Tel: (503) 292-9171
TWX: 910-464-6103

PENNSYLVANIA

2500 Moss Side Boulevard
Monroeville 15146
Tel: (412) 271-0724
TWX: 710-797-3650

144 Elizabeth Street
West Conshohocken 19428
Tel: (215) 248-1600, 828-6200
TWX: 510-660-8715

TEXAS

P.O. Box 7166
3605 Inwood Road
Dallas 75209
Tel: (214) 357-1881
TWX: 910-861-4081

P.O. Box 22813
4242 Richmond Avenue
Houston 77027
Tel: (713) 667-2407
TWX: 910-881-2645

GOVERNMENT CONTRACT OFFICE
225 Billy Mitchell Road
San Antonio 78226
Tel: (512) 434-4171
TWX: 910-871-1170

UTAH

2890 South Main Street
Salt Lake City 84115
Tel: (801) 486-8166
TWX: 910-925-5681

VIRGINIA

P.O. Box 6514
2111 Spencer Road
Richmond 23230
Tel: (703) 282-5451
TWX: 710-956-0157

WASHINGTON

11656 N.E. Eighth Street
Bellevue 98004
Tel: (206) 454-3971
TWX: 910-443-2303

FOR AREAS NOT LISTED, CONTACT: Hewlett-Packard; 1501 Page Mill Road; Palo Alto, California 94304; Tel: (415) 326-7000; TWX: 910-373-1267; Telex: 34-8461

CANADA

ALBERTA

10010 - 105th Street
Edmonton
Tel: (403) 424-0718
TWX: 610-831-2431

BRITISH COLUMBIA

Hewlett-Packard (Canada) Ltd.
2184 West Broadway
Vancouver
Tel: (604) 738-7520
TWX: 610-922-5050

NOVA SCOTIA

7001 Mumford Road
Suite 356
Halifax
Tel: (902) 455-0511
TWX: 610-271-4482

ONTARIO

Hewlett-Packard (Canada) Ltd.
880 Lady Ellen Place
Ottawa 3
Tel: (613) 722-4223
TWX: 610-562-1952

Hewlett-Packard (Canada) Ltd.

1415 Lawrence Avenue West
Toronto
Tel: (416) 249-9196
TWX: 610-492-2382

QUEBEC

Hewlett-Packard (Canada) Ltd.
275 Hymus Boulevard
Pointe Claire
Tel: (514) 697-4232
TWX: 610-422-3022
Telex: 01-2819

FOR AREAS NOT LISTED, CONTACT: Hewlett-Packard Inter-Americas; 1501 Page Mill Road; Palo Alto, Calif. 94304; Tel: (415) 326-7000; TWX: 910-373-1267; Telex: 034-8461; Cable: HEWPACK Palo Alto

EUROPE

AUSTRIA

Unilabor H.m.B.H.
Wissenschaftliche Instrumente
Rummelhardtgasse 6/3
P.O. Box 33
Vienna IX/71
Tel: 426 181
Cable: LABORINSTRUMENT
Vienna

BELGIUM

Hewlett-Packard Benelux S.A.
20-24 rue de l'Hôpital
Brussels
Tel: 11 22 20
Cable: PALOBEN Brussels

DENMARK

Tage Olsen A/S
Herrnegade 1
Copenhagen O
Tel: 29 48 00
Cable: TOCOPEN Copenhagen

FINLAND

INTO O/Y
Merituulinkatu 11
P.O. Box 10153
Helsinki 10
Tel: 61 133
Cable: INTO Helsinki

FRANCE

Hewlett-Packard France
2 rue Tête d'Or
Lyon, 6 - Rhône
Tel: 52 35 66
Hewlett-Packard France
150 Boulevard Massena
Paris 13e
Tel: 707 97 19
Cable: HEWPACK Paris

GERMANY

Hewlett-Packard Vertriebs-GmbH
Lietzenburger Strasse 30
1 Berlin W 30
Tel: 24 86 36

Hewlett-Packard Vertriebs-GmbH

Kostos Karayannis
703 Böblingen, Württemberg
Tel: 07031-6971
Cable: HEPAG Boblingen

Hewlett-Packard Vertriebs-GmbH

Achenbachstrasse 15
4 Düsseldorf 1
Tel: 68 52 58/59

Hewlett-Packard Vertriebs-GmbH

Kurhessenstrasse 95
6 Frankfurt 50
Tel: 52 00 36
Cable: HEWPACKSA Frankfurt

Hewlett-Packard Vertriebs-GmbH

Beim Strohhaus 26
2 Hamburg 1
Tel: 24 05 51/52
Cable: HEWPACKSA Hamburg

Hewlett-Packard Vertriebs-GmbH

Reginfriedstrasse 13
8 Munich 9
Tel: 69 51 21/22
Cable: HEWPACKSA Munich

GREECE

Kostos Karayannis
18, Ermou Street
Athens 126
Tel: 230 301
Cable: RAKAR Athens

IRELAND

Hewlett-Packard Ltd.
224 Bath Road
Slough, Bucks, England
Tel: Slough 28406-9, 29486-9
Cable: HEWPIE Slough

ITALY

Hewlett-Packard Italiana S.p.A.
Viale Lunigiana 46
Milan
Tel: 69 15 84
Cable: HEWPAKIT Milan

Hewlett-Packard Italiana S.p.A.

Palazzo Italia
Piazza Marconi 25
Rome - Eur
Tel: 591 2544
Cable: HEWPAKIT Rome

NETHERLANDS

Hewlett-Packard Benelux, N.V.
de Boelelaan 1043
Amsterdam, Z.2
Tel: 42 77 77
Cable: PALOBEN Amsterdam

NORWAY

Morgenstjerne & Co. A/S
Ingenioffirma
6 Wessels Gate
Oslo
Tel: 20 16 35
Cable: MOROF Oslo

PORTUGAL

Telectra
Rua Rodrigo da Fonseca 103
P.O. Box 2531
Lisbon 1
Tel: 68 60 72
Cable: TELECTRA Lisbon

SPAIN

Ataio Ingerieros
Urgel, 259
Barcelona, 11
Tel: 230-69-88
Ataio Ingenieros
Enrique Larreta 12
Madrid, 16
Tel: 235 43 44
Cable: TELEATAIO Madrid

SWEDEN

HP Instrument AB
Hagakergatan 7
Mölnal
Tel: 031 - 27 68 00
HP Instrument AB
Centralvägen 28
Selna
Tel: 08 - 83 08 30
Cable: MEASUREMENTS
Stockholm

SWITZERLAND

HEWPAK AG
Zurcherstrasse
8952 Schlieren
Zurich
Tel: (051) 98 18 21
Cable: HEWPAKAG Zurich

TURKEY

Telekom Engineering Bureau
P.O. Box 376 - Galata
Istanbul
Tel: 49 40 40
Cable: TELEMATION Istanbul

UNITED KINGDOM

Hewlett-Packard Ltd.
224 Bath Road
Slough, Bucks
Tel: Slough 28406-9, 29486-9
Cable: HEWPIE Slough

YUGOSLAVIA

Belram S.A.
83 avenue des Mimosas
Brussels 15, Belgium
Tel: 35 29 58
Cable: BELRAMEL Brussels

FOR AREAS NOT LISTED, CONTACT: Hewlett-Packard S.A.; 54 Route des Acacias; Geneva, Switzerland; Tel: (022) 42 81 50; Telex: 2.24.86; Cable: HEWPACKSA Geneva